

Submit 1 Copy To Appropriate District Office
District I - (575) 393-6161
1625 N. French Dr., Hobbs, NM 88240
District II - (575) 748-1283
811 S. First St., Artesia, NM 88210
District III - (505) 334-6178
1000 Rio Brazos Rd., Aztec, NM 87410
District IV - (505) 476-3460
1220 S. St. Francis Dr., Santa Fe, NM 87505

State of New Mexico
Energy, Minerals and Natural Resources

OIL CONSERVATION DIVISION
1220 South St. Francis Dr., Santa Fe, NM 87505

Form C-103
Revised July 18, 2013

WELL API NO. 30-025-41285
5. Indicate Type of Lease STATE ☐ FEE ☒
6. State Oil & Gas Lease No.
7. Lease Name or Unit Agreement Name Northeast Drinkard Unit (NEDU) [22503]
8. Well Number 651
9. OGRID Number 873
10. Pool name or Wildcat Eunice; B-T-D, North [22900]

SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-104) FOR PROPOSALS.)	
1. Type of Well: Oil Well ☒ Gas Well ☐ Other ☐	
2. Name of Operator Apache Corporation	
3. Address of Operator 303 Veterans Airpark Lane, Suite 1000 Midland, TX 79705	
4. Well Location Unit Letter <u>J</u> : <u>2525</u> feet from the <u>South</u> line and <u>2110</u> feet from the <u>East</u> line Section <u>15</u> Township <u>21S</u> Range <u>37E</u> NMPM County <u>Lea</u>	
11. Elevation (Show whether DR, RKB, RT, GR, etc.) 3410' GL	

12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:		SUBSEQUENT REPORT OF:	
PERFORM REMEDIAL WORK ☒	PLUG AND ABANDON ☐	REMEDIAL WORK ☐	ALTERING CASING ☐
TEMPORARILY ABANDON ☐	CHANGE PLANS ☐	COMMENCE DRILLING OPNS. ☐	P AND A ☐
PULL OR ALTER CASING ☐	MULTIPLE COMPL ☐	CASING/CEMENT JOB ☐	
DOWNHOLE COMMINGLE ☐			
CLOSED-LOOP SYSTEM ☐			
OTHER: ☐		OTHER: ☐	

13. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion.

Apache would like to add Drinkard pay and acidize, as follows:

1. POOH with rods and 2-7/8" production tubing.
2. PU workstring and RIH with bit and scraper. Clean out wellbore to PBTD at 6816'. POOH.
3. RIH with wireline and perforate Drinkard formation at 6425'-6675'. POOH.
4. RIH w/ work string and 5-1/2" treating packer. Acidize Blinbry-Tubb-Drinkard interval with 8,000 gallons 15% HCL acid. POOH.
5. RIH with 2-7/8" production tubing and set at ~6660'.
6. Return well to production.

Spud Date:

11/21/2013

Rig Release Date:

11/28/2013

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE

Reesa Fisher

TITLE Sr. Staff Reg Analyst

DATE 8/7/2019

Type or print name Reesa Fisher

E-mail address: Reesa.Fisher@apachecorp.com

PHONE: (432) 818-1062

For State Use Only

APPROVED BY:

Kerry Tate

TITLE


C. O. A

DATE


8-15-19

Conditions of Approval (if any):


Current Wellbore Diagram

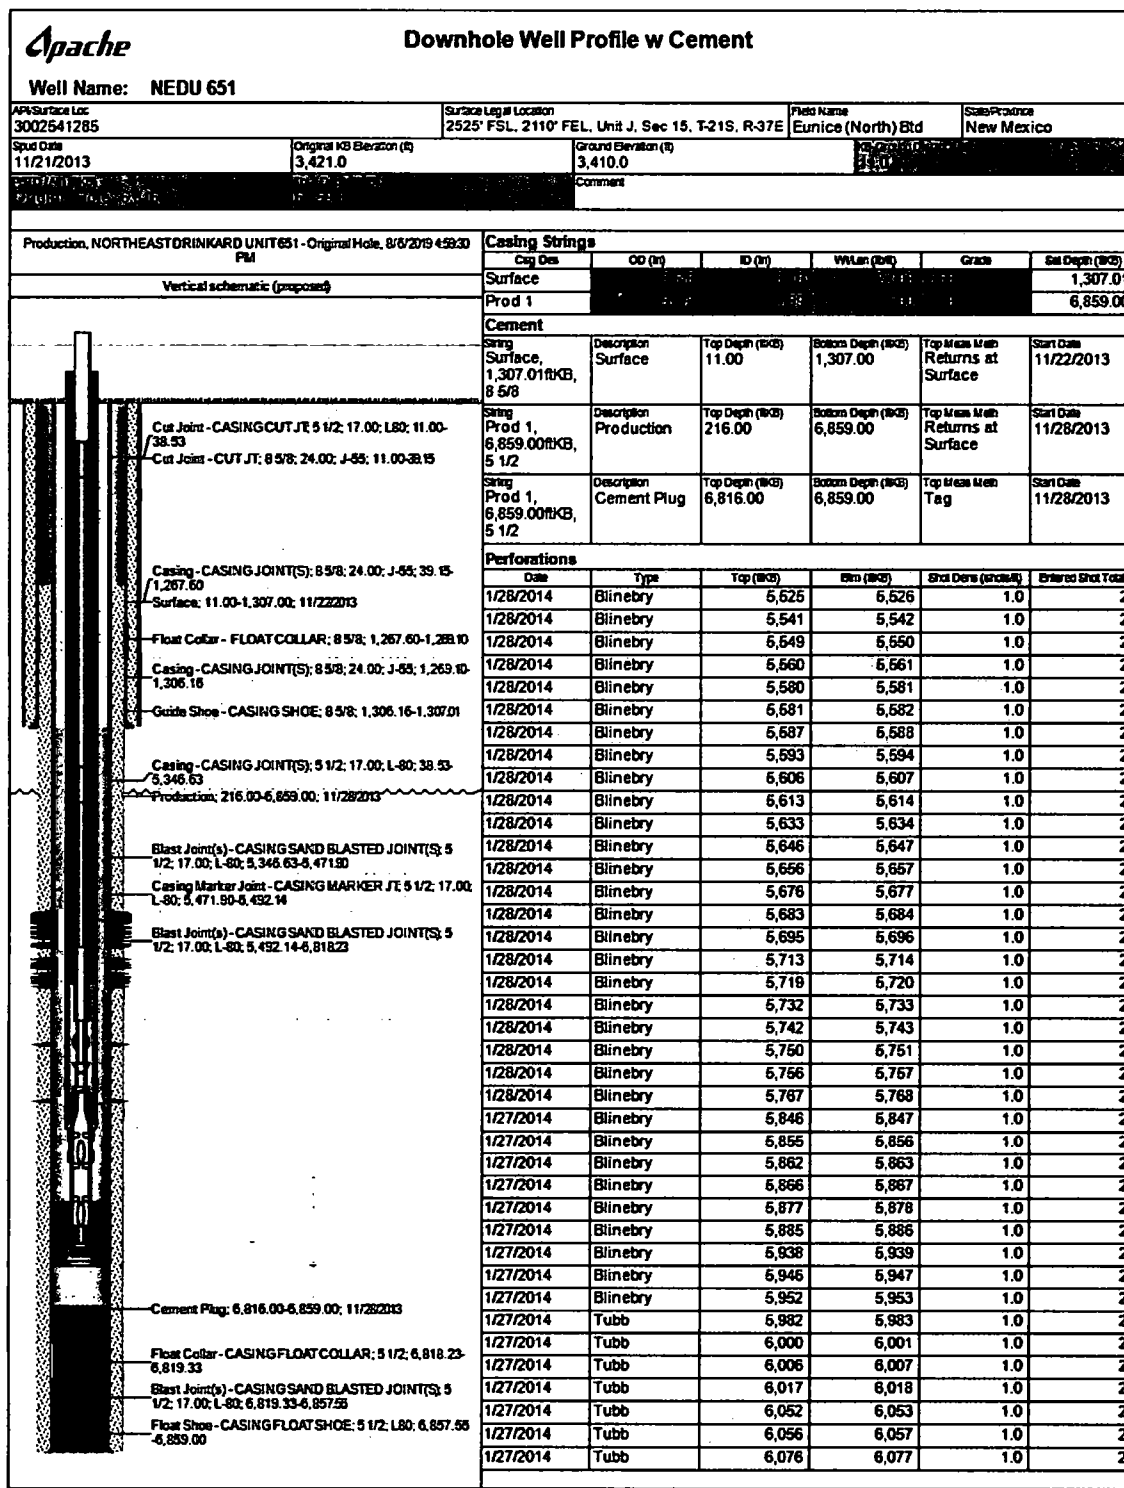


Current Wellbore Diagram

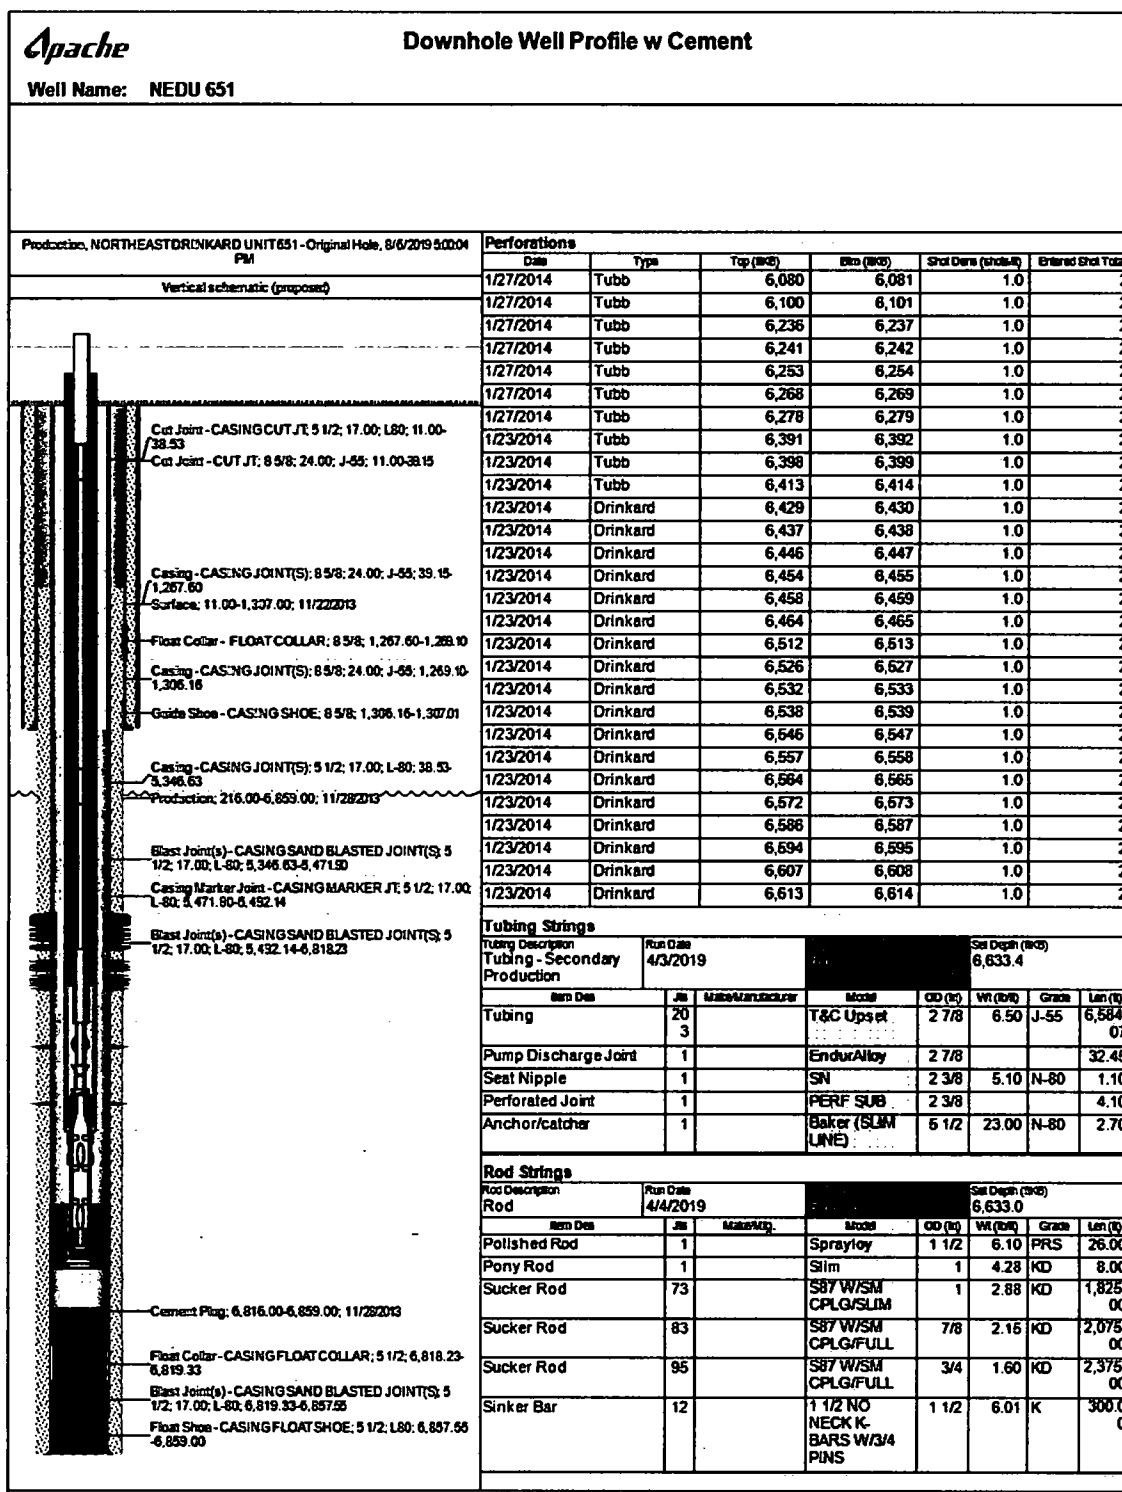


Current Wellbore Diagram

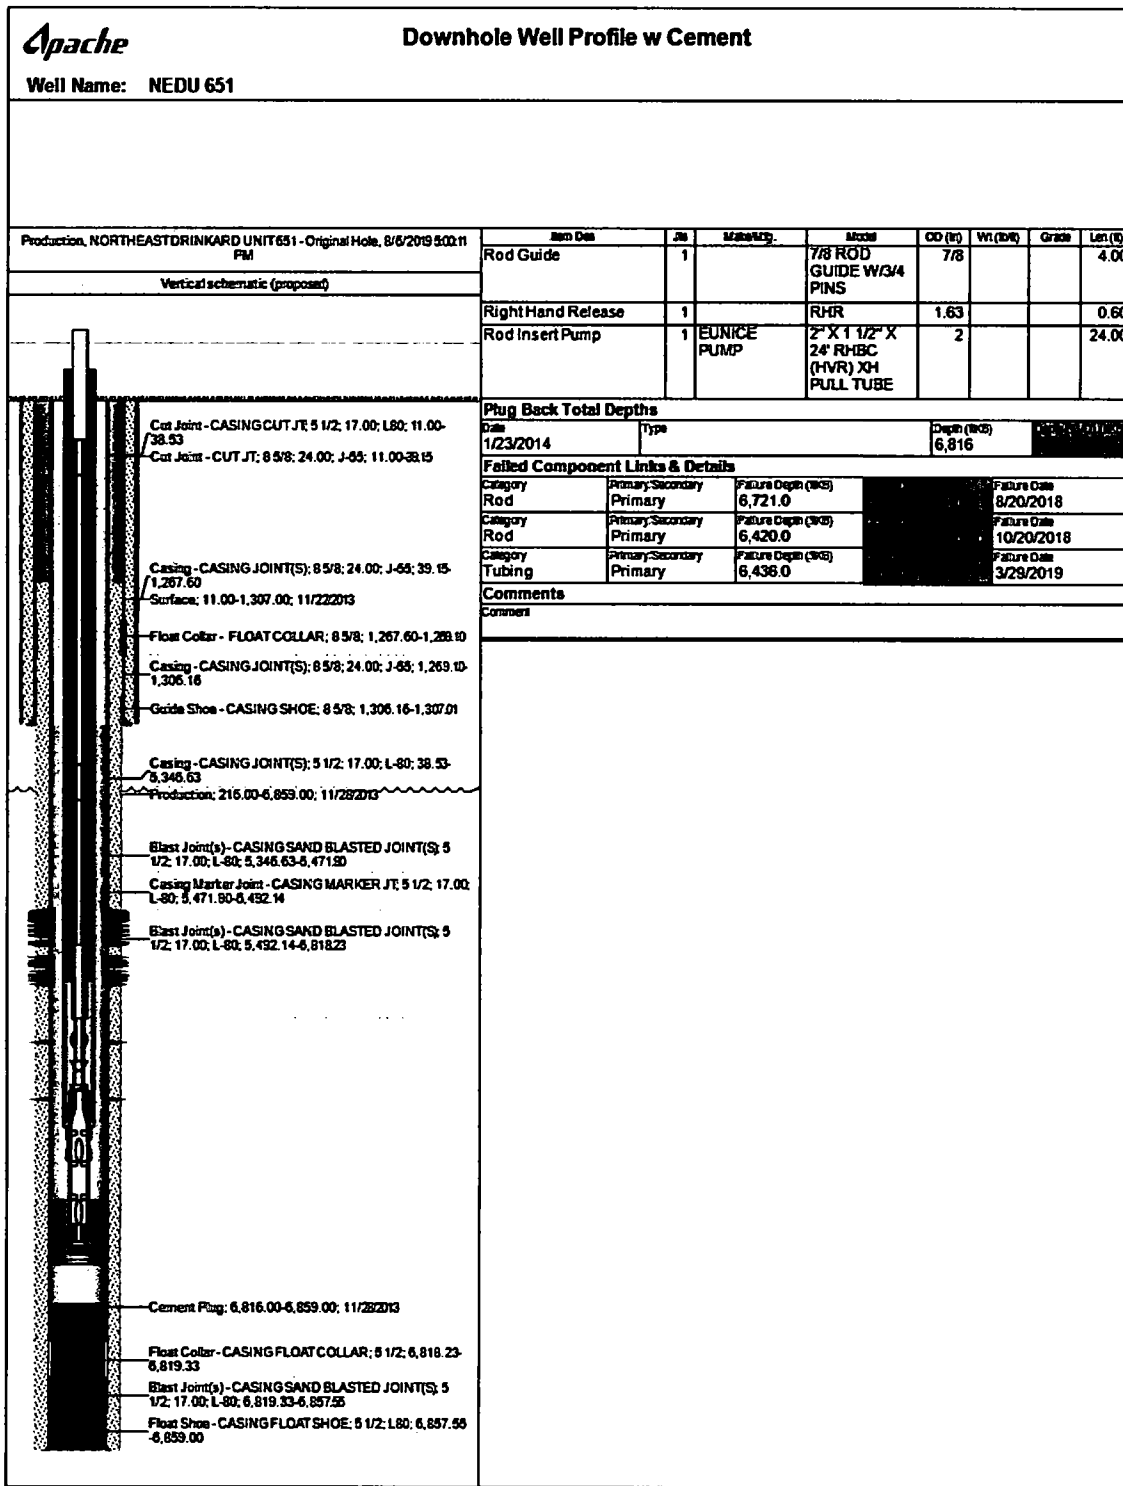


Proposed Wellbore Diagram (Proposed Changes in Yellow)

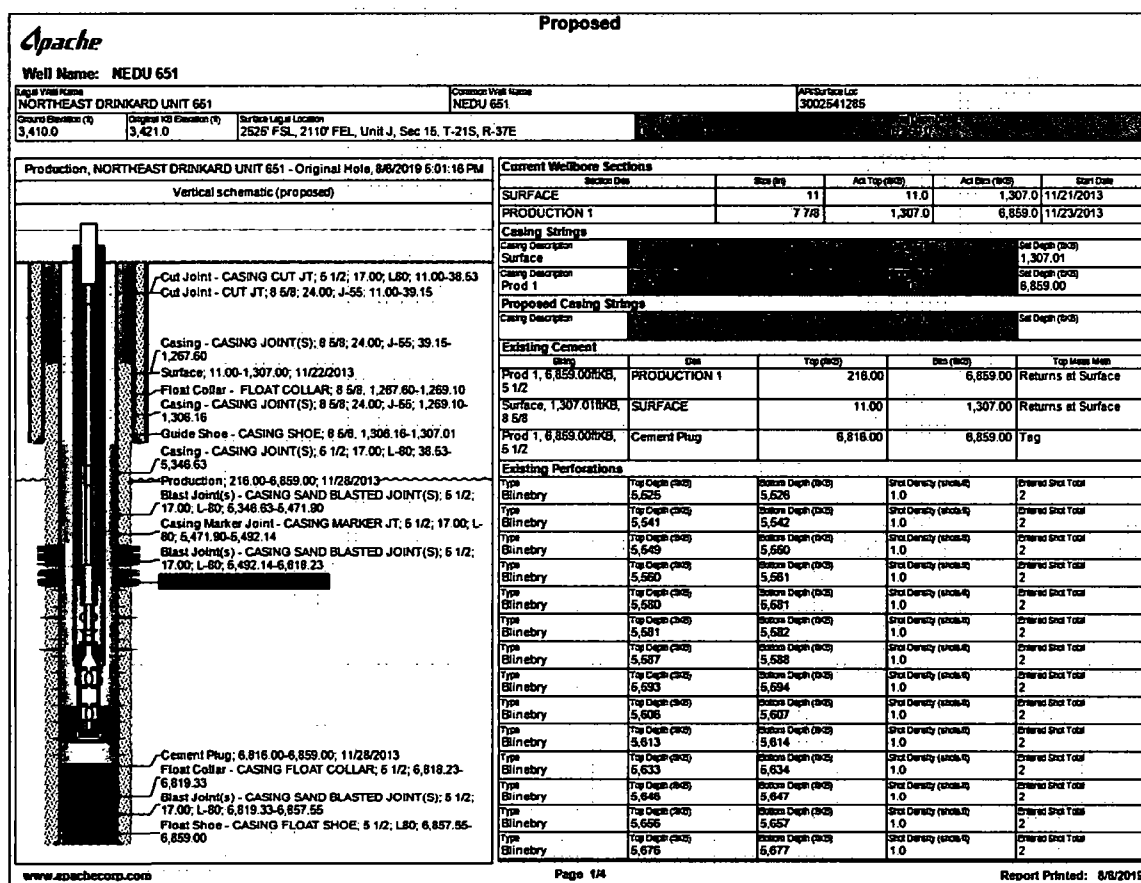

Proposed Wellbore Diagram (Proposed Changes in Yellow)

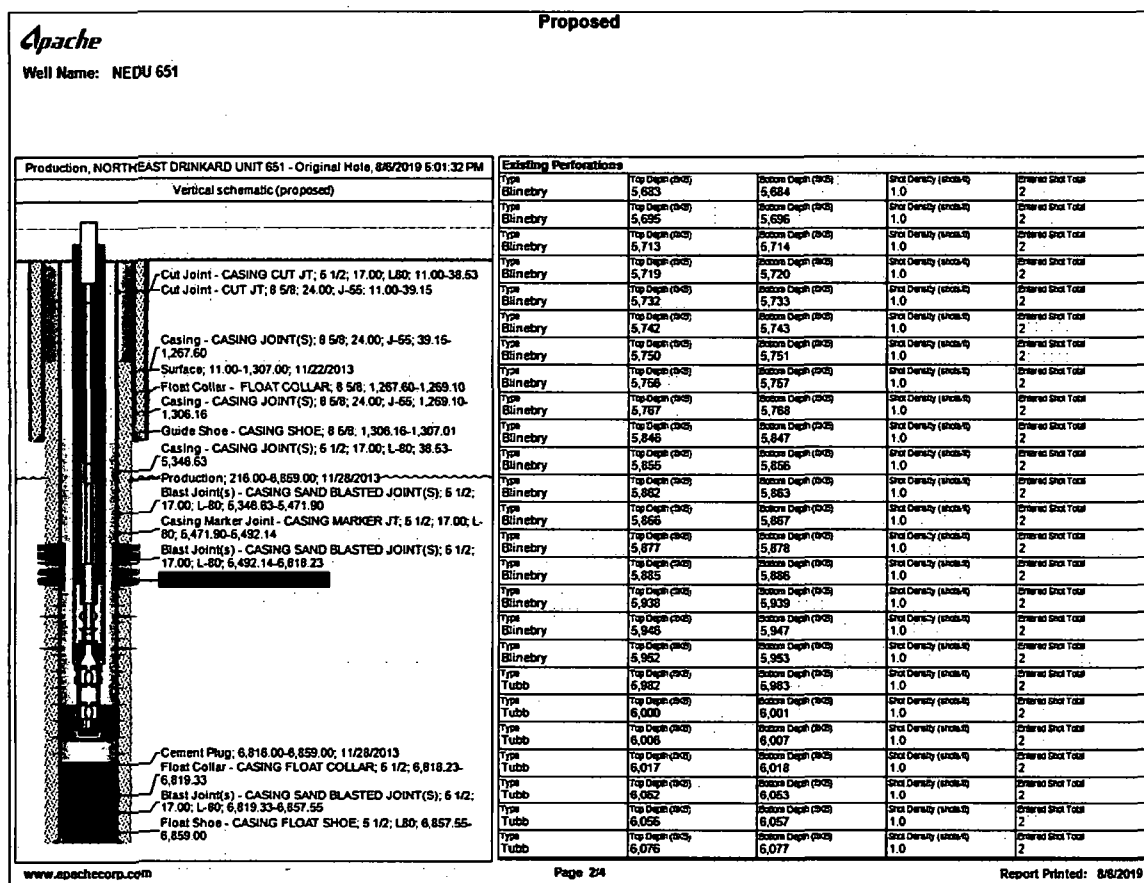

Proposed Wellbore Diagram (Proposed Changes in Yellow)

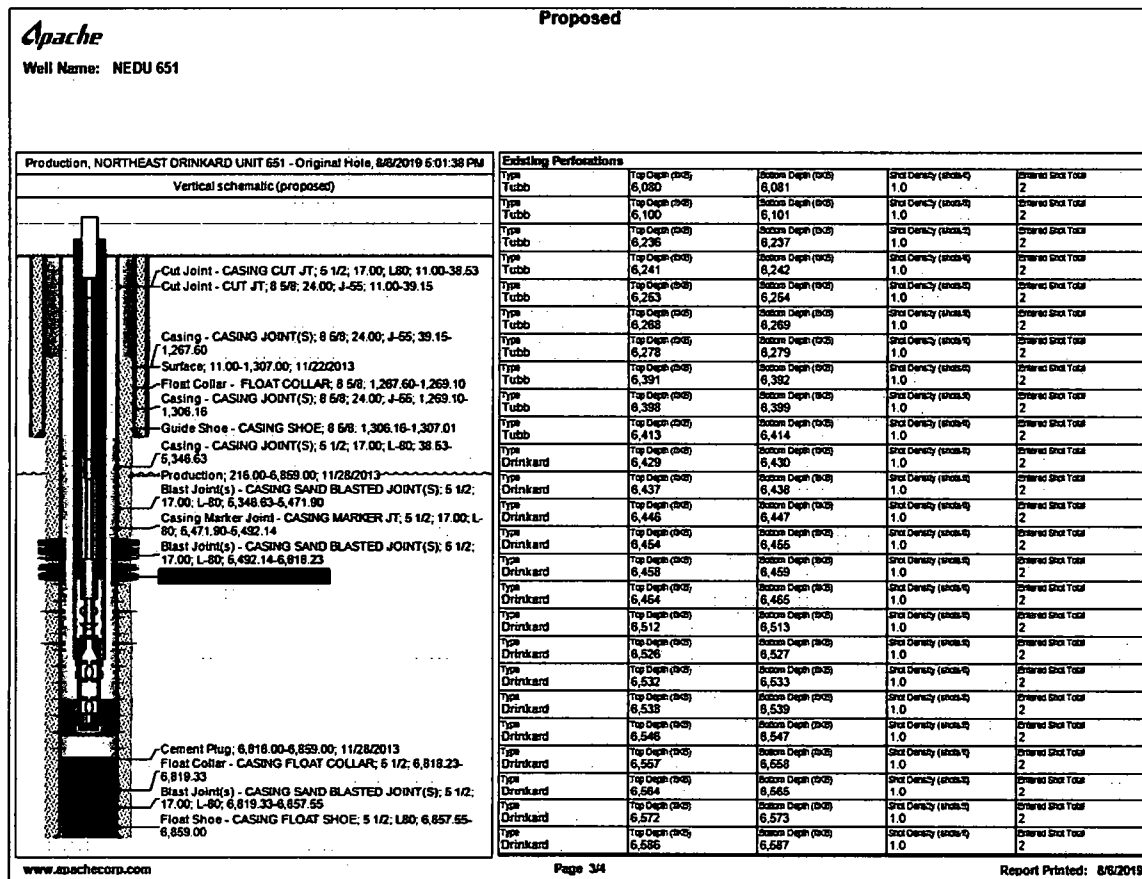

Proposed Wellbore Diagram (Proposed Changes in Yellow)

