Form 3160-5 (April 2004)

## UNITED STATES DEPARTMENT OF THE INTERIOR HOBBS BUREAU OF LAND MANAGEMENT

FORM APPROVED OM B No. 1004-0137 Expires: March 31, 2007

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to re-enter an abandoned well. Use Form 3160-3 (APD) for such proposals.

LC 031622-A

6. If Indian, Allottee or Tribe Name

5. Lease Serial No.

abandoned we	ell. Use Form 3160 - 3	(APD) for such pro	posals.	
SUBMIT IN TRI	PLICATE- Other ins	tructions on rever	se side.	7. If Unit or CA/Agreement, Name and/or No.
1. Type of Well  ✓ Oil Well  2. Name of Operator XTO Energy,	Gas Well Other		,	8. Well Name and No. Eunice Monument South Unit B #878
3a Address 200 N. Loraine, Ste. 800, Midla		3b. Phone No. (include 432-620-6740	area code)	9. API Well No. 30-025-04263  10. Field and Pool, or Exploratory Area
4. Location of Well (Footage, Sec., 7 1980' FNL & 660' FEL, UNIT 12. CHECK AF			E OF NOTICE, R	Eunice Monument Grayburg S/A  11. County or Parish, State  Lea Co., NM  EPORT, OR OTHER DATA
TYPE OF SUBMISSION		<del></del>	E OF ACTION	A 050 E
Notice of Intent  ✓ Subsequent Report  Final Abandonment Notice	Acidize Alter Casing Casing Repair Change Plans Convert to Injection	Deepen Fracture Treat New Construction Plug and Abandon Plug Back	Production (St Reclamation Recomplete Temporarily A Water Disposal	bandon Other O
13. Describe Proposed or Complete If the proposal is to deepen dire	ed Operation (clearly state all per ectionally or recomplete horizont	any, give subsurface location	is and incastice and a	my proposed work and suppositionate duration thereof: ue vertical depths of all pertinent markers and zones.

If the proposal is to deepen directionally or recomplete horizontally, give subsurface locations and measured and true vertical depths of all pertinent markers and zones. Attach the Bond under which the work will be performed or provide the Bond No. on file with BLM/BIA. Required subsequent reports shall be filed within 30 days following completion of the involved operations. If the operation results in a multiple completion or recompletion in a new interval, a Form 3160-4 shall be filed once testing has been completed. Final Abandonment Notices shall be filed only after all requirements, including reclamation, have been completed, and the operator has determined that the site is ready for final inspection.)

Ran MIT - Copy of Chart Attached

5/3/06 PU 5-1/2" 32-A tens pkr. RIH w/114 - 2-7/8", 6.5#, L-80, EUE, 8rd XTO WS. Set pkr @ 3,614'. RU Key pmp trk. Press up on CIBP to 500 psig, held ok. Rel pkr. SI BOP. Std pmpg & wtr surfaced instantly around WH. RD pmp trk. PUH to 1,645' & set pkr. RU pmp trk. Tstd below pkr to 500 psig, held ok. RD pmp trk. Rel pkr. PUH to 76' & set pkr. RU pmp trk. Press up on TCA to 500 psig, held ok. Rel pkr. PUH to 8' & set pkr. Press up on TCA to 500 psig, held ok. RU pmp trk to backside. Std pmpg & wtr showed around WH immediately. RD pmp trk. Rel pkr. POOH & LD pkr & WS. ND BOP. NU WH. RDMO PU. Well was left SI.


Extend TA Status (Original chart sent to OCD)

## SEE ATTACHED FUR CONDITIONS OF APPROVAL

6 ACCEPTED FOR RECORD
USE
Date NOV 2 8 2006
WESLEY W. INGRAM  D make to any department of the line
:

(Instructions on page 2)



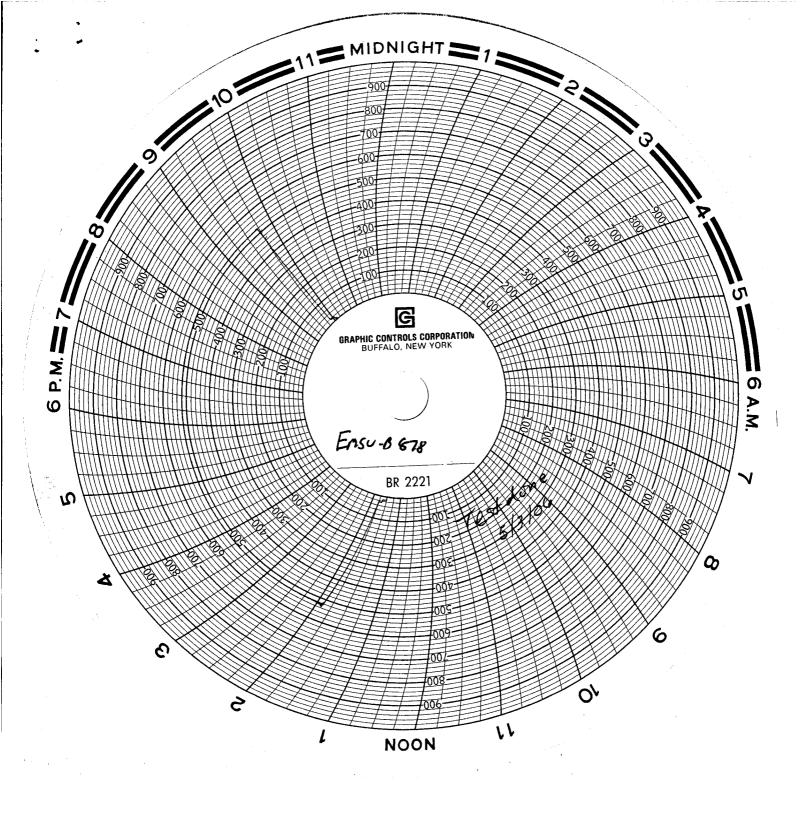

## BUREAU OF LAND MANAGEMENT Carlsbad Field Office 620 East Greene Street Carlsbad, New Mexico 88220 505-234-5972

## Temporary Abandonment of Wells on Federal Lands Conditions of Approval

A temporarily abandoned well is defined as a completion that is not capable of production in paying quantities but which may have value as a service well. Pursuant to 43 CFR 3162.3-4 (c), no well may be temporarily abandoned for more than 30 days without the prior approval of the authorized officer.

Temporary Abandonment (TA) status approval requires a successful mechanical or casing integrity test as follows:

- 1. A Notice of Intent (NOI) Sundry Notice (Form 3160-5) requesting approval to run a mechanical integrity test (MIT) or casing integrity test (CIT).
- 2. A description of the temporary abandonment procedure.
  - a. A bridge plug or packer must be installed as close to 50 feet above any open perforations or open hole as possible. If a cement plug is used, the top of the cement must be verified by tagging.
  - b. The wellbore must be filled with corrosion inhibited fluid and pressure tested to 500 psi. The casing shall be capable of holding this pressure for at least 30 minutes with a 10% allowable leakoff.
  - c. All downhole production/injection equipment (tubing, rods, etc.) shall be removed from the casing if they are not isolated by a packer.
  - d. A bradenhead test must be conducted. If the test indicates a problem exists, a remedial plan and time frame for remediation shall be submitted within ninety (90) days of the test.
  - e. Contact the appropriate BLM office at least 24 hours prior to the scheduled Casing Integrity Test. For wells in Eddy County, 505-234-5972; Lea County 505-393-3612.
- 3. Provides justification why the well should be temporarily abandoned rather than permanently plugged and abandoned and an estimated date that the well will be returned to beneficial use or plugged and abandoned.

Wells that successfully pass the casing integrity test will be approved for Temporary Abandonment (TA) status for a 12 month period provided that the operator:

- 1. Submits a subsequent Sundry Notice (Form 3160-5) requesting TA approval.
- 2. Describes the temporary abandonment procedure.
- 3. Attaches a clear copy or the original of the pressure test chart.

The TA status could be extended for an additional 12 month period without another casing integrity test provided there was no leak-off during the test and the test was witnessed by a BLM representative. The operator must submit a sundry notice requesting an extension of TA status 30 days prior to expiration of the previous approval and appropriate justification for extending the TA status is included.

If the well does not pass the casing integrity test, then the operator shall within 30 days submit to BLM for approval one of the following:

- 1. A procedure to repair the casing so that a TA approval can be granted.
- 2. A procedure to plug and abandon the well.