
Office	State of New Mexico Energy, Minerals and Natural Resources	Form C-103 May 27, 2004
District I 1625 N. French Dr., Hobbs, NM 88240	Diorgy, witherthis and retain resources	WELL API NO.
<u>District II</u> 1301 W. Grand Ave., Artesia, NM 88210	OIL CONSERVATION DIVISION	30-025-28818  5. Indicate Type of Lease
<u>District III</u> 1000 Rio Brazos Rd., Aztec, NM 87410	1220 South St. Francis Dr.	STATE FEE
District IV 1220 S. St. Francis Dr., Santa Fe, NM 87505	Santa Fe, NM 87505	6. State Oil & Gas Lease No.
SUNDRY NO (DO NOT USE THIS FORM FOR PROFI DIFFERENT RESERVOIR. USE "APP.	TICES AND REPORTS ON WELLS POSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A LICATION FOR PERMIT" (FORM C-101) FOR SUCH	7. Lease Name or Unit Agreement Name GENERAL G STATE
PROPOSALS.)  1. Type of Well: Oil Well	Gas Well Other	8. Well Number 2
2. Name of Operator CHEVRON MIDCONTINENT,	L.P.	9. OGRID Number 241333
<ul><li>3. Address of Operator</li><li>15 SMITH ROAD, MIDLAND, TEXAS 79705</li></ul>		10. Pool name or Wildcat EUNICE MONUMENT GRAYBURG S/A
4. Well Location		
	eet from the NORTH line and 450 feet from the WE	
Section 16	Township 20-S Range 37-E NN 11. Elevation (Show whether DR, RKB, RT, GR,	MPM County LEA
Pit or Below-grade Tank Application or Closure		
Pit type Depth to Ground	<del></del>	Distance from nearest surface water
Pit Liner Thickness:		Construction Material
12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data		
NOTICE OF INTENTION TO:  PERFORM REMEDIAL WORK   PLUG AND ABANDON    TEMPORARILY ABANDON   CHANGE PLANS   COMMENCE DRILLING OPNS.   P AND A    PULL OR ALTER CASING   TAMPORTYCOMPL   CASING/CEMENT JOB    OTHER: Abandonment Expires   OTHER: PB DID NOT PAN OUT -TA WELL		
13. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion.  10-23-06: MIRU. 10-24-06: TIH W/BIT & TAG @ 4700'. TIH W/PKR, WS. 10-25-06: TIH W/PKR TO 3501. TEST BELOW PKR TO 1000#. POOH TO 3219. TIH W/CMT RET TO 3219. SET CMT RET. STING OUT.CMT RET SET BUT CAME APART. 10-26-06: TIH W/CMT RET. SET RET @ 3188. PULL RET APART. TIH W/PKR & SET @ 3020. PUMP 100 BBLS FRESH WATER PAD. PUMP 50 SX LEAD SLURRY, D42, PUMP 100 SX TAIL SLURRY. PUMP 15 BBLS RUNNING SQUEEZE TO 2249. REV OUT 30 BBLS, 15 SX CMT. PULL UP TO 2702 W/PKR. REV OUT 30 BBLS. SET PKR. PRESSURE UP ON TBG TO 1000#. 10-27-06: UNSET PKR. TIH W/BIT & TAG @ 3020. DRILL 3030-3188. GOOD CMT, 1 <sup>ST</sup> CMT RET. DRILL 2 HRS ON RET. 10-30-06: DRILL 3020-3188. BIT STARTED TO TORQUE UP. R/U IN 6 RUNS W/MAGNET ON SAND LINE. PULL OUT JUNK. 10-31-06: TIH W/CONE BUSTER TO 3188. DRILL 3188-3190. MILL PLUGGED. TIH W/BIT TO 3190. DRILL 3190-3193. 11-01-06: DRILL 3193-3343, 3376, 3380. 11-02-06: TIH W/NEW BIT TO 3369'. 11-03-06: TIH TO 3332. DRILL 3302-3385'. 11-06-06: TIH W/SHOE & TAG @ 3301'. DRILL 3301-3360. 11-07-06: TIH W/SHOE & TAG @ 3360. DRILL TO 3376. 11-08-06: TIH W/SPEAR. 11-09-06: TIH W/TAPER TAP W/CUT-RITE ON BTM. PMP DN TBG CATCH ONTO FISH. TIH W/MILL TO 3300'. 11-10-06: TIH W/MILL TAG @ 3369. MILL TO 3371. PULL UP. TAG @ 3369. MILL TO 3300. PULL UP TO 3120. 11-13-06: TIH W/GAMMA GUN, CIBP, LOG 3300-2900. SET CIBP @ 3249'. WOULD NOT HOLD. THE W/CMT IN DUMP BAILER. 11-14-06: TIH W/JUNK BASKET. TAG @ 3218'. PRESSURE UP ON CSG TO 510#-30. MILL ABANDONED.		
of starting any proposed or recompletion.  10-23-06: MIRU. 10-24-06: T. TO 1000#. POOH TO 3219. TIH 10-26-06: TIH W/CMT RET. SE WATER PAD. PUMP 50 SX LEAREV OUT 30 BBLS, 15 SX CMT 10-27-06: UNSET PKR. TIH W/10-30-06: DRILL 3020-3188. BI 10-31-06: TIH W/CONE BUSTE 11-01-06: DRILL 3193-3343, 33 11-06-06: TIH W/SHOE & TAG 06: TIH W/SPEAR. 11-09-06: T 3300'. 11-10-06: TIH W/MILL. 11-13-06: TIH W/GAMMA GUNBAILER. 11-14-06: TIH W/JUJ	work). SEE RULE 1103. For Multiple Completions: TH W/BIT & TAG @ 4700'. TIH W/PKR, WS. 10-2 W/CMT RET TO 3219. SET CMT RET. STING OUT RET @ 3188. PULL RET APART. TIH W/PKR & AD SLURRY, D42, PUMP 100 SX TAIL SLURRY. IT. PULL UP TO 2702 W/PKR. REV OUT 30 BBLS. SBIT & TAG @ 3020. DRILL 3030-3188. GOOD CMT STARTED TO TORQUE UP. R/U IN 6 RUNS W/R TO 3188. DRILL 3188-3190. MILL PLUGGED. TO 176, 3380. 11-02-06: TIH W/NEW BIT TO 3369'. @ 3301'. DRILL 3301-3360. 11-07-06: TIH W/SHRIH W/TAPER TAP W/CUT-RITE ON BTM. PMP DE TAG @ 3369. MILL TO 3371. PULL UP. TAG @ 3N, CIBP, LOG 3300-2900. SET CIBP @ 3249'. WOUNK BASKET. TAG @ 3218'. PRESSURE UP ON C	Attach wellbore diagram of proposed completion  5-06: TIH W/PKR TO 3501. TEST BELOW PKR CCMT RET SET BUT CAME APART.  SET @ 3020. PUMP 100 BBLS FRESH PUMP 15 BBLS RUNNING SQUEEZE TO 2249.  SET PKR. PRESSURE UP ON TBG TO 1000#.  IT, 1 <sup>ST</sup> CMT RET. DRILL 2 HRS ON RET.  MAGNET ON SAND LINE. PULL OUT JUNK.  IH W/BIT TO 3190. DRILL 3190-3193.  11-03-06: TIH TO 3332. DRILL 3332-3385'.  OE & TAG @ 3360. DRILL TO 3376. 11-08-  ON TBG LATCH ONTO FISH. TIH W/MILL TO  369. MELL TO 320. PULL UP TO 3120.  LD NOT HOLD THE W/CMT IN DUMP  SG TO 510#-30 MBM. GOOD. TIH W/WS.
of starting any proposed or recompletion.  10-23-06: MIRU. 10-24-06: TITO 1000#. POOH TO 3219. TIH 10-26-06: TIH W/CMT RET. SE WATER PAD. PUMP 50 SX LEAREV OUT 30 BBLS, 15 SX CMT 10-27-06: UNSET PKR. TIH W/I0-30-06: DRILL 3020-3188. BI 10-31-06: TIH W/CONE BUSTE 11-01-06: DRILL 3193-3343, 33 11-06-06: TIH W/SHOE & TAG 06: TIH W/SPEAR. 11-09-06: TIH W/SPEAR. 11-09-06: TIH W/SPEAR. 11-09-06: TIH W/GAMMA GUN BAILER. 11-14-06: TIH W/JUI 11-15-06: INSTALL NEW WH. II hereby certify that the information	work). SEE RULE 1103. For Multiple Completions: TH W/BIT & TAG @ 4700'. TIH W/PKR, WS. 10-2 W/CMT RET TO 3219. SET CMT RET. STING OUT RET @ 3188. PULL RET APART. TIH W/PKR & AD SLURRY, D42, PUMP 100 SX TAIL SLURRY. IT. PULL UP TO 2702 W/PKR. REV OUT 30 BBLS. SBIT & TAG @ 3020. DRILL 3030-3188. GOOD CMT STARTED TO TORQUE UP. R/U IN 6 RUNS W/R TO 3188. DRILL 3188-3190. MILL PLUGGED. TO 176, 3380. 11-02-06: TIH W/NEW BIT TO 3369'. @ 3301'. DRILL 3301-3360. 11-07-06: TIH W/SHRIH W/TAPER TAP W/CUT-RITE ON BTM. PMP DE TAG @ 3369. MILL TO 3371. PULL UP. TAG @ 3N, CIBP, LOG 3300-2900. SET CIBP @ 3249'. WOUNK BASKET. TAG @ 3218'. PRESSURE UP ON C	Attach wellbore diagram of proposed completion  5-06: TIH W/PKR TO 3501. TEST BELOW PKR T.CMT RET SET BUT CAME APART.  SET @ 3020. PUMP 100 BBLS FRESH PUMP 15 BBLS RUNNING SQUEEZE TO 2249. SET PKR. PRESSURE UP ON TBG TO 1000#. IT, 1 <sup>ST</sup> CMT RET. DRILL 2 HRS ON RET. MAGNET ON SAND LINE. PULL OUT JUNK. IH W/BIT TO 3190. DRILL 3190-3193. 11-03-06: TIH TO 3332. DRILL 3332-3385'. OE & TAG @ 3360. DRILL TO 3376. 11-08- N TBG LATCH ONTO FISH. TIH W/MILL TO 369. MILL TO 320. PULL UP TO 3120. LD NOT HOLD THE WCMT IN DUMP SG TO 510#-30 MEN. GOOD. TIH W/WS. AL REPORT TEMPORARILY ABANDONED.
of starting any proposed or recompletion.  10-23-06: MIRU. 10-24-06: TITO 1000#. POOH TO 3219. TIH 10-26-06: TIH W/CMT RET. SE WATER PAD. PUMP 50 SX LEAREV OUT 30 BBLS, 15 SX CMT 10-27-06: UNSET PKR. TIH W/I0-30-06: DRILL 3020-3188. BI 10-31-06: TIH W/CONE BUSTE 11-01-06: DRILL 3193-3343, 33 11-06-06: TIH W/SHOE & TAG 06: TIH W/SPEAR. 11-09-06: TIH W/SPEAR. 11-09-06: TIH W/SPEAR. 11-09-06: TIH W/GAMMA GUN BAILER. 11-14-06: TIH W/JUI 11-15-06: INSTALL NEW WH. II hereby certify that the information	Work). SEE RULE 1103. For Multiple Completions:  "IH W/BIT & TAG @ 4700'. TIH W/PKR, WS. 10-2 W/CMT RET TO 3219. SET CMT RET. STING OUT T RET @ 3188. PULL RET APART. TIH W/PKR & AD SLURRY, D42, PUMP 100 SX TAIL SLURRY. IT T. PULL UP TO 2702 W/PKR. REV OUT 30 BBLS. SET BIT & TAG @ 3020. DRILL 3030-3188. GOOD CM T STARTED TO TORQUE UP. R/U IN 6 RUNS W/R TO 3188. DRILL 3188-3190. MILL PLUGGED. TO T-6, 3380. 11-02-06: TIH W/NEW BIT TO 3369'.  @ 3301'. DRILL 3301-3360. 11-07-06: TIH W/SH TIH W/TAPER TAP W/CUT-RITE ON BTM. PMP ET TAG @ 3369. MILL TO 3371. PULL UP. TAG @ 3 N, CIBP, LOG 3300-2900. SET CIBP @ 3249'. WOU NK BASKET. TAG @ 3218'. PRESSURE UP ON COUNTY IN THE SET OF THE	Attach wellbore diagram of proposed completion  5-06: TIH W/PKR TO 3501. TEST BELOW PKR T.CMT RET SET BUT CAME APART.  SET @ 3020. PUMP 100 BBLS FRESH PUMP 15 BBLS RUNNING SQUEEZE TO 2249. SET PKR. PRESSURE UP ON TBG TO 1000#. IT, 1 <sup>ST</sup> CMT RET. DRILL 2 HRS ON RET. MAGNET ON SAND LINE. PULL OUT JUNK. IH W/BIT TO 3190. DRILL 3190-3193. 11-03-06: TH TO 3332. DRILL 3332-3385'. OE & TAG @ 3360. DRILL TO 3376. 11-08- N TBG LATCH ONTO FISH. TIH W/MILL TO 369. MILL TO 320. PULL UP TO 3120. LD NOT HOLD THE W/CMT IN DUMP SG TO 510#-30 MEN. GOOD. TIH W/WS. AL REPORT TEMPORARILY ABANDONED.  Redge and belief. I further certify that any pit or below- tedge and belief. I further certify that any pit or below- tedge and belief. I further certify that any pit or below- tedge and belief. I further certify that any pit or below- tedge and belief. I further certify that any pit or below- tedge and belief. I further certify that any pit or below- tedge and belief. I further certify that any pit or below- tedge and belief. I further certify that any pit or below- tedge and belief. I further certify that any pit or below-
of starting any proposed or recompletion.  10-23-06: MIRU. 10-24-06: T. TO 1000#. POOH TO 3219. TIH 10-26-06: TIH W/CMT RET. SE WATER PAD. PUMP 50 SX LEAREV OUT 30 BBLS, 15 SX CMT 10-27-06: UNSET PKR. TIH W/10-30-06: DRILL 3020-3188. BI 10-31-06: TIH W/CONE BUSTE 11-01-06: DRILL 3193-3343, 33 11-06-06: TIH W/SHOE & TAG 06: TIH W/SPEAR. 11-09-06: T 3300'. 11-10-06: TIH W/MILL. 11-13-06: TIH W/GAMMA GUNBAILER. 11-14-06: TIH W/JUI 11-15-06: INSTALL NEW WH. II hereby certify that the information grade tank has been/will be constructed SIGNATURE	Work). SEE RULE 1103. For Multiple Completions:  "IH W/BIT & TAG @ 4700'. TIH W/PKR, WS. 10-2 W/CMT RET TO 3219. SET CMT RET. STING OUT T RET @ 3188. PULL RET APART. TIH W/PKR & AD SLURRY, D42, PUMP 100 SX TAIL SLURRY. IT T. PULL UP TO 2702 W/PKR. REV OUT 30 BBLS. SET BIT & TAG @ 3020. DRILL 3030-3188. GOOD CM T STARTED TO TORQUE UP. R/U IN 6 RUNS W/R TO 3188. DRILL 3188-3190. MILL PLUGGED. TO T-6, 3380. 11-02-06: TIH W/NEW BIT TO 3369'.  @ 3301'. DRILL 3301-3360. 11-07-06: TIH W/SH TIH W/TAPER TAP W/CUT-RITE ON BTM. PMP ET TAG @ 3369. MILL TO 3371. PULL UP. TAG @ 3 N, CIBP, LOG 3300-2900. SET CIBP @ 3249'. WOU NK BASKET. TAG @ 3218'. PRESSURE UP ON COUNTY IN THE SET OF THE	Attach wellbore diagram of proposed completion  5-06: TIH W/PKR TO 3501. TEST BELOW PKR T.CMT RET SET BUT CAME APART.  SET @ 3020. PUMP 100 BBLS FRESH PUMP 15 BBLS RUNNING SQUEEZE TO 2249. SET PKR. PRESSURE UP ON TBG TO 1000#. IT, 1 <sup>ST</sup> CMT RET. DRILL 2 HRS ON RET. MAGNET ON SAND LINE. PULL OUT JUNK. IH W/BIT TO 3190. DRILL 3190-3193. 11-03-06: TH TO 3332. DRILL 3332-3385'. OE & TAG @ 3360. DRILL TO 3376. 11-08- N TBG LATCH ONTO FISH. TIH W/MILL TO 369. MILL TO 320. PULL UP TO 3120. LD NOT HOLD THE W/CMT IN DUMP SG TO 510#-30 MEN. GOOD. TIH W/WS. AL REPORT TEMPORARILY ABANDONED.  Redge and belief. I further certify that any pit or below- tedge and belief. I further certify that any pit or below- tedge and belief. I further certify that any pit or below- tedge and belief. I further certify that any pit or below- tedge and belief. I further certify that any pit or below- tedge and belief. I further certify that any pit or below- tedge and belief. I further certify that any pit or below- tedge and belief. I further certify that any pit or below- tedge and belief. I further certify that any pit or below-
of starting any proposed or recompletion.  10-23-06: MIRU. 10-24-06: T. TO 1000#. POOH TO 3219. TIH 10-26-06: TIH W/CMT RET. SE WATER PAD. PUMP 50 SX LEAREV OUT 30 BBLS, 15 SX CMT 10-27-06: UNSET PKR. TIH W/10-30-06: DRILL 3020-3188. BI 10-31-06: TIH W/CONE BUSTE 11-01-06: DRILL 3193-3343, 33 11-06-06: TIH W/SHOE & TAG 06: TIH W/SPEAR. 11-09-06: T 3300'. 11-10-06: TIH W/MILL. 11-13-06: TIH W/GAMMA GUNBAILER. 11-14-06: TIH W/JUI 11-15-06: INSTALL NEW WH. III-15-06: INSTALL NEW WH. III-15-06: SIGNATURE SIGNATURE DENISE P. Type or print name	Work). SEE RULE 1103. For Multiple Completions:  "IH W/BIT & TAG @ 4700'. TIH W/PKR, WS. 10-2 W/CMT RET TO 3219. SET CMT RET. STING OUT T RET @ 3188. PULL RET APART. TIH W/PKR & AD SLURRY, D42, PUMP 100 SX TAIL SLURRY. IT T. PULL UP TO 2702 W/PKR. REV OUT 30 BBLS. SET BIT & TAG @ 3020. DRILL 3030-3188. GOOD CM T STARTED TO TORQUE UP. R/U IN 6 RUNS W/R TO 3188. DRILL 3188-3190. MILL PLUGGED. TO T-6, 3380. 11-02-06: TIH W/NEW BIT TO 3369'.  @ 3301'. DRILL 3301-3360. 11-07-06: TIH W/SH TIH W/TAPER TAP W/CUT-RITE ON BTM. PMP ET TAG @ 3369. MILL TO 3371. PULL UP. TAG @ 3 N, CIBP, LOG 3300-2900. SET CIBP @ 3249'. WOU NK BASKET. TAG @ 3218'. PRESSURE UP ON COUNTY IN THE SET OF THE	Attach wellbore diagram of proposed completion  5-06: TIH W/PKR TO 3501. TEST BELOW PKR C.CMT RET SET BUT CAME APART. SET @ 3020. PUMP 100 BBLS FRESH PUMP 15 BBLS RUNNING SQUEEZE TO 2249. SET PKR. PRESSURE UP ON TBG TO 1000#. SET, 1 <sup>ST</sup> CMT RET. DRILL 2 HRS ON RET. MAGNET ON SAND LINE. PULL OUT JUNK. SH W/BIT TO 3190. DRILL 3190-3193. 11-03-06: PIH TO 3332. DRILL 3332-3385'. OE & TAG @ 3360. DRILL TO 3376. 11-08- SON TBG LATCH ONTO FISH. TIH W/MILL TO 369. MEL TO 320. PULL UP TO 3120. LD NOT HOLD THE W/CMT IN DUMP SG TO 510#-30 MBL GOOD. TIH W/WS. AL REPORT TEMPORARILY ABANDONED.  Redge and belief. I further certify that any pit or below- tedge and belief. I further certify that any pit or below-

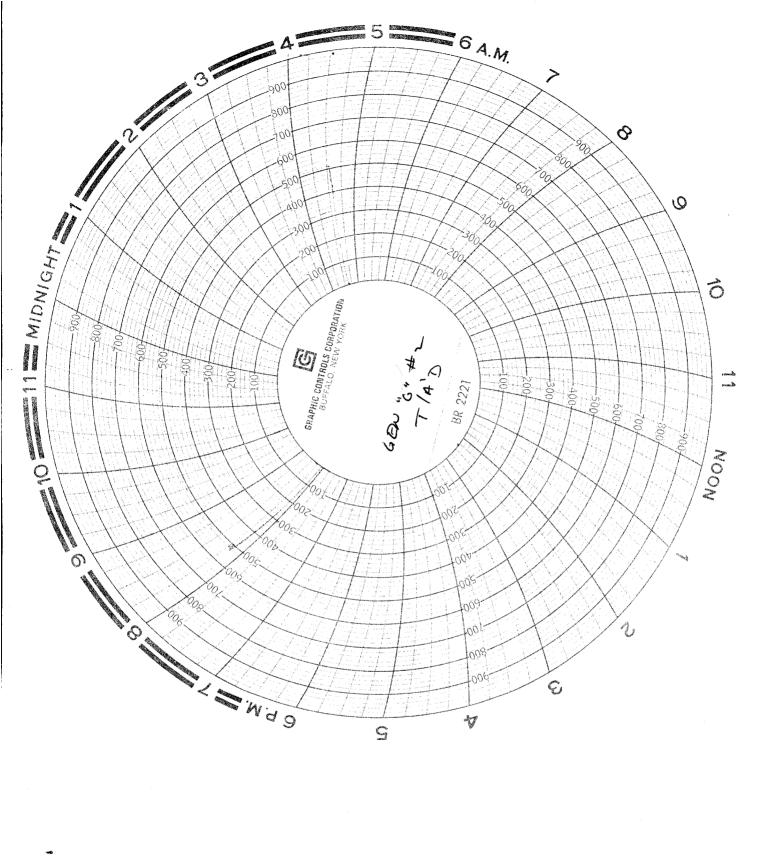

6 ENCERA 6 STATE 4.

11/4/06
8:30 Am
9:00 Am
9:00 Am
9:258
-CE335 @ 3245

.

•