

Submit 3 Copies
to Appropriate
District Office

State of New Mexico
Energy, Minerals & Natural Resources Department

Form C-103
Revised 1-1-89

DISTRICT I
1625 French Drive Hobbs, NM 88240

DISTRICT II
P. O. Drawer DD, Artesia, NM 88210

DISTRICT III
1000 Rio Brazos Rd., Aztec, NM 87410

OIL CONSERVATION DIVISION
P. O. Box 2088
Santa Fe, NM 7504-2088

WELL API NO. 30-025-28526
5. Indicate Type of Lease STATE <input type="checkbox"/> FEE <input checked="" type="checkbox"/>
6. State Oil & Gas Lease No.

SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR, USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)	
1 Type of Well: OIL <input checked="" type="checkbox"/> GAS <input type="checkbox"/> WELL <input type="checkbox"/> OTHER <input type="checkbox"/>	7. Lease Name or Unit Agreement Name Mescalero Ridge
2. Name of Operator The Wiser Oil Company	8. Well No. 8
3. Address of Operator P.O. Box 2568 Hobbs, New Mexico (505) 392-9797	9. Pool name or Wildcat Scharb Bone Spring
4. Well Location Unit Letter M : 660 Feet From The South Line and 660 Feet From The West Line Section 17 Township 19S Range 35E NMPM Lea County	
10. Elevation (Show whether DF, RKB, RT, GR, etc.) 3864.8' GR	

11. Check Appropriate Box to Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO		SUBSEQUENT REPORT OF:	
PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input checked="" type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>		CASING TEST AND CEMENT JOB <input type="checkbox"/>	
OTHER: <input type="checkbox"/>		OTHER: <input type="checkbox"/>	


12. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

Wiser request approval to plug and abandon the well by the procedure listed below.

Surface Casing: 13-3/8" set @ 400' w/cmt. circ. Int. Casing: 8-5/8" set @ 4100' cmt. circ. Prod. Casing : 5-1/2" set @ 10,200' cmt. circ.
Perfs: 5103'-5370', 8416'-38', 9366'-9400', 10,024'-9842'. CIBP's @ 8350', 9300', 9800'

1. Set CIBP @ 5050'. Spot 50' cmt. plug on CIBP.
2. Spot 25 sks. cement on CIBP.
3. Circulate abandonment mud.
4. Spot 100' cement plug @ 4110'. Tag plug.
5. Spot 100' cement plug @ 3150'-3050'. Tag plug.
6. Spot 100' plug 1900'-1800'. Tag plug.
7. Spot 100' cement plug @ 443'-343' 13/8" casing shoe. Tag plug.
8. Spot 60' cement plug @ surface.
9. Install dry hole marker.
10. Clean location

THE COMMISSION MUST BE NOTIFIED 24
HOURS PRIOR TO THE BEGINNING OF
PLUGGING OPERATIONS FOR THE C-103
TO BE APPROVED.

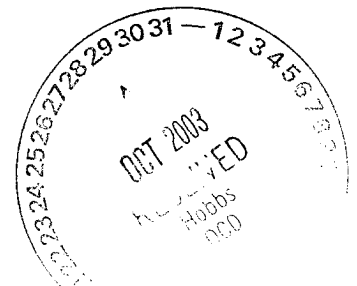

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE Mike Jones TITLE Production Superintendent DATE October 23, 2003
TYPE OR PRINT NAME Mike Jones TELEPHONE NO. (505) 392-9797

(This space for State Use)

APPROVED BY Harry W. Winkler FIELD REPRESENTATIVE II/STAFF MANAGER DATE OCT 29 2003
CONDITIONS OF APPROVAL, IF ANY: