		•
SEP To 7 norths to	UNITEDSTATES DEPARTMENT OF THE INTERIOR BUREAU OF LAND MANAGEMENT NOTICES AND REPORTS ON WELLS his form for proposals to drill or to re-enter an all. Lise Form 3160-3 (APD) for such proposals.	FORMAPPROVED SOM B No 1004-0137 Arch 31, 2007 5. Lease Serial No LC-057210 6. If Indian, Allottee or Tribe Name
SUBMIT IN TRI	PLICATE - Other instructions on reverse side.	7. If Unit or CA/Agreement, Name and/or No
I. Type of Well X Oil Well	Gas Well X Other	8. Well Name and No.
2. NameofOperator ConocoPhillips Company	(#217817)	MCA 9. API Well No.
Ba. Address B300 N. "A" Street, Bldg.	3b. PhoneNo.(include area code)	30-025- See Attached 10. Field and Pool, or Exploratory Area
	c., T., R., M., or Survey Description)	Maljamar; Grayburg-San Andres
Г-17-S, R-32-E & R-33-E		11. County or Parish, State Lea New Mexico
12. CHECK A	PPROPRIATE BOX(ES)TO INDICATE NATURE OF NOTICE, RE	EPORT, OR OTHER DATA
TYPEOF SUBMISSION	TYPEOF ACTION	ı
	Acidize Deepen Production (Star	t/Resume) Water Shut-Off

→ Water Disposal 13. Describe Proposed or Completed Operation (clearly state all pertinent details, including estimated starting date of any proposed work and approximate duration thereof If the proposal is to deepen directionally or recomplete horizontally, give subsurface locations and measured and true vertical depths of all pertinent markers and zones. Attach the Bond under which the work will be performed or provide the Bond No. on file with BLM/BIA. Required subsequent reports shall be filed within 30 days following completion of the involved operations. If the operation results in a multiple completion or recompletion in a new interval, a Form 3160-4 shall be filed once testing has been completed. Final Abandonment Notices shall be filed only after all requirements, including reclamation, have been completed, and the operator has determined that the site is ready for final inspection.)

FractureTreat

Plug Back

New Construction

Plugand Abandon

Reclamation

Recomplete

☐ Temporarily Abandon

...`EZ

Ref. Bond #ES0085

X Notice of Intent

Subsequent Report

Final Abandonment Notice

Referencing Master Drilling Plan on file with the BLM Carlsbad office dated 02/28/2008. ConocoPhillips wishes to submit the attached modifications to the cement program sections of the Master Drilling Planters

Pg. 7	8-5/8" Surf. Csg.	Lead Slurry Density	Change from	13.1 to 13.5 ppg
<u> </u>	144001			

AlterCasing

X Change Plans

Casing Repair

Convert to Injection

WOC time change from 24 to 18 hrs.

5-1/2" Prod. Csg. Tail Slurry Density Change from 16.4 to 14.8 ppg

5-1/2" Prod. Csg. Tail Slurry Density Change from 16.4 to 14.8 ppg 5-1/2" Prod. Csg. Tail Slurry Density Change from 16.4 to 14.8 ppg

Updated pages are attached for your convience to insert into the master document.

LES BABYAK PETROLEUM ENGINEER


Well Integrity

Your consideration given this request is greatly appreciated

1		्राच्याच्याचे प्रतास्त्र चार्चा । स्रोतास्त्र चार्चा स्त्राप्तास्त्र चार्चा स्त्राप्तास्त्र चार्चा स्त्राप्तास्त्र	aggraph enggranter	ers with many famous constraints.
Title	Regulatory Spec	ialist		- 95 . 7
Date	06/16/2008		!	
LOR	STATE OFFICE (JSE	1	
	Title	Date		
1	Office .	(7		
1	Date AL OR arrant or oct lease	Date 06/16/2008 L OR STATE OFFICE L Title	Date 06/16/2008 L OR STATE OFFICE USE Title Date Office Office	Date 06/16/2008 AL OR STATE OFFICE USE Title Date Arrant or oct lease Office

Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

(Instructions on page 2)

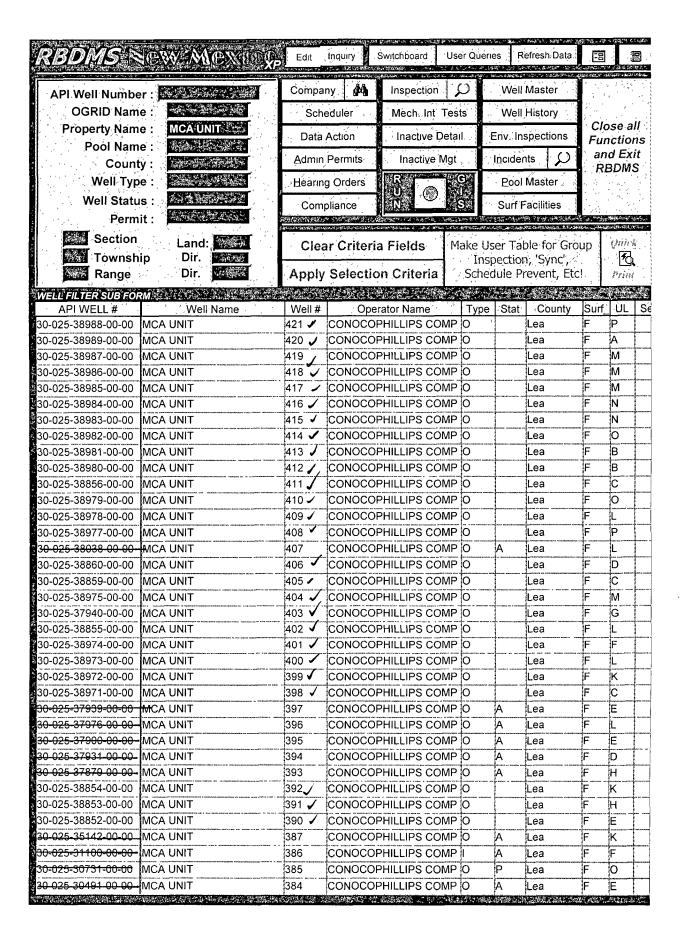

4. Proposed cementing program:

For the cementing program a range is presented for the number of sacks of cement and for the bottom, top, and length of the lead slurries and tail slurries due to the variation in formation tops and planned TD for the planned / contemplated wells for which this Master Drilling Plan is intended.

13-3/8" Conductor:

Cement to surface with ready mix or Class C Neat cement. TOC at surface.

8-5/8" Surface Casing:

The intention for the cementing program for the Surface Casing is to:

- Place the Tail Slurry from the casing shoe to 300' above the casing shoe,
- Bring the Lead Slurry to surface.

Spacer: 20 bbls Fresh Water

Lead Slurry								
Volume (sx) & Recipe & Excess %	Bottom (ft MD)	Top (ft MD)	Length (ft)	Density (ppg)	Yield (cuft/sx)	Mix Wtr gal/sx		ve Strengths y UCA Method
185 – 535 sx Class C + 6% bentonite + 2% CaCl2 + 0.125% Polyflake	325 to 940	Surface	325 to 940	13.5	1.96	10.69	Time 12 hrs 18 hrs 24 hrs	Strength 316 psi 417 psi 506 psi
Excess = 170%								

Tail Slurry								
Volume (sx) & Recipe & Excess %	Bottom (ft MD)	Top (ft MD)	Length (ft)	Density (ppg)	Yield (cuft/sx)	Mix Wtr gal/sx		ve Strengths by UCA Method
220 sx Class C + 2% CaCl2 + 0.125% Polyflake Excess = 100%	625' to 1240'	325' to 940'	300'	14.8	1.35	6.36	Time 3 hrs 9 hrs 12 hrs 24 hrs 48 hrs	Strength 50 psi 500 psi 793 psi 1266 psi 2183 psi

Displacement: Fresh Water

Note: In accordance with the Pecos District Conditions of Approval, we will Wait on Cement (WOC) for a period of not less than 18 hrs after placement of the cement on the Surface Casing in order to achieve at least 500 psi compressive strength in both the Lead Slurry and Tail Slurry cements prior to drilling out of the Surface Casing.

5-1/2" Production Casing Cementing Program - Single Stage Cementing Option:

The intention for the cementing program for the Production Casing – Single Stage Cementing Option is to:

- Place the Tail Slurry from the casing shoe to the top of the Grayburg formation,
- Bring the Lead Slurry to surface.

Spacer: 20 bbls Fresh Water with an option to follow this with 1000 gallons SuperFlush 102 and 20 additional bbls Fresh Water.

Volume (sx) & Recipe & Excess %	Bottom (ft MD)	Top (ft MD)	Length (ft)	Density (ppg)	Yield (cuft/sx)	Mix Wtr gal/sx	Stre @ 113	ressive ngths deg F by Method
433 – 644 sx 50% Class C 50% POZ + 10% bentonite + 8 lb/sx Salt + 0.2% Fluid Loss Additive + 0.125% Polyflake	3270' to 3940'	Surface	3270' to 3940'	11.8	2.55	14.88	Time 12 hrs 24 hrs 48 hrs 72 hrs	Strength 100 psi 200 psi 245 psi 310 psi

Volume (sx)	Bottom	Top	Length	Density	Yield	Mix Wtr	Compressive Strengths @ 115 deg F by UCA Method	
& Recipe & Excess %	(ft MD)	(ft MD)	(ft)	(ppg)	(cuft/sx)	gal/sx		
150 – 285 sx 65% Class C 35% POZ + 0.4% Dispersant	4155' to 4705'	3270' to 3940'	636' to 885'	14.8	0.98	3.76	Time 5 hrs 56 min 8 hrs 12 min 24 hrs 48 hrs 72 hrs	Strength 50 psi 500 psi 2806 psi 4690 psi 5661 psi

Displacement: 2% KCL water with approximately 250 ppm gluteraldehyde biocide.

5-1/2" Production Casing Cementing Program - Two-Stage Cementing Option (for Loss of Circulation Events):

We propose an option to use the two-stage cementing method for cementing the production casing if any loss of circulation events or heavy seepage is experienced while drilling the 7-7/8" hole. (see discussion in Item 3 above). The proposed two-stage cementing program would be as follows:

- Stage 1: Would place cement from the casing shoe to the stage tool.
- Stage 2: Would place cement from the stage tool to Surface.

Stage 1:

Spacer: 20 bbls Fresh Water with an option to follow this with 1000 gallons SuperFlush 102 and 20 additional bbls Fresh Water

Stage	1 -	l ead	Surry:	None
Otage		Loud	Curry.	140110

Volume (sx)	Bottom	Top	Length	Density	Yield	Mix Wtr	Compressive	
& Recipe & Excess %	(ft MD)	(ft MD)	(ft)	(ppg)	(cuft/sx)	gal/sx	@ 113 deg F by	
150 – 285 sx 65% Class C 35% POZ + 0.4% Dispersant	4155' to 4705'	3270' to 3940'	636' to 885'	14.8	0.98	3.76	Time 5 hrs 56 min 8 hrs 12 min 24 hrs 48 hrs 72 hrs	Strength 50 psi 500 psi 2806 psi 4690 psi 5661 psi

Displacement: A volume of Fresh Water equal to the capacity volume from the stage tool to the float collar, followed by brine based mud.

5-1/2" Production Casing Cementing Program – Two-Stage Cementing Option with Stage Tool and External Casing Packers (for Water Flow Events):

We propose an option to use the two-stage cementing method with a Stage Tool and two each External Casing Packers if any waterflow event is experienced while drilling the 7-7/8" hole as discussed above in Item 3. The proposed two-stage cementing program would be as follows:

- Stage 1: Would place cement from the casing shoe to the stage tool
- Stage 2: Would place cement from the stage tool to Surface.

Stage 1:

Spacer: 20 bbls Fresh Water with an option to follow this with 1000 gallons SuperFlush 102 and 20 additional bbls Fresh Water

Stage 1 - Lead Slurry								
Volume (sx) & Recipe & Excess %	Bottom (ft MD)	Top (ft MD)	Length (ft)	Density (ppg)	Yield (cuft/sx)	Mix Wtr gal/sx	Compressive S @ 113 deg F by Ci	rush Method
77 – 363 sx 50% Class C 50% POZ + 10% bentonite + 8 lb/sx Salt + 0.2% Fluid Loss Additive + 0.125% Polyflake	3270' to 3940'	1670' to 3440'	500' to 1600'	11.8	2.55	14.88	Time 12 hrs 24 hrs 48 hrs 72 hrs	Strength 100 psi 200 psi 245 psi 310 psi
	based or	n caliper if	available					

Stage 1 - Tail Slurry			·	***	· · · · · · · · · · · · · · · · · · ·			
Volume (sx) & Recipe & Excess %	Bottom (ft MD)	Top (ft MD)	Length (ft)	Density (ppg)	Yield (cuft/sx)	Mix Wtr gal/sx	Compressive @ 113 deg F by	
150 – 285 sx 65% Class C 35% POZ + 0.4% Dispersant	4155' to 4705'	3270' to 3940'	636' to 885'	14.8	0.98	3.76	Time 5 hrs 56 min 8 hrs 12 min 24 hrs 48 hrs 72 hrs	Strength 50 psi 500 psi 2806 psi 4690 psi 5661 psi
Excess = 26% - 83% b	ased on c	aliper if a	vailable					

Displacement: A volume of Fresh Water equal to the capacity volume from the stage tool to the float collar, followed by brine based mud.