'A			
of the Comment of the	UNITEDSTATES SEPARTMENT OF THE INTERIO	O - 1 16 1 14	FORMAPPROVED SOM B No 1004-0137 HOBB Expires: March 31, 2007
	BUREAU OF LAND MANAGEMENT		5. Lease Serial No.
SUNDBY	NOTICES AND REPORTS		LC-057210
SEP To 7 not USB th	nis form for proposals to drill or	to re-enter an	6. If Indian, Allottee or Tribe Name
a pandoned w	ell. Use Form 3160-3 (APD) for	such proposals.	
SUBMIT IN TRI	IPLICATE - Other instructions of	on reverse side.	7. If Unit or CA/Agreement, Name and/or No
1. Type of Well X Oil Well	Gas Well X Other	1.70	
			8. Well Name and No.
2. Name of Operator Conoco Phillips Company	/ (#217817)	,	MCA 9. API Well No.
3a. Address		No.(include area code)	30-025- Soc AHach
3300 N. "A" Street, Bldg.)688-6884	10. Field and Pool, or Exploratory Area
4. Location of Well (Footage, Se	c., T., R., M., or Survey Description)		Maljamar; Grayburg-San Andres
T-17-S, R-32-E & R-33-E		ĺ	11. County or Parish, State
•			Lea
			New Mexico
12. CHECK AF	PPROPRIATE BOX(ES)TO INDICATE	E NATURE OF NOTICE, RE	EPORT, OR OTHER DATA
TYPE OF SUBMISSION		TYPE OF ACTION	1
	Acidize Deepen	Production (Star	t/Resume) Water Shut-Off
X Notice of Intent	AlterCasing Fracture		Well Integrity
Subsequent Report	Casing Repair New Con	struction Recomplete	Other
Subsequent Report	X Change Plans Plugand		
Final Abandonment Notice	Convert to Injection PlugBack		
If the proposal is to deepen dire Attach the Bond under which the following completion of the inv	ectionally or recomplete horizontally, give subsur he work will be performed or provide the Bond I colved operations. If the operation results in a mu al Abandonment Notices shall be filed only after	face locations and measured and tru No. on file with BLM/BIA. Requirulation in Attitute the state of the sta	ny proposed work and approximate duration thereof the vertical depths of all pertinent markers and zones. The vertical depths of all pertinent markers are vertically depths of all pertinent markers and zones. The vertical depths of all pertinent markers are vertically depths of all pertinent markers and zones. The vertical depths of all pertinent markers are vertically depths of all pertinent markers and zones. The vertical depths of all pertinent markers are vertically depths of
Ref. Bond #ES0085			1
submit the attached mod	ing Plan on file with the BLM Carl lifications to the cement program	sections of the Master D	2008. ConocoPhillips wishes to Drilling Plan:
Pg. 7 WOC time chan Pg. 8 5-1/2" Prod. Csg	. Lead Slurry Density Change from ge from 24 to 18 hrs. g. Tail Slurry Density Change fron	n 16.4 to 14.8 ppg	APPROVED
Pg. 9 5-1/2" Prod. Csg Pg. 11 5-1/2" Prod. Csg	g. Tail Slurry Density Change fron g. Tail Slurry Density Change fron	n 16.4 to 14.8 ppg n 16.4 to 14.8 ppg	SEP 2 2008
Updated pages are attac	hed for your convience to insert i	nto the master documen	1.
Your consideration given	this request is greatly appreciate	ed.	LES BABYAK PETROLEUM ENGINEER
14. I hereby certify that the foreg			Control of the Contro
Name (Printed/Typed) Celeste G. Dale		Title Boardeten On in 1	A LONG TO THE CONTROL NAME OF THE PARTY OF T
	2	Title Regulatory Speci	Idiist / Ann Ann Ann Ann Ann Ann Ann Ann Ann A
Signature	Ed Mal	Date 06/16/2008	1

14. I hereby certify that the foregoing is true and correct
Name (Printed/Typed)
Celeste G. Dale

Title Regulatory Specialist

Title Regulatory Specialist


Date 06/16/2008

THIS SPACE FOR FEDERAL OR STATE OFFICE USE

Approved by
Conditions of approval, if any, are attached. Approval of this notice does not warrant or certify that the applicant holds legal or equitable title to those rights in the subject lease which would entitle the applicant to conduct operations thereon.

Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

(Instructions on page 2)

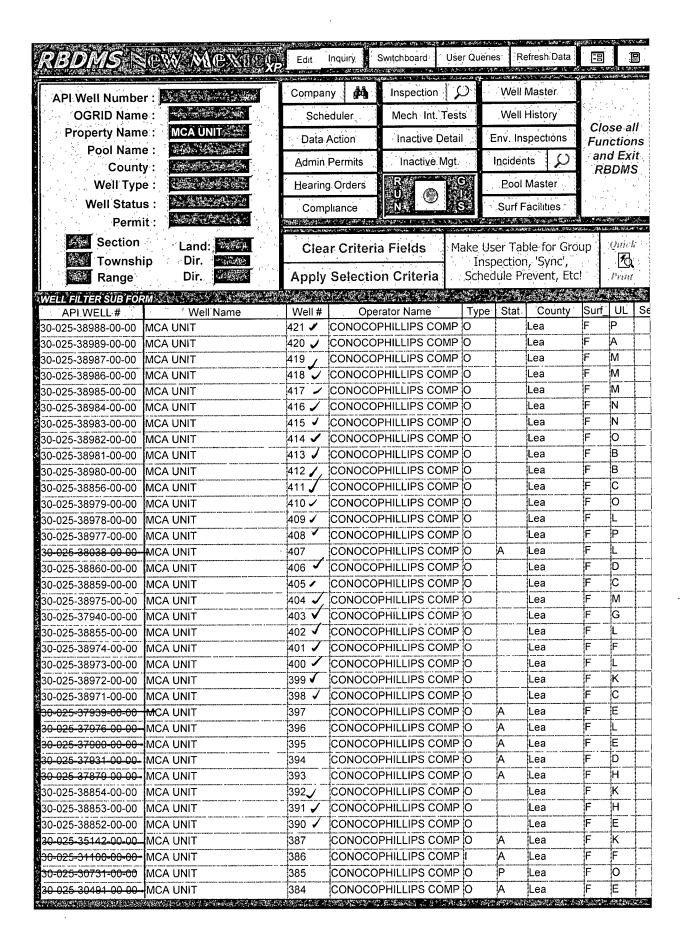

4. Proposed cementing program:

For the cementing program a range is presented for the number of sacks of cement and for the bottom, top, and length of the lead slurries and tail slurries due to the variation in formation tops and planned TD for the planned / contemplated wells for which this Master Drilling Plan is intended.

13-3/8" Conductor:

Cement to surface with ready mix or Class C Neat cement. TOC at surface.

8-5/8" Surface Casing:

The intention for the cementing program for the Surface Casing is to:

- Place the Tail Slurry from the casing shoe to 300' above the casing shoe,
- Bring the Lead Slurry to surface.

Spacer: 20 bbls Fresh Water

Volume (sx) & Recipe & Excess %	Bottom (ft MD)	Top (ft MD)	Length (ft)	Density (ppg)	Yield (cuft/sx)	Mix Wtr gal/sx	,	ve Strengths y UCA Method
185 – 535 sx Class C + 6% bentonite + 2% CaCl2 + 0.125% Polyflake	325 to 940	Surface	325 to 940	13.5	1.96	10.69	Time 12 hrs 18 hrs 24 hrs	Strength 316 psi 417 psi 506 psi
Excess = 170%								

Tail Slurry								
Volume (sx) & Recipe & Excess %	Bottom (ft MD)	Top (ft MD)	Length (ft)	Density (ppg)	Yield (cuft/sx)	Mix Wtr gal/sx		ve Strengths y UCA Method
220 sx Class C + 2% CaCl2 + 0.125% Polyflake Excess = 100%	625' to 1240'	325' to 940'	300′	14.8	1.35	6.36	Time 3 hrs 9 hrs 12 hrs 24 hrs 48 hrs	Strength 50 psi 500 psi 793 psi 1266 psi 2183 psi

Displacement: Fresh Water

Note: In accordance with the Pecos District Conditions of Approval, we will Wait on Cement (WOC) for a period of not less than 18 hrs after placement of the cement on the Surface Casing in order to achieve at least 500 psi compressive strength in both the Lead Slurry and Tail Slurry cements prior to drilling out of the Surface Casing.

5-1/2" Production Casing Cementing Program - Single Stage Cementing Option:

The intention for the cementing program for the Production Casing - Single Stage Cementing Option is to:

- Place the Tail Slurry from the casing shoe to the top of the Grayburg formation,
- Bring the Lead Slurry to surface.

Spacer: 20 bbls Fresh Water with an option to follow this with 1000 gallons SuperFlush 102 and 20 additional bbls Fresh Water.

Lead Slurry							·	
Volume (sx) & Recipe & Excess %	Bottom (ft MD)	Top (ft MD)	Length (ft)	Density (ppg)	Yield (cuft/sx)	Mix Wtr gal/sx	Stre @ 113	ressive ngths deg F by Method
433 – 644 sx 50% Class C 50% POZ + 10% bentonite + 8 lb/sx Salt + 0.2% Fluid Loss Additive + 0.125% Polyflake	3270' to 3940'	Surface	3270' to 3940'	11.8	2.55	14.88	Time 12 hrs 24 hrs 48 hrs 72 hrs	Strength 100 psi 200 psi 245 psi 310 psi

Volume (sx)	Bottom	Top	Length	Density	Yield	Mix Wtr	Compressive	
& Recipe & Excess %	(ft MD)	(ft MD)	(ft)	(ppg)	(cuft/sx)	gal/sx	@ 115 deg F by	
150 – 285 sx 65% Class C 35% POZ + 0.4% Dispersant	4155' to 4705'	3270' to 3940'	636' to 885'	14.8	0.98	3.76	Time 5 hrs 56 min 8 hrs 12 min 24 hrs 48 hrs 72 hrs	Strength 50 psi 500 psi 2806 psi 4690 psi 5661 psi

Displacement: 2% KCL water with approximately 250 ppm gluteraldehyde biocide.

5-1/2" Production Casing Cementing Program - Two-Stage Cementing Option (for Loss of Circulation Events):

We propose an option to use the two-stage cementing method for cementing the production casing if any loss of circulation events or heavy seepage is experienced while drilling the 7-7/8" hole. (see discussion in Item 3 above). The proposed two-stage cementing program would be as follows:

- Stage 1: Would place cement from the casing shoe to the stage tool.
- Stage 2: Would place cement from the stage tool to Surface.

Stage 1:

Spacer: 20 bbls Fresh Water with an option to follow this with 1000 gallons SuperFlush 102 and 20 additional bbls Fresh Water

Stage 1 - Lead Surry: None

Stage 1 – Tail Slurry Volume (sx) & Recipe & Excess %	Bottom (ft MD)	Top (ft MD)	Length (ft)	Density (ppg)	Yield (cuft/sx)	Mix Wtr gal/sx	Compressive Strengths @ 113 deg F by Crush Meth	
150 – 285 sx 65% Class C 35% POZ + 0.4% Dispersant	4155' to 4705'	3270' to 3940'	636' to 885'	14.8	0.98	3.76	Time 5 hrs 56 min 8 hrs 12 min 24 hrs 48 hrs 72 hrs	Strength 50 psi 500 psi 2806 psi 4690 psi 5661 psi

Displacement: A volume of Fresh Water equal to the capacity volume from the stage tool to the float collar, followed by brine based mud.

5-1/2" Production Casing Cementing Program – Two-Stage Cementing Option with Stage Tool and External Casing Packers (for Water Flow Events):

We propose an option to use the two-stage cementing method with a Stage Tool and two each External Casing Packers if any waterflow event is experienced while drilling the 7-7/8" hole as discussed above in Item 3. The proposed two-stage cementing program would be as follows:

- Stage 1: Would place cement from the casing shoe to the stage tool
- Stage 2: Would place cement from the stage tool to Surface.

Stage 1:

Spacer: 20 bbls Fresh Water with an option to follow this with 1000 gallons SuperFlush 102 and 20 additional bbls Fresh Water

Stage 1 – Lead Slurry Volume (sx)	Bottom	Тор	Length	Density	Yield	Mix Wtr	Compressive	
& Recipe & Excess %	(ft MD)	(ft MD)	(ft)	(ppg)	(cuft/sx)	gal/sx	@ 113 deg F by C	rush Method
77 – 363 sx 50% Class C 50% POZ + 10% bentonite + 8 lb/sx Salt + 0.2% Fluid Loss Additive + 0.125% Polyflake	3270' to 3940'	1670' to 3440'	500' to 1600'	11.8	2.55	14.88	Time 12 hrs 24 hrs 48 hrs 72 hrs	Strength 100 psi 200 psi 245 psi 310 psi

Stage 1 - Tail Slurry	15		1 am malla	Donoity	Yield	Mix Wtr	Compressive	Strongthe
Volume (sx) & Recipe & Excess %	Bottom (ft MD)	Top (ft MD)	Length (ft)	Density (ppg)	(cuft/sx)	gal/sx	@ 113 deg F by	
150 – 285 sx 65% Class C 35% POZ + 0.4% Dispersant	4155' to 4705'	3270' to 3940'	636' to 885'	14.8	0.98	3.76	Time 5 hrs 56 min 8 hrs 12 min 24 hrs 48 hrs 72 hrs	Strength 50 psi 500 psi 2806 psi 4690 psi 5661 psi

Displacement: A volume of Fresh Water equal to the capacity volume from the stage tool to the float collar, followed by brine based mud.