
State of New Mexico Energy, Minerals and Natural Resources Department

Form C-103 Revised 5-27-2004

FILE IN TRIPLICATE OIL CONSERVATION DIVISION	
DISTRICT II 1301 W. Grand Ave, Artesia, NM 88210 DISTRICT II 1301 W. Grand Ave, Artesia, NM 88210	WELL API NO. 30-025-37349
DISTRICT II 1301 W. Grand Ave, Artesia, NM 88240 DISTRICT III 1000 Rio Brazos Rd, Aztec, NM 87410	5. Indicate Type of Lease
1301 W. Grand Ave, Artesia, NM 88210	STATE X FEE .
DISTRICT III	6 State Oil & Gas Lease No.
SUNDRY NOTICES AND REPORTS ON WELLS	7. Lease Name or Unit Agreement Name
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A	State "A"
DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (Form C-101) for such proposals.) 1. Type of Well:	8. Well No. 11-Y
Oil Well X Gas Well Other	· · · · · · · · · ·
2. Name of Operator	9. OGRID No 192463
Occidental Permian Ltd.	,
3. Address of Operator	10. Pool name or Wildcat Hobbs: Wolfcamp
HCR 1 Box 90 Denver City, TX 79323	
4. Well Location	
Unit Letter J 1484 Feet From The South 1526 Feet	et From The East Line
Section 29 Township 18-S Range 38-I	E NMPM Lea County
11. Elevation (Show whether DF, RKB, RT GR, etc.)	
3647' GL	
Pit or Below-grade Tank Application or Closure	
Pit Type Depth of Ground Water Distance from nearest fresh water well	Distance from nearest surface water
Pit Liner Thickness mil Below-Grade Tank: Volume bbls; Construction Ma	neriai
12. Check Appropriate Box to Indicate Nature of Notice, Report, or C	Other Data
	SEQUENT REPORT OF:
PERFORM REMEDIAL WORK PLUG AND ABANDON REMEDIAL WORK	ALTERING CASING
PERFORM REMEDIAL WORK PLUG AND ABANDON REMEDIAL WORK	ALTERING CASING DELIG & ABANDONMENT
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP	NS. PLUG & ABANDONMENT
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN	NS. PLUG & ABANDONMENT NT JOB
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN	NS. PLUG & ABANDONMENT
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates	NS. PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed	NS. PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU. Kill well.	NS. PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU. Kill well. 2. POOH w/rods & pump.	NS. PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU. Kill well. 2. POOH w/rods & pump. 3. ND wellhead/NU BOP.	NS. PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU. Kill well. 2. POOH w/rods & pump.	NS. PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU. Kill well. 2. POOH w/rods & pump. 3. ND wellhead/NU BOP. 4. POOH w/TAC and tubing. 5. RIH w/5-1/2" CIBP set @7591'. Dump 3 sacks cement on CIBP. TOC @7570'. 6. Test plug to 650 PSI. Tested good.	NS. PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any completion or recompletion.
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed RUPU & RU. Kill well. 2. POOH w/rods & pump. 3. ND wellhead/NU BOP. 4. POOH w/TAC and tubing. 5. RIH w/5-1/2" CIBP set @7591'. Dump 3 sacks cement on CIBP. TOC @7570'. 6. Test plug to 650 PSI. Tested good. 7. ND ROP/NIL can flange. This Applicance.	NS. PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any completion or recompletion.
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU. Kill well. 2. POOH w/rods & pump. 3. ND wellhead/NU BOP. 4. POOH w/TAC and tubing. 5. RIH w/5-1/2" CIBP set @7591'. Dump 3 sacks cement on CIBP. TOC @7570'. 6. Test plug to 650 PSI. Tested good. 7. ND BOP/NU cap flange. 8. Test casing to 560 PSI for 30 minutes and chart for the NMOCD. This Applead of the completion of the NMOCD.	NS. PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any completion or recompletion.
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed RUPU & RU. Kill well. 2. POOH w/rods & pump. 3. ND wellhead/NU BOP. 4. POOH w/TAC and tubing. 5. RIH w/5-1/2" CIBP set @7591'. Dump 3 sacks cement on CIBP. TOC @7570'. 6. Test plug to 650 PSI. Tested good. 7. ND ROP/NIL can flange. This Applicance.	NS. PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any completion or recompletion.
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed. 1. RUPU & RU. Kill well. 2. POOH w/rods & pump. 3. ND wellhead/NU BOP. 4. POOH w/TAC and tubing. 5. RIH w/5-1/2" CIBP set @7591'. Dump 3 sacks cement on CIBP. TOC @7570'. 6. Test plug to 650 PSI. Tested good. 7. ND BOP/NU cap flange. 8. Test casing to 560 PSI for 30 minutes and chart for the NMOCD. 9. RDPU & RU. Clean location.	NS. PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any completion or recompletion.
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU. Kill well. 2. POOH w/rods & pump. 3. ND wellhead/NU BOP. 4. POOH w/TAC and tubing. 5. RIH w/5-1/2" CIBP set @7591'. Dump 3 sacks cement on CIBP. TOC @7570'. 6. Test plug to 650 PSI. Tested good. 7. ND BOP/NU cap flange. 8. Test casing to 560 PSI for 30 minutes and chart for the NMOCD. 9. RDPU & RU. Clean location. 10. Well is temporarily abandoned. RUPU 09/02/09 RDPU 09/09/09	NS. PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any completion or recompletion. Proval of Temporary 108/2014 Inment Expires 01/08/2014
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU. Kill well. 2. POOH w/rods & pump. 3. ND wellhead/NU BOP. 4. POOH w/TAC and tubing. 5. RIH w/5-1/2" CIBP set @7591'. Dump 3 sacks cement on CIBP. TOC @7570'. 6. Test plug to 650 PSI. Tested good. 7. ND BOP/NU cap flange. 8. Test casing to 560 PSI for 30 minutes and chart for the NMOCD. 9. RDPU & RU. Clean location. 10. Well is temporarily abandoned. RUPU 09/02/09 RDPU 09/09/09	NS. PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any completion or recompletion. Proval of Temporary 108/2014 Inment Expires 01/08/2014
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU. Kill well. 2. POOH w/rods & pump. 3. ND wellhead/NU BOP. 4. POOH w/TAC and tubing. 5. RIH w/5-1/2" CIBP set @7591'. Dump 3 sacks cement on CIBP. TOC @7570'. 6. Test plug to 650 PSI. Tested good. 7. ND BOP/NU cap flange. 8. Test casing to 560 PSI for 30 minutes and chart for the NMOCD. 9. RDPU & RU. Clean location. 10. Well is temporarily abandoned. RUPU 09/02/09 RDPU 09/09/09	PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any completion or recompletion. Proval of Temporary 08/2014 That any pit or below-grade tank has been/will be
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU. Kill well. 2. POOH w/rods & pump. 3. ND wellhead/NU BOP. 4. POOH w/TAC and tubing. 5. RIH w/5-1/2" CIBP set @7591'. Dump 3 sacks cement on CIBP. TOC @7570'. 6. Test plug to 650 PSI. Tested good. 7. ND BOP/NU cap flange. 8. Test casing to 560 PSI for 30 minutes and chart for the NMOCD. 9. RDPU & RU. Clean location. 10. Well is temporarily abandoned. RUPU 09/02/09 RDPU 09/09/09	PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any completion or recompletion. Proval of Temporary 08/2014 That any pit or below-grade tank has been/will be
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed RUPU & RU. Kill well. 2. POOH w/rods & pump. 3. ND wellhead/NU BOP. 4. POOH w/TAC and tubing. 5. RIH w/5-1/2" CIBP set @7591'. Dump 3 sacks cement on CIBP. TOC @7570'. 6. Test plug to 650 PSI. Tested good. 7. ND BOP/NU cap flange. 8. Test casing to 560 PSI for 30 minutes and chart for the NMOCD. 9. RDPU & RU. Clean location. 10. Well is temporarily abandoned. RUPU 09/02/09 RDPU 09/09/09 1 hereby certify that the information above is true and complete to the best of my knowledge and belief. I further certify constructed or closed according to NMOCD guidelines , a general permit or an (attached) alternative plan.	NS. PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any completion or recompletion. Peroval of Temporary 08/2014 That any pit or below-grade tank has been/will be the OCD-approved
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU. Kill well. 2. POOH w/rods & pump. 3. ND wellhead/NU BOP. 4. POOH w/TAC and tubing. 5. RIH w/5-1/2" CIBP set @7591'. Dump 3 sacks cement on CIBP. TOC @7570'. 6. Test plug to 650 PSI. Tested good. 7. ND BOP/NU cap flange. 8. Test casing to 560 PSI for 30 minutes and chart for the NMOCD. 9. RDPU & RU. Clean location. 10. Well is temporarily abandoned. RUPU 09/02/09 RDPU 09/09/09 Thereby certify that the information above is true and complete to the best of my knowledge and belief. I further certify constructed or closed according to NMOCD guidelines , a general permit or an (attached) alternative plan	PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any completion or recompletion. Proval of Temporary / 08 / 2014 That any pit or below-grade tank has been/will be that any pit or below-grade tank has been/will be the OCD-approved Associate DATE 10/07/2009
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU. Kill well. 2. POOH w/rods & pump. 3. ND wellhead/NU BOP. 4. POOH w/TAC and tubing. 5. RIH w/5-1/2" CIBP set @7591". Dump 3 sacks cement on CIBP. TOC @7570". 6. Test plug to 650 PSI. Tested good. 7. ND BOP/NU cap flange. 8. Test casing to 560 PSI for 30 minutes and chart for the NMOCD. 9. RDPU & RU. Clean location. 10. Well is temporarily abandoned. RUPU 09/02/09 RDPU 09/09/09 Thereby certify that the information above is true and complete to the best of my knowledge and belief. I further certify constructed or closed according to NMOCD guidelines , a general permit or an (attached) alternative plan SIGNATURE TITLE Administrative mendy Johnson@oxy.com	PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any completion or recompletion. Proval of Temporary / 08 / 2014 That any pit or below-grade tank has been/will be that any pit or below-grade tank has been/will be the OCD-approved Associate DATE 10/07/2009
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: Temporaril 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU. Kill well. 2. POOH w/rods & pump. 3. ND wellhead/NU BOP. 4. POOH w/TAC and tubing. 5. RIH w/5-1/2" CIBP set @7591'. Dump 3 sacks cement on CIBP. TOC @7570'. 6. Test plug to 650 PSI. Tested good. 7. ND BOP/NU cap flange. 8. Test casing to 560 PSI for 30 minutes and chart for the NMOCD. 9. RDPU & RU. Clean location. 10. Well is temporarily abandoned. RUPU 09/02/09 RDPU 09/09/09 Thereby certify that the information above is true and complete to the best of my knowledge and belief. I further certify constructed or closed according to NMOCD guidelines , a general permit or an (attached) alternative plan	PLUG & ABANDONMENT NT JOB Ly Abandon Well S, including estimated date of starting any completion or recompletion. Proval of Temporary / 8 / 2014 The starting any completion or recompletion. The starting any completion or recompletion. Proval of Temporary / 8 / 2014 That any pit or below-grade tank has been/will be that any pit or below-grade tank has been/will be the OCD-approved Associate DATE 10/07/2009

CONDITIONS OF APPROVAL IF ANY:

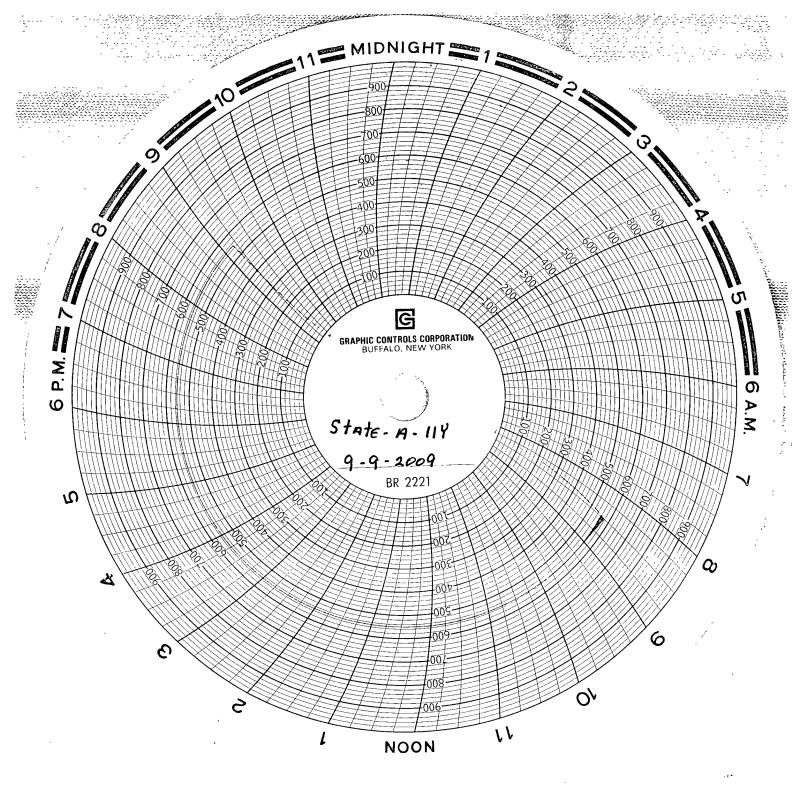

API # 3002537349

Pate Trucking chart recorder

0-1000#

0-1000#

CAL=bration Date: 8/6/09

CAL=bration Date: 8/6/09

SERJAL # MFG 2619

SERJAL Roberts with oxy