

NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65

5a. Indicate Type of Lease	
State ☐	Fee ☒
5. State Oil & Gas Lease No.	

SUNDRY NOTICES AND REPORTS ON WELLS

(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR.
USE "APPLICATION FOR PERMIT - A" (FORM C-101) FOR SUCH PROPOSALS.)

1. ☒ OIL WELL ☐ GAS WELL ☐ OTHER-		7. Unit Agreement Name
2. Name of Operator <i>Mobil Oil Corporation</i>		8. Farm or Lease Name <i>Santa Fe I</i>
3. Address of Operator <i>Box 633, Midland, Texas 79701</i>		9. Well No. <i>1</i>
4. Location of Well UNIT LETTER <i>H</i> <i>330</i> FEET FROM THE <i>East</i> LINE AND <i>1980</i> FEET FROM THE <i>North</i> LINE, SECTION <i>15</i> TOWNSHIP <i>9-S</i> RANGE <i>36-E</i> NMPM.		10. Field and Pool, or Willcox <i>Undesignated SA</i>
13. Elevation (Show whether DF, RT, GR, etc.) <i>4848.25</i>		12. County <i>Lea</i>

16. Check Appropriate Box To Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

SUBSEQUENT REPORT OF:

PERFORM REMEDIAL WORK ☐	PLUG AND ABANDON ☒	REMEDIAL WORK ☐	ALTERING CASING ☐
TEMPORARILY ABANDON ☐	CHANGE PLANS ☐	COMMENCE DRILLING OPNS. ☐	PLUG AND ABANDONMENT ☐
PULL OR ALTER CASING ☐	OTHER ☐	CASING TEST AND CEMENT JOB ☐	

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

Plug & Abandon as Per attached Plugging Procedures.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED *J. McDonald* TITLE *Authorized Agent* DATE *4-12-73*

APPROVED BY *[Signature]* TITLE *[Signature]* DATE *APR 10 1973*

CONDITIONS OF APPROVAL, IF ANY:

IDLAND E & P DIVISION

WELL WORK RECOMMENDATIONS Proposals for Well Reconditioning and Subsurface Maintenance Workovers, Expense DD's, PB's, and Conversions

Lease: SHAW T. "T" Well No. 1

Field: UNDESIGNATED SPV AREA

County: SEA State: WYOMING

RECOMMENDED PROCEDURE:


1. MDPH PULL LIFT EQUIPMENT & TAP
2. DRILL OUT CIBP SET AT 5000'
3. RUN TUBING TO 9700' & SPOT 355N CEMENT
Plug ABOVE TUBING (9712' - 9723')
4. CEMENTED HOLE TO MUD LADEN FLUID
5. SPOT 355N OF CEMENT PLUG OVER TOP OF 5" LIVER @ 4792'
6. SET 100' PLUG ABOVE TAP SECTION FROM 2195' TO 2295'
7. SPOT 125N CEMENT PLUG AT SURFACE
8. CUT OFF WELL HEAD AND INSTALL MAFER AND
CLEAR LOCATION

NOTE: NOTIFY UNOCC 24 HR PRIOR TO PEA - PROCEDURE
WAS REVIEWED VERBALLY 2/ UNOCC 24 HOURS

APR 3/8/73

RC
3/12/73

SANTA FE "I" D-1
 T-95, R-26, N-40, S-15 - UNPLATED "H"
 LEA COUNTY - NEW MEXICO

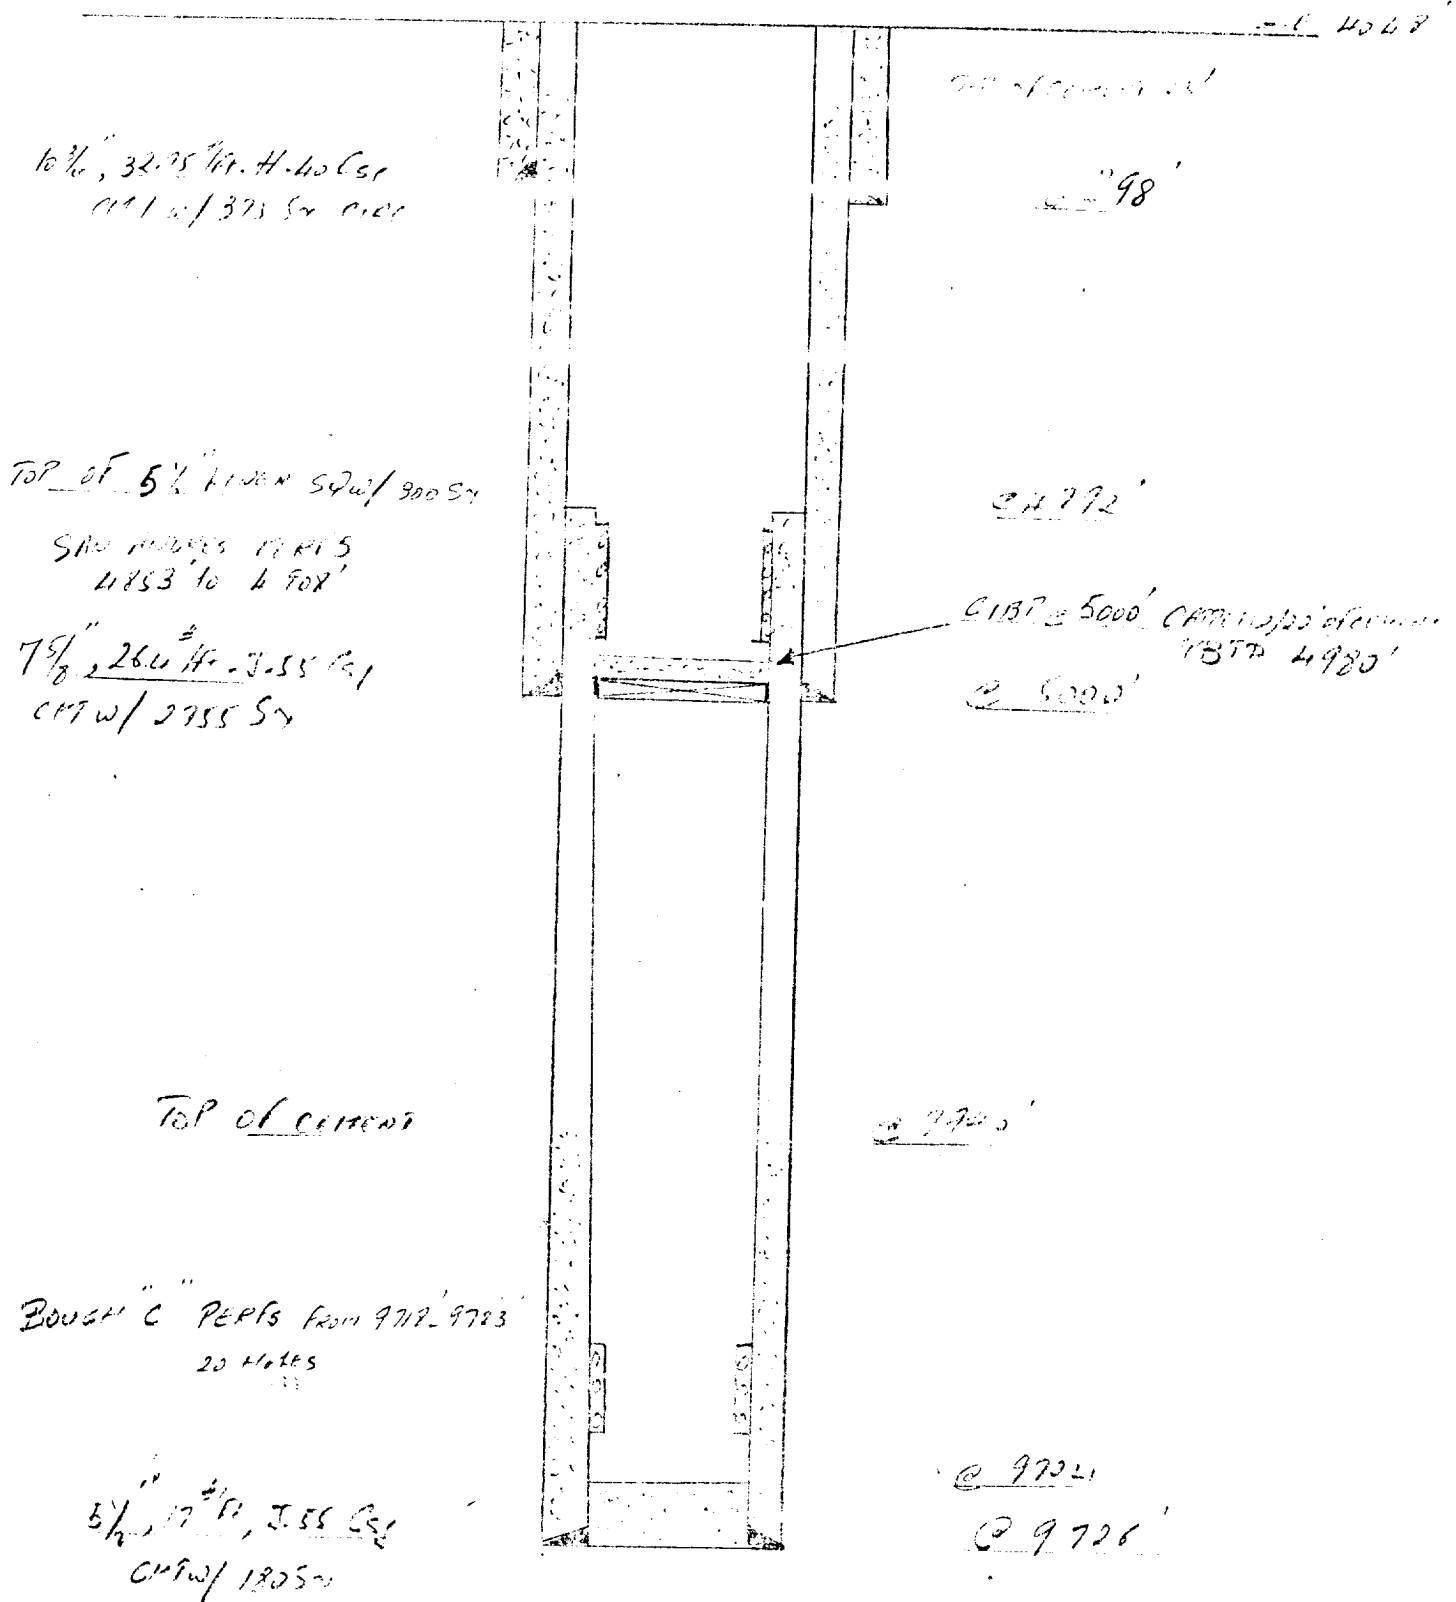

ARA 5/2/73