

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLI
(Other instructions on
reverse side)

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

NM 0473A

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Federal District

9. WELL NO.

#5

10. FIELD AND POOL, OR WILDCAT

Undesignated

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

**Section 27, T-7-S,
R-37-E**

12. COUNTY OR PARISH

Roosevelt

13. STATE

New Mexico

1. OIL ☐ GAS ☒ OTHER ☐
WELL WELL

2. NAME OF OPERATOR

H. L. Brown, Jr.

3. ADDRESS OF OPERATOR

309 Midland Tower, Midland, Texas 79701

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
At surface

**1980' FSL & 660' FSL, Section 27, T-7-S, R-37-E,
Roosevelt County, New Mexico**

14. PERMIT NO.

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

4053' GL

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

SUBSEQUENT REPORT OF:

TEST WATER SHUT-OFF

PULL OR ALTER CASING

WATER SHUT-OFF

REPAIRING WELL

FRACTURE TREAT

MULTIPLE COMPLETE

FRACTURE TREATMENT

ALTERING CASING

SHOOT OR ACIDIZE

ABANDON*

SHOOTING OR ACIDIZING

ABANDONMENT*

REPAIR WELL

CHANGE PLANS

(Other)

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Well Data:

13-3/8" csg. set at 334' - cement circulated

9-5/8" csg. set at 4112' - cement circulated

5-1/2" csg. set at 9180' - cemented w/500 sx; Top of Cement 7390'

Perfs:

8850' - 8896'

8030' - 8046'

8025' - 8030'

8015' - 8020'

AMENDMENT:

1. Set additional bridge plug with 20 foot cement on top at approx. 8800 feet.

2. Set 20 sack cement plug on top of bridge plug at 8000 feet.

3. Set additional 30 sack cement plug at base San Andre. 5000-5100 feet.

4. Hole to be filled with heavy mud between plugs.

Proposal Plugging Procedure

1. Set cast iron bridge plug at 8000' w/20' cement on top.

2. Cut and pull 5-1/2" casing from approximately 6000'.

3. Spot 30 sx plug in and out of 5-1/2" csg. stub.

4. Spot 50 sx plug at 4142'.

5. Spot 10 sx plug at surface.

18. I hereby certify that the foregoing is true and correct

SIGNED

TITLE **Petroleum Engineer**

DATE **June 24, 1970**


(This space for Federal or State office use)

APPROVED BY

TITLE

DATE

CONDITIONS OF APPROVAL, IF ANY:

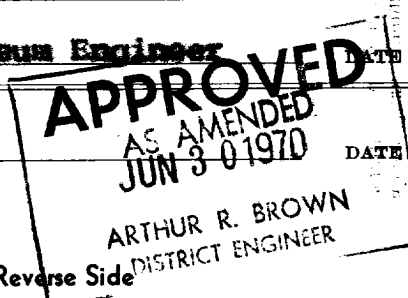

*See Instructions on Reverse Side

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.

U.S. GOVERNMENT PRINTING OFFICE: 1965-O-685229

847-485

APPROVED
JUL 10 1970
FEDERAL BUREAU OF INVESTIGATION
U.S. DEPARTMENT OF JUSTICE

RECEIVED

JUL 7 1970

OIL CONSERVATION DIVISION
HOUSTON, TEXAS