

UNITED STATES DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT
P.O. BOX 1980
HOBBS, NEW MEXICO 88240

CONTACT RECEIVING
OFFICE FOR NUMBER

BLM Roswell District
Modified Form No.
ND60-3160-4

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐		7. UNIT AGREEMENT NAME Milnesand Unit	
2. NAME OF OPERATOR Breck Operating Corp.		3a. Area Code & Phone No. (817) 559-3355	
3. ADDRESS OF OPERATOR P.O. Box 991, Breckenridge, Texas 76024		8. FARM OR LEASE NAME Milnesand (San Andres)	
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements. See also space 17 below.) At surface Unit Letter "B"; 660' FNL & 1980' FEL		9. WELL NO. 52	
14. PERMIT NO.		10. FIELD AND POOL, OR WILDCAT Milnesand (San Andres)	
15. ELEVATIONS (Show whether DF, RT, GR, etc.) 4256' (GR)		11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA Sec. 24, T-8S, R-34E	
		12. COUNTY OR PARISH Roosevelt	
		13. STATE New Mexico	

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:		SUBSEQUENT REPORT OF:	
TEST WATER SHUT-OFF ☐	PULL OR ALTER CASING ☐	WATER SHUT-OFF ☐	REPAIRING WELL ☐
FRACTURE TREAT ☐	MULTIPLE COMPLETE ☐	FRACTURE TREATMENT ☐	ALTERING CASING ☐
SHOOT OR ACIDIZE ☐	ABANDON* ☐	SHOOTING OR ACIDIZING ☐	ABANDONMENT* ☒
REPAIR WELL ☐	CHANGE PLANS ☐	(Other) ☐	
(Other) ☐		(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)	

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

4/19/90: MIRU. Pull on csg. Csg free. POOH & LD 2931' 5-1/2" csg. SDFN.

4/20/90: RIH w/8-5/8" cmt ret to 2800'. Sqz 335 sx cmt below cmt ret. Pmp press 700#. Pull out of cmt ret. Pmp 15 sx cmt on top of cmt ret. POOH w/tbg to 423'. Pmp 30 sx cmt plug. POOH w/tbg to 53'. Pmp 15 sx cmt plug to surface. Cut off WH. Const Dry-Hole marker. Remove anchors. RDMO.

18. I hereby certify that the foregoing is true and correct

SIGNED Kevin G. Duncan

TITLE Petroleum Engineer


DATE 4/23/90

(This space for Federal or State office use)

APPROVED BY _____
CONDITIONS OF APPROVAL, IF ANY: _____

TITLE PETER W. CHESTER

DATE _____

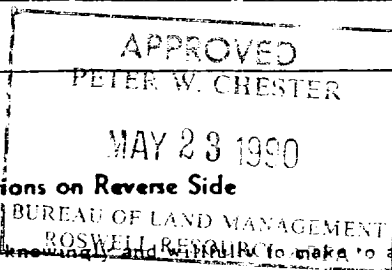

*See Instructions on Reverse Side