
Form 9-331 (May 1963)

UN ED STATES WANTED GOVERN AND SON Form approved. DEPARTMENT OF THE INTERIOR Department of the Interior of th


		ENT OF THE INTER EOLOGICAL SURVEY	RIOR Artssia, IM 882	5. LEASE DESIGNATION 1.C-060521	ON AND SERIAL NO.	
		ES AND REPORTS	ON WELLS	6. IF INDIAN, ALLOT	TEE OR TRIBE NAME	
1.		7. UNIT AGREEMENT	7. UNIT AGREEMENT NAME			
_	WE'LL WELL OTHER	8. FARM OR LEASE N	IAME			
2.	NAME OF OPERATOR					
3.	J. M. Huber Corporati	Perry Feder				
4 .	1900 Wilco Bldg., Midland, Texas 79701-4480 LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.)			2 10. FIELD AND POOL,	2 10. FIELD AND POOL, OR WILDCAT	
	660' FSL, 660' FEL			11. SEC., T., E., M., O SURVEY OR AR	Prairie San Andres, South 11. SEC., T. B., M., OR BLE. AND SURVEY OF AREA Sec. 17-T8S-R36E	
14.	. PERMIT NO. 15. ELEVATIONS (Show will		DF, RT, GR, etc.)	12. COUNTY OF PARI	SH 13. STATE	
		4112' GR		Roosevelt	New Mexico	
16.	Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data					
	• • • • • • • • • • • • • • • • • • • •			SEQUENT REPORT OF:	,	
				;		
		LL OR ALTER CASING	WATER SHUT-OFF	REPAIRIN	—	
	 	ANDON*	FRACTURE TREATMENT SHOOTING OR ACIDIZING	ABANDON		
		ANDON*	(Other)	*		
	(Other)		(Note: Report res	ults of multiple completion mpletion Report and Log	on on Well	
18.	PHONE: 915 I hereby certify that the foregoing is true and correct			15 682-3794	682-3794	
	SIGNED KARTA		istrict Production Ma	anager _{DATE} Ma	y 24, 1984	
=-	(This space for Federal or State office	use)				
	APPROVED BY S/Phil Kirk CONDITIONS OF APPROVAL, IF AN	TITLE	F	DATE 5-	31-84	

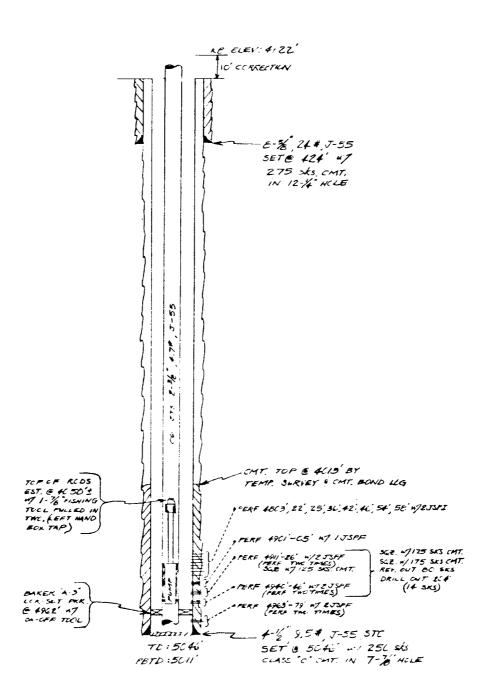

PERRY FEDERAL Nº 2

PRAIRIE SCUTH, SAN ANDRES

ROCSEVELT COUNTY, NEW MEXICO

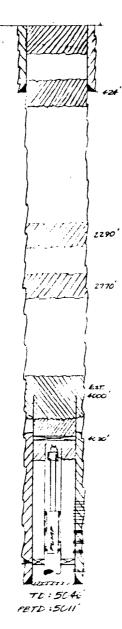

PROPOSED ABANDONMENT PROCEDURE Perry Federal No. 2 Roosevelt County, New Mexico

- 1. Cut tubing off at 4040' and pull out of hole.
- 2. Set cement retainer in $4\frac{1}{2}$ " casing at 4030'.
- 3. Squeeze 501 (4.5 co. 51.) of cement below retainer and spot 50' (4.5 cu. ft.) on top of retainer.
- 4. Cut off and salvage as much $4\frac{L}{2}^{\prime\prime}$ casing as possible. Estimated recovery is 4000'.
- 5. Spot a 100' (34 cu. ft.) cement plug across $4\frac{1}{2}$ casing stub.
- 6. Spot a 100' (34 cu. ft.) cement plug across the top of the Yates @ 2770'.
- 7. Spot a 100' (34 cu. ft.) cement plug across the anhydrite at top of salt at 2290'
- 8. Spot a 100' (34 cu. ft.) cement plug across 8-5/8" casing shoe at 424'.
- Set a 50' (18 cu. ft.) cement plug in 8-5/8" csg. at the surface.
- 10. Load hole with salt gel between cement plugs.

PERRY FEDERAL Nº 2

PRAIRIE SCUTH, SAN ANDRES

ROCSEVELT COUNTY, NEW MEXICO

RECEIVED BY

JUN 0 1 1984

O. C. D. ARTESIA, OFFICE

HORBS OFFICE