


This may be a double
with a side outlet

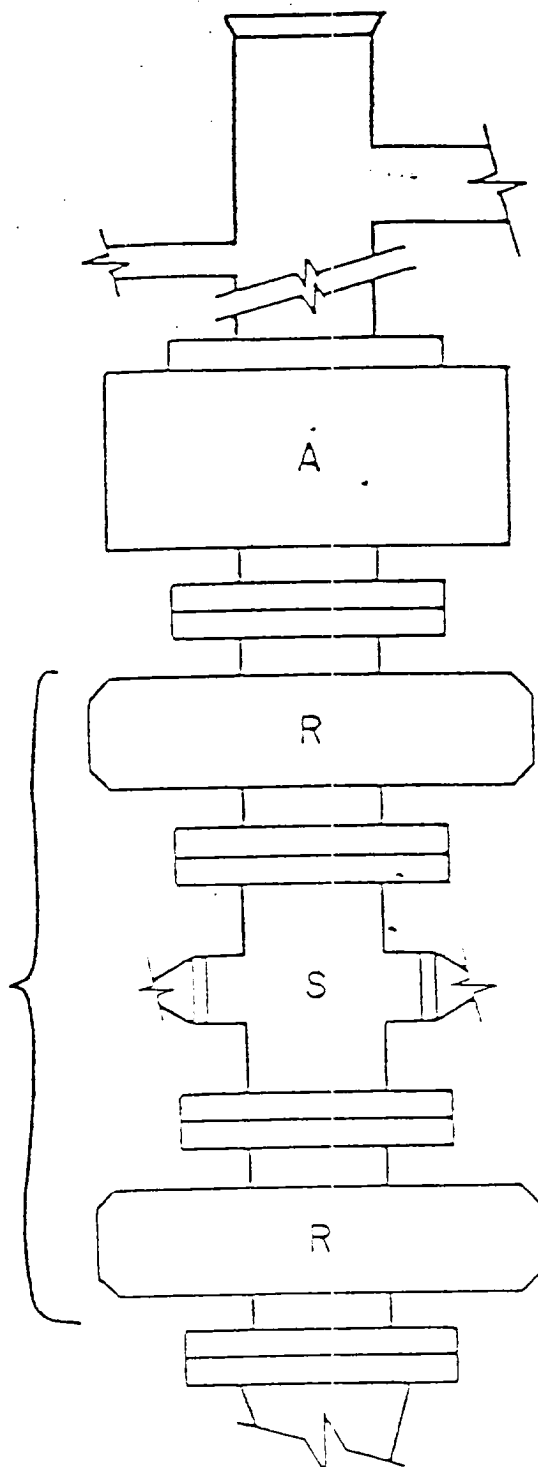

NOTE: IT IS RECOMMENDED THAT THE CHOKE LINE BE ATTACHED
ABOVE THE BOTTOM PREVENTER