

UNITED STATES DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT
N. M. OIL AND GAS COMMISSION
P. O. BOX 1580
HOBBS, NEW MEXICO 88240

Form approved.
Budget Bureau No. 1004-0135
Expires August 31, 1985

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>	7. UNIT AGREEMENT NAME
2. NAME OF OPERATOR Exxon Corporation Attn: David A. Murray	8. FARM OR LEASE NAME Strange Federal
3. ADDRESS OF OPERATOR P. O. Box 1600, Midland, TX 79702	9. WELL NO. 2
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 660' FSL and 1980' FEL of Sec. 25	10. FIELD AND POOL, OR WILDCAT Tomahawk - San Andres
14. PERMIT NO.	11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA Sec. 25, T-7-S, R-31-E
15. ELEVATIONS (Show whether DF, RT, GR, etc.) 4422 KB	12. COUNTY OR PARISH Chaves
	13. STATE NM

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF	PULL OR ALTER CASING
FRACTURE TREAT	MULTIPLE COMPLETION
SHOOT OR ACIDIZE	ABANDON*
REPAIR WELL	CHANGE PLANS
(Other)	

SUBSEQUENT REPORT OF:

WATER SHUT-OFF	REPAIRING WELL
FRACTURE TREATMENT	ALTERING CASING
SHOOTING OR ACIDIZING	ABANDONMENT*
(Other)	


(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

REVISED PLUGGING PROCEDURE

- 1) Circ. hole w/ 10 PPG brine mud.
- 2) Set CIBP @ 3840' and cap w/ 35' cmt. plug. Test plug to 500#. (Isolating the San Andres)
- 3) Spot 25 sx plug from 1670' to 1470'. (Plug to cover 50' above and below surf. csg. shoe)
- 4) Spot 25 sx plug from 300' to surf.
- 5) Cut off wellhead and install abandon well sign.

Estimated work will be done in 3rd Quarter of 1987.

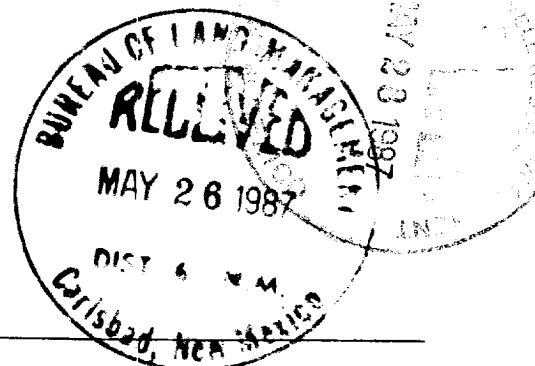

18. I hereby certify that the foregoing is true and correct

SIGNED D. A. Murray FOR David A. Murray TITLE Permits Supervisor DATE 5-21-87

(This space for Federal or State office use)

APPROVED BY _____ TITLE _____ DATE APPROVED
CONDITIONS OF APPROVAL, IF ANY: PETER W. CHESTER

JUL 2 1987

*See Instructions on Reverse Side

RECEIVED
JUL 10 1987
OCD
HOBBS OFFICE