


TYPICAL 2000 PSI WP BLOWOUT PREVENTERS

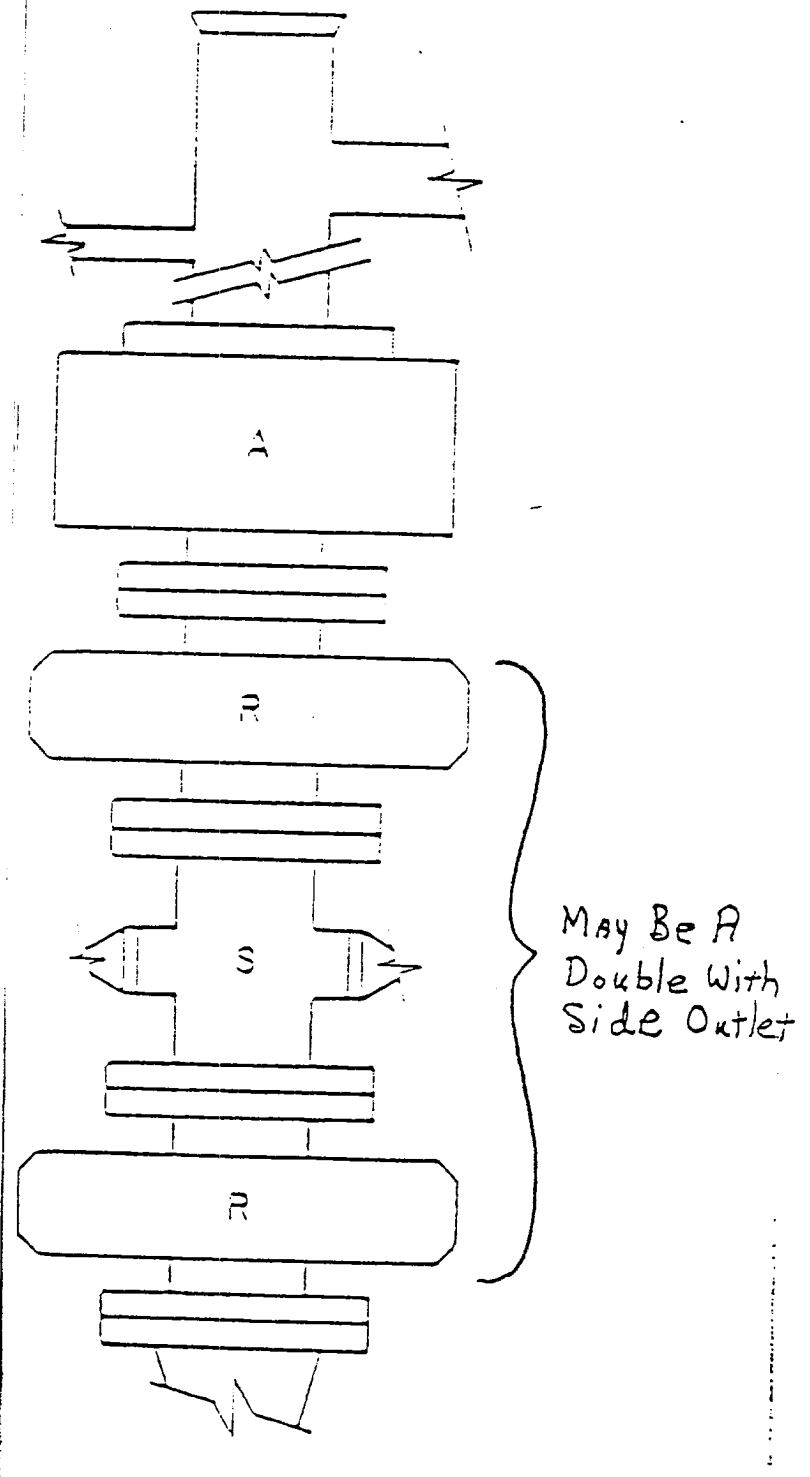

NOTE: IT IS RECOMMENDED THAT THE CHOKE LINE BE ATTACHED ABOVE
THE BOTTOM PREVENTER