


TYPICAL 2000 PSI WP BLOWOUT PREVENTERS

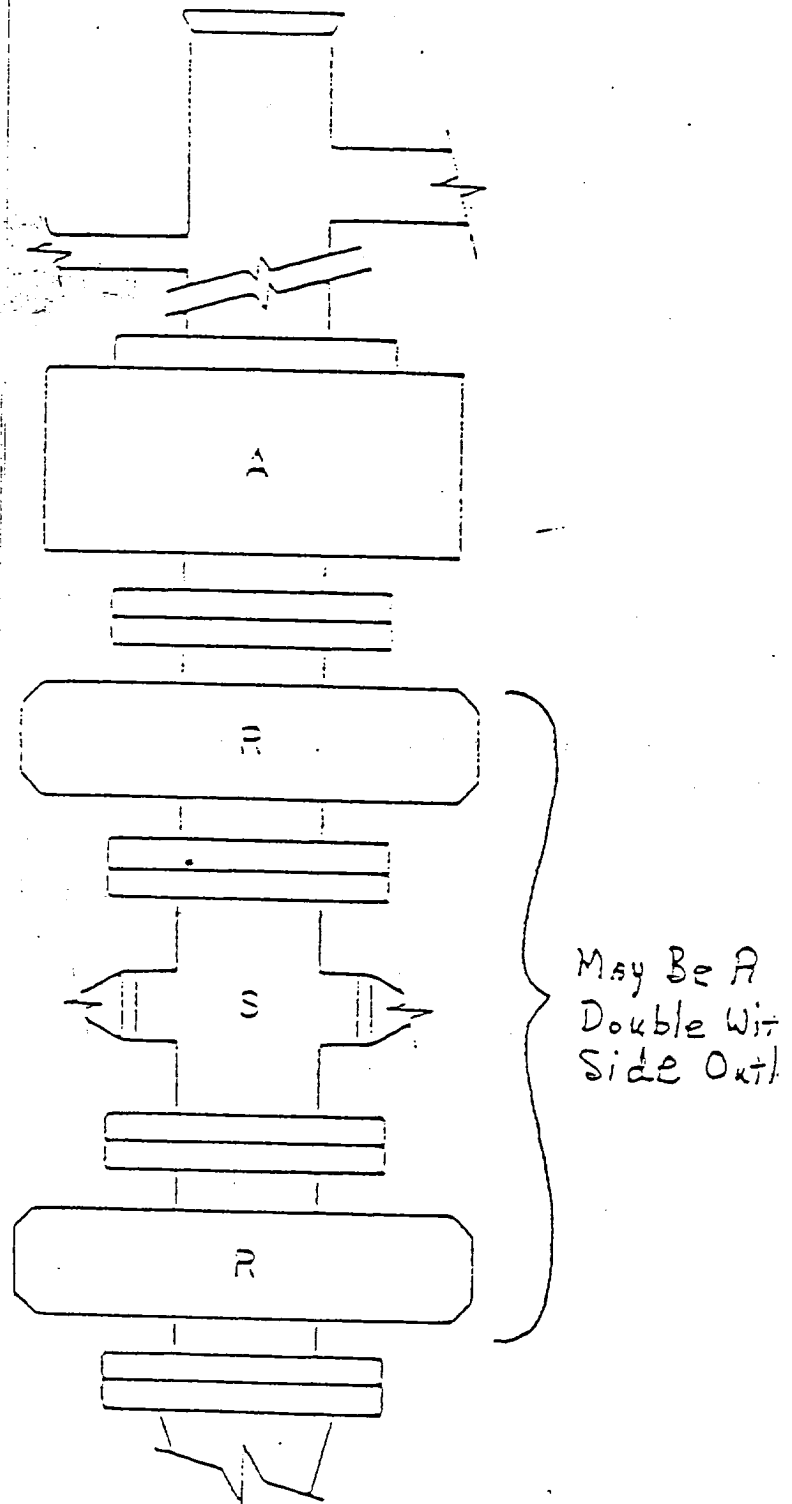

NOTE: IT IS RECOMMENDED THAT THE CHOKER LINE BE ATTACHED ABOVE THE BOTTOM PREVENTER

RECEIVED
NOV 5 1982
O.C.D.
PROCESS OFFICE
243