

NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65

5a. Indicate Type of Lease
State <input checked="" type="checkbox"/> Fee <input type="checkbox"/>
5. State Oil & Gas Lease No.
E-9247

SUNDRY NOTICES AND REPORTS ON WELLS
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR.
USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>	7. Unit Agreement Name
2. Name of Operator	8. Farm or Lease Name
TEXACO Inc.	New Mexico "DA" State
3. Address of Operator	9. Well No.
P. O. Box 728 - Hobbs, New Mexico 88240	NCT-1
4. Location of Well	10. Field and Pool, or Wildcat
UNIT LETTER D, 810 FEET FROM THE West LINE AND 660 FEET FROM	Ranger Lake Penn
THE North LINE, SECTION 14 TOWNSHIP 12-S RANGE 34-E NMPM.	
15. Elevation (Show whether DF, RT, GR, etc.)	12. County
4166' (DF)	Lea

16.

Check Appropriate Box To Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>

SUBSEQUENT REPORT OF:


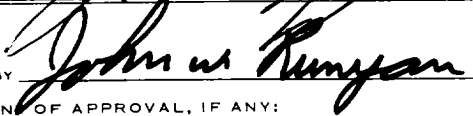
REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input checked="" type="checkbox"/>
CASING TEST AND CEMENT JOB <input type="checkbox"/>	OTHER <input type="checkbox"/>

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

The following work has been completed to Plug and Abandon subject well:

1. Mud up hole.
2. Spot 25 sx. cement plug from 9800' - 8800' (1000' interval).
3. Cut and pull approximately 4200' 2-7/8" OD casing.
4. Spot 25 sx. cement plug 50' above to 50' below cut (100' interval).
5. Spot 10 sx. cement plug at surface (25' plug).'
6. Install 4" Dry hole marker extending 4' above ground level.
7. Clean location. Plug and Abandon.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED 	TITLE Assistant District Superintendent	DATE July 28, 1970
APPROVED BY 	TITLE Geologist	DATE DEC 8 1970
CONDITION OF APPROVAL, IF ANY:		