


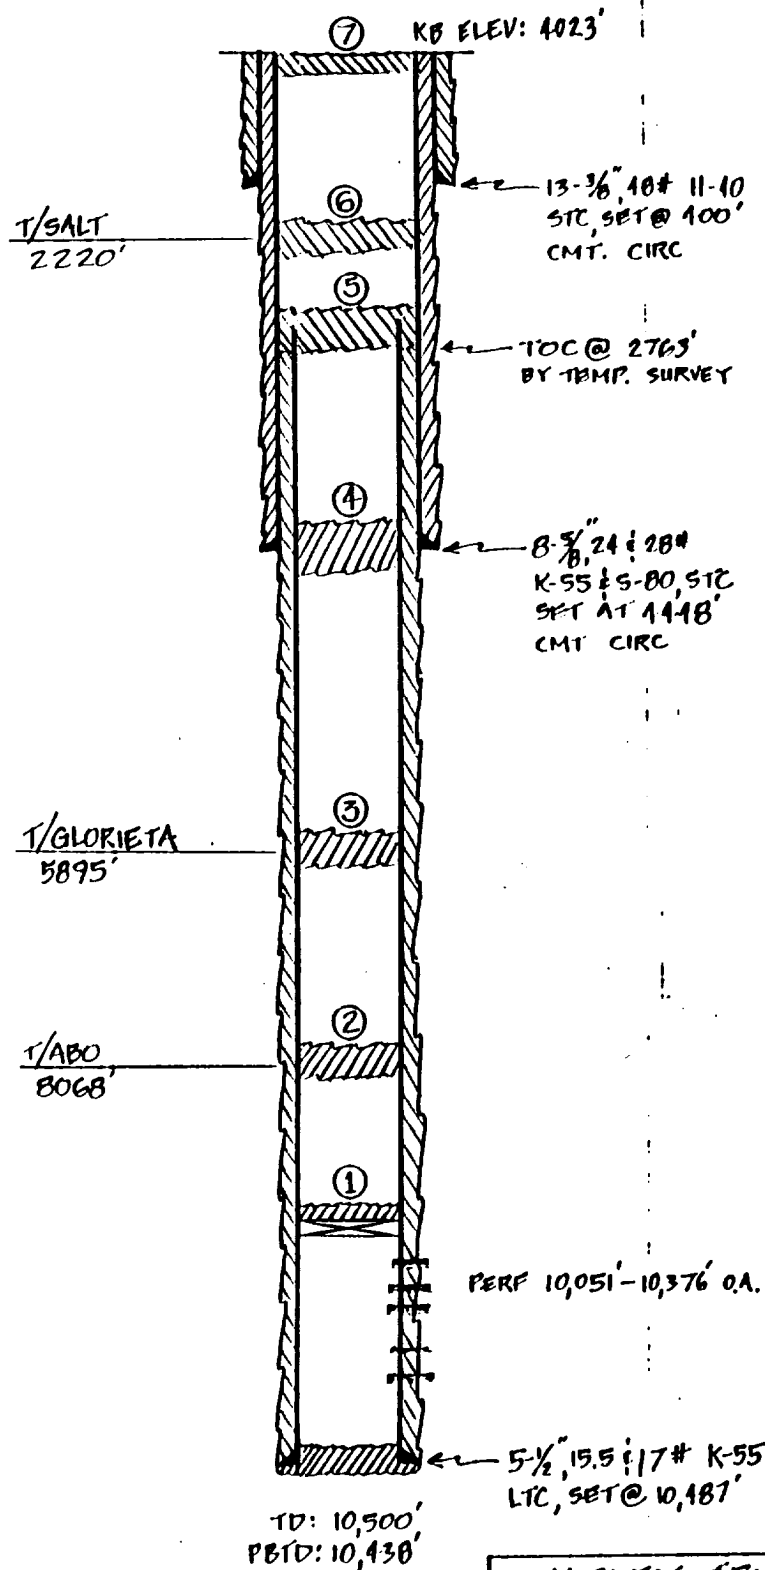

1. Set CIBP @ 10,000' w/4 ex cmt on top (35')
2. Spot 12 ex cmt plug from 8118' to 8018', across top of Abo @ 8068'.
3. Spot 12 ex cmt plug from 5945' to 5845', across top of Glorieta @ 5895'.
4. Spot 12 ex cmt plug from 4498' to 4398', across 8-5/8" csg shoe @ 4448'.
5. Shoot off 5 1/2" csg @ approximately 2760'. Spot 21 ex cmt plug across 5 1/2" csg stub, 50' in and 50' out of stub. Tag top of plug.
6. Spot 30 ex cmt plug from 2270' to 2170', across top of salt @ 2220'. Tag top of plug.
7. Spot 15 ex cmt plug from 50' to surface.

NOTE: Spot 9.5#/gal. salt gel between plugs.

WADLEY TRUST NO. 1
TATUM WOLFCAMP FIELD
LEA COUNTY, NEW MEXICO

PROPOSED PLUGGING