


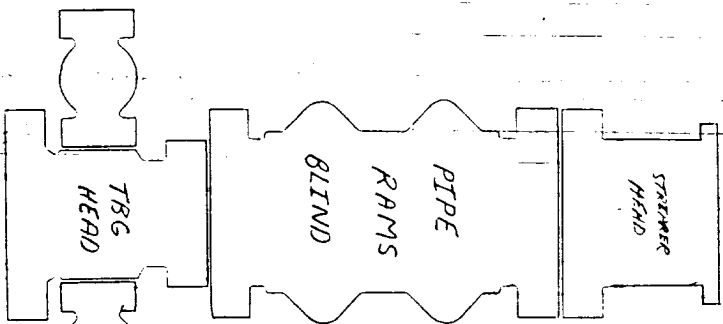

If the head is low than
use spacerpool. Choke
line should be as straight as possible.

3000 psi WIP
1000 psi Test pressure

