


UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

SUBMIT IN TRI
(Other instructions on re-
lease form)

Form approved.
Budget Bureau No. 1004-0135
Expires August 31, 1985

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back a well or to install a new well.
Use "APPLICATION FOR PERMIT" for such proposals.)

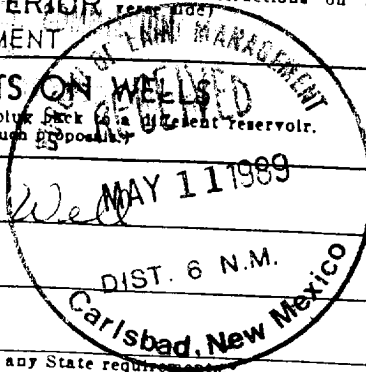

1. OIL WELL ☐ GAS WELL ☐ OTHER ☒

2. NAME OF OPERATOR

Conoco Inc.

3. ADDRESS OF OPERATOR

P.O. Box 460 - Hobbs, New Mexico 88240

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.
See also space 17 below.)
At surface

1980' FSL & 660' FWL - Unit Letter L

14. PERMIT NO.

30-025-00704

15. ELEVATIONS (Show whether DF, RT, CR, etc.)

5. LEASE DESIGNATION AND SERIAL NO.

LC-058699

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

MCA Unit

8. FARM OR LEASE NAME

MCA Unit Bldg 4

9. WELL NO.

187

10. FIELD AND POOL, OR WILDCAT

Maljamar G-SA

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA

26-17S-32E

12. COUNTY OR PARISH

Lea

13. STATE

NM

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

1. MIRU. G1H w/ workstring - to cement plug at 2054'. If tag on csq collapse at 465', pick up bit & DC & turn thru collapse. If cannot get thru bad csq, procedures will be modified.
2. At 2054' spot 33 bbls mud from 2054' - 700'. Displace w/ 2.3 bbls to obtain spot. Pull 1000'. Spot 21 sxs class "C" w/ 2 CaCl₂ from 1000' - 800'. Displace cement w/ 3 bbls POOH.
3. Establish pump-in rate. Pump 230 sxs class "C" w/ 2% CaCl₂ down csq. Displace cement w/ 4.3 bbls water to 175'.
4. Tag TOC at 175'. Shoot squeeze at 150' w/ 4 js pf. Pump 75 sxs class "C" w/ 2% CaCl₂ down csq. Circ to surface. Close csq valve & squeeze remainder of cement away. Leave csq full of cement.
5. Cut off csq and install P & A marker.

18. I hereby certify that the foregoing is true and correct

SIGNED William W. Baker

TITLE Administrative Supervisor

DATE May 8, 1989

(This space for Federal or State office use)

APPROVED BY [Signature]
CONDITIONS OF APPROVAL, IF ANY:

FOR:
TITLE

DATE 5-22-89

Subject to
Like Approval
by State


*See Instructions on Reverse Side

Title 18 U.S.C. Section 1001, makes it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

BLM-Carlsbad (610XU(1) FPP(1) ELL

MCA 187

1980' FSL 610 FNL 26-17-32
El. 3943 (DF)
TD 4073

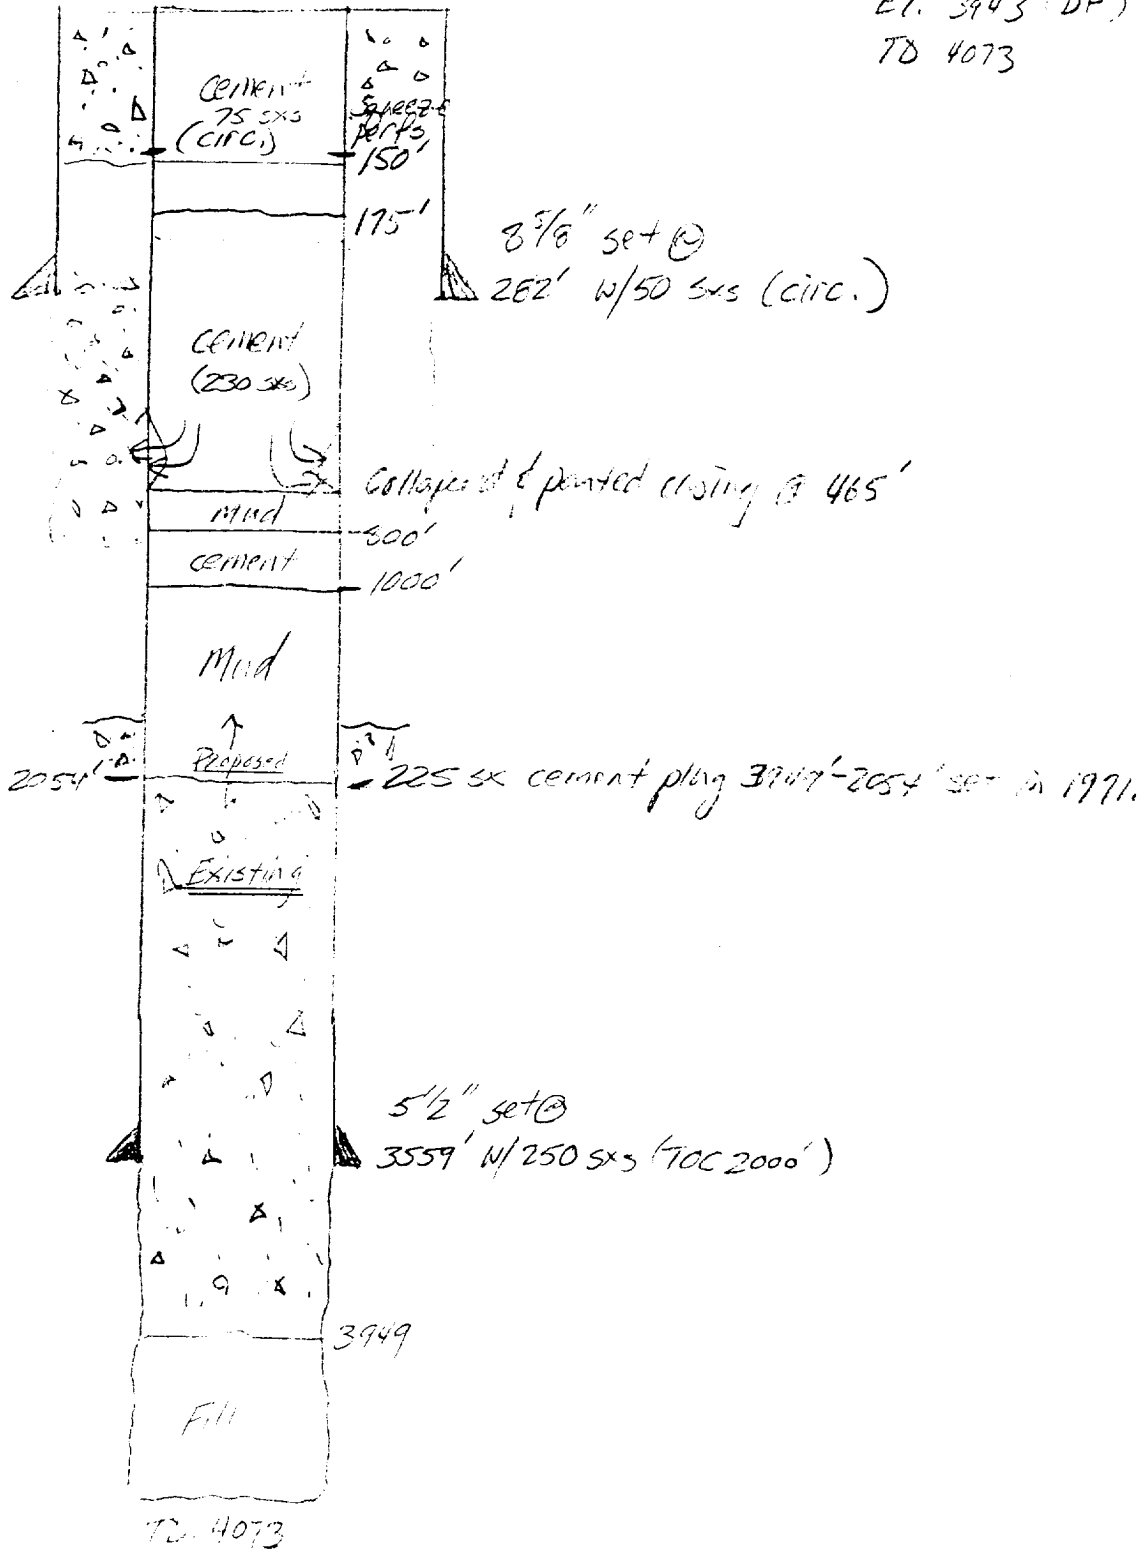

PROPOSED DE TORE

Location sheet

MCA 187