

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

SUBMIT IN TRIPI
(Other instructions
verse side)

TE
re

Form approved.
Budget Bureau No. 1004-0135
Expires August 31, 1985

RECEIVED

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

DEC 9 12 15 PM '88

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐

2. NAME OF OPERATOR

Conoco Inc

3. ADDRESS OF OPERATOR

P.O. Box 460 - Hobbs NM 88240

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
At surface

660' FNL & 1980' FFL - Unit Letter B

14. PERMIT NO.

30-025-00737

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

18.

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any
proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones perti-
nent to this work.)*

1. POOH w/ production equipment.

2. G/H w/Int, get sub, DCs & workstring. Clean out open hole from
3663' to below 4000'. Jet wash from 3730'-3850'. Circulate hole
clean & POOH.

3. Plug open hole w/cement. G/H w/ mud shoe sub & 2 3/8" Hg to PBTD.
Pump 330 sxs class "H" w/0.3% D-65 from PBTD to 1700'. Displace
cement w/7 BW. Pull Hg to 1300' & circulate clean. Pump up to
10 BW to squeeze away cement. SI. WOC 24 hrs.

4. Tag cement. Pressure up to 500 psi.

5. Circulate cement to surface. Pump 130 sxs class "C" neat to
circulate cement to surface. POOH. Pump 20 sxs "C" cement. POOH
top off w/3 sxs cement.

6. Cut off casing, install PER marker.

For further information call Pete Bowser at 397-5894

18. I hereby certify that the foregoing is true and correct

SIGNED [Signature] OF FINNEY

TITLE Administrative Supervisor DATE December 2, 1988

(This space for Federal or State office use)

APPROVED BY [Signature]

TITLE

DATE 12-14-88

CONDITIONS OF APPROVAL, IF ANY:

*See Instructions on Reverse Side

Title 18 U.S.C. Section 1001, makes it a crime for any person knowingly and willfully to make to any department or agency of the
United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

BLM Form 3160-5 (Rev. 11/83)

FOR _____

JOB OR AUTH. NO. _____

LOCATION _____

PAGE _____


SUBJECT

MCA 117

DATE _____

660' FNL, 1980 FEL 28-17-32

BY _____

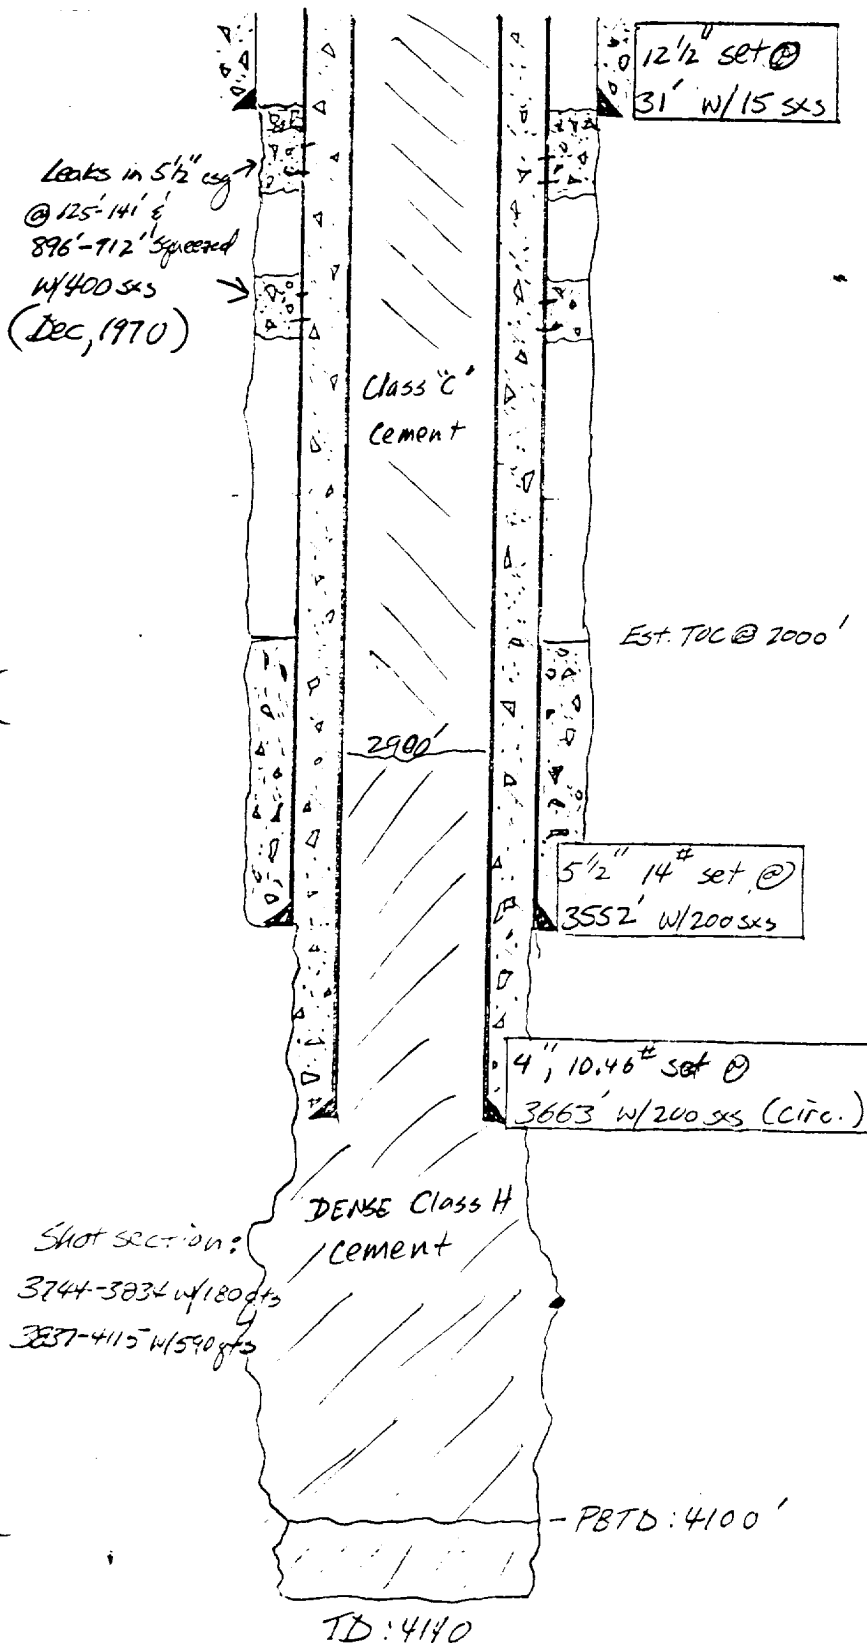

PROPOSED PEA WELLBORE

- Class H cement from PBTD to 2900'
- Class C cement from 2900-Surface

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35