

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

SUBMIT IN TRIPL
Other Instructions

Bureau No. 1004-0135
Expires August 31, 1985

LEASE DESIGNATION AND SERIAL NO.

LC-029410(A)

IF INDIAN, AGENT OR TRIBE NAME

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER ☒ Injection Shut-in

2. NAME OF OPERATOR

CONOCO INC.

3. ADDRESS OF OPERATOR

P. O. Box 460, Hobbs, N.M. 88240

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.
See also space 17 below.)
At surface Unit P

660' FSL & 660' FEL

14. PERMIT NO.

30-025-00763

15. ELEVATIONS (Show whether OF, RT, GR, etc.)

7. UNIT AGREEMENT NAME

MCA

8. FARM OR LEASE NAME

MCA Unit Bty 2

9. WELL NO.

211

10. FIELD AND POOL, OR WILDCAT

Maljamar 6/SA

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA

Sec. 29-175-32E

12. COUNTY OR PARISH 13. STATE

Lea

NM

18.

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other) repair surface waterflow

PULL OR ALTER CASING

MULTIPLE COMPLETION

ABANDON*

CHANGE PLANE

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL


ALTERING CASING

ABANDONMENT*

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form)

17. DESCRIBE OR USED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting and proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

- ① MIRU. Run bradenhead tracer survey
- ② Set pkr @ 3000'. Press. up on backside to 500psi.
- ③ Lead-in w/ 2 bbls salt saturated brine. Pump a 266l fresh wtr cushion
- ④ Pump 20 bbls Flo-Chek. Tail-in w/ 250 sxs Class "C" w/ 3% CaCl₂.
- ⑤ Displace cmt thru wellhead w/ fresh wtr. Shut-in bradenhead valve & install pop-off valve set @ 800 psi.
- ⑥ Return well to injection & rig down.

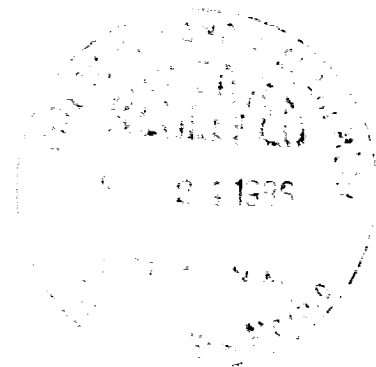

I hereby certify that the foregoing is true and correct

BY

[Signature]

TITLE

Administrative Supervisor

DATE

9-22-86

Source for Federal or State office use

APPROVED BY

TITLE

DATE

9-30-86

CONDITIONS OF APPROVAL, IF ANY:

Subject to
Like Approval
by State

*See Instructions on Reverse Side

BLM-Carlsbad (6) AKCO (2) Cities (1) PLCC (1) File