

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPLICATE*
(Other instructions on reverse side)Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

LC 029409 (a)

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT" for such proposals.)

1. OIL WELL ☐ GAS WELL ☐ OTHER ☒ (Injection)	7. UNIT AGREEMENT NAME
2. NAME OF OPERATOR Continental Oil Company	8. FARM OR LEASE NAME Pearsall AX
3. ADDRESS OF OPERATOR P.O. Box 460, Hobbs, New Mexico	9. WELL NO. 2
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 660' FSL & 660' FWL, Sec. 33, T-17S, R-37E, Lea County, New Mexico, NMPM	10. FIELD AND POOL, OR WILDCAT Pearsall Queen Pool
14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.) 3888 GL
	12. COUNTY OR PARISH Lea
	13. STATE N.M.

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐PULL OR ALTER CASING ☐FRACTURE TREAT ☐MULTIPLE COMPLETION ☐SHOOT OR ACIDIZE ☐ABANDON* ☐REPAIR WELL ☐CHANGE PLANS ☐(Other) Convert to Injection ☒

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐REPAIRING WELL ☐FRACTURE TREATMENT ☐ALTERING CASING ☐SHOOTING OR ACIDIZING ☐ABANDONMENT* ☐(Other) ☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

It is proposed to convert Pearsall AX No. 2 to a Waterflood Injection well. The work is in connection with a jointly owned pilot waterflood (Ambassador Operator).

Proposed procedure:

1. Kill Well
2. Pull rods, tubing. Tag bottom to check for fill. Clean out to PBD if fill is found.
3. Run 2 3/8" OD tubing with packer.
4. Hook up well for injection

Your approval of the above work is requested.

18. I hereby certify that the foregoing is true and correct

SIGNED

Original Signed:

G. C. Jamieson

TITLE Assistant District Manager

DATE 11-12-64

(This space for Federal or State office use)

APPROVED BY


CONDITIONS OF APPROVAL, IF ANY:

USGS(5) NMOCC (2) JM

TITLE

DATE

*See Instructions on Reverse Side

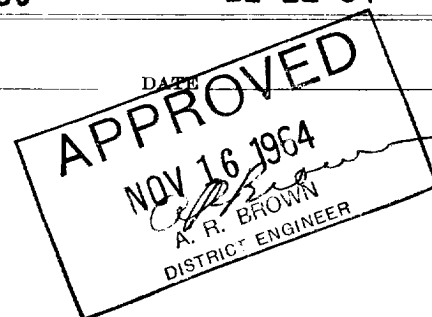

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.