

WELDING AND CEMENTING RECORD

HISTORY OF OIL OR GAS WELL

It is of the greatest importance to have a complete history of the well. Please state in detail the dates of redrilling, together with the reasons for the work and its results. If there were any changes made in the casing, state fully, and if any casing was "sidetracked" or left in the well, give its size and location. If the well has been dynamited, give date, size, position, and number of shots. If plugs or bridges were put in to test for water, state kind of material used, position, and results of pumping or baffling.

CASING RECORD


This well is to be used for the injection of gas. On August 5, 1950, we started injecting gas in this well. From August 5 to August 31, an average of 200 MCF per day has been injected at a pressure of 1140 PSI.

OIL OR GAS SANDS OR SLUGS

The summary of the data for the condition of the well at present time is as follows: The information given herein is a complete and correct record of the well and all work done thereon.

The information given herein is a complete and correct record of the well and all work done thereon. The information given herein is a complete and correct record of the well and all work done thereon.

LOCATE WELL CORRECTLY

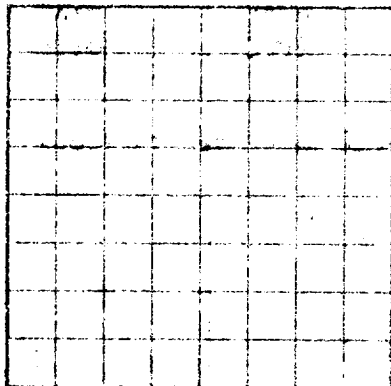

LOC OF OIL OR GAS WELL

GEOLOGICAL SURVEY

DEPARTMENT OF THE INTERIOR

UNITED STATES

LEAVE OR PERMIT TO PROSPECT FOR
MINERAL RESOURCES
U. S. LAND OFFICE