

NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65

RECEIVED

MAR 25 1970

SUNDRY NOTICES AND REPORTS ON WELLS

(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG OR TO ABANDON A WELL. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PURPOSES.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER- <input type="checkbox"/>		5a. Indicate Type of Lease State <input type="checkbox"/> Fee <input checked="" type="checkbox"/>	
2. Name of Operator TEXACO Inc.		5. State Oil & Gas Lease No.	
3. Address of Operator P.O. Box 728, Hobbs, New Mexico 88240		7. Unit Agreement Name	
4. Location of Well UNIT LETTER <u>A</u> <u>660</u> FEET FROM THE <u>North</u> LINE AND <u>660</u> FEET FROM THE <u>East</u> LINE, SECTION <u>12</u> TOWNSHIP <u>15-S</u> RANGE <u>37-E</u> NMPM.		8. Farm or Lease Name W. E. Dickinson	
		9. Well No. 1	
		10. Field and Pool, or Wildcat Undesignated	
15. Elevation (Show whether DF, RT, GR, etc.) 3793 (DF)		12. County Lea	

16.

Check Appropriate Box To Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

SUBSEQUENT REPORT OF:

PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input checked="" type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>	CASING TEST AND CEMENT JOBS <input type="checkbox"/>	


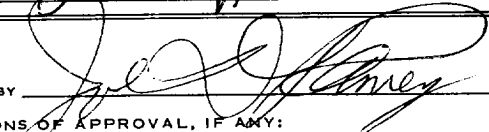
17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

TEXACO Inc. proposes to plug and abandon subject well as follows:

1. Set cement plug across perforations 9400 to 9410' w/30 sx Class C cement.
2. Load hole with mud.
3. Cut off and pull 4-1/2" OD casing at approximately 2800'.
4. Set cement plug on top of 4-1/2" stub w/30 sx Class C cement.
5. Set cement plug at surface w/10 sx Class C cement.
6. Install 4" marker extending 4' above ground level and clean location.

Note: Verbal approval to plug and abandon by NMOCC - March 25, 1970.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED 	TITLE Assistant District Superintendent	DATE March 25, 1970.
APPROVED BY 	TITLE SUPERVISOR	DATE
CONDITIONS OF APPROVAL, IF ANY:		