

N. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103  
Supersedes Old  
C-102 and C-103  
Effective 1-1-65

5a. Indicate Type of Lease State <input checked="" type="checkbox"/> Fee <input type="checkbox"/>
5. State Oil & Gas Lease No. V-1026
7. Unit Agreement Name
8. Farm or Lease Name Edsel State
9. Well No. 1
10. Field and Pool, or Wildcat Wildcat-Strawn
11. County Lea

SUNDRY NOTICES AND REPORTS ON WELLS

DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEEN OR PLUG BACK TO A DIFFERENT RESERVOIR.  
FOR APPLICATION FOR PERMIT - USE FORM C-101 FOR SUCH PROPOSALS.

OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>
1. Name of Operator ROBERT M. EDSSEL, INC.
2. Address of Operator 4200 Thanksgiving Tower, Dallas, Texas 75201
3. Location of Well UNIT LETTER 0 330 FEET FROM THE South LINE AND 1650 FEET FROM East THE East LINE, SECTION 30 TOWNSHIP 14S RANGE 37E ANGLE

15. Elevation (Show whether DF, RT, GR, etc.) 3871.7 GR
--

Check Appropriate Box To Indicate Nature of Notice, Report or Other Data  
NOTICE OF INTENTION TO: SUBSEQUENT REPORT OF:

PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input checked="" type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>	CASING TEST AND CEMENT JOB <input type="checkbox"/>	OTHER <input type="checkbox"/>

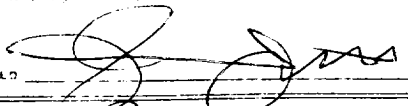
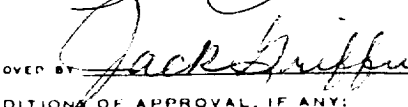
16. Description of Nature of Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. SEE RULE 1103.)

March 3, thru March 15, 1985 performed the following work:

- 1) 50 sx plug across perfs.
- 2) Cut off and pull 7150' of 5½ casing, place plug in and out of casing stub.
- 3) 100' plug in and out of 8 5/8 casing shoe @ 4838'.
- 4) 100' plug across the salt @ 2600' inside 8 5/8 casing.
- 5) 10 sx plug @ surface.
- 6) Standard 4' X 4' dry hole marker.
- 7) Mud between all plugs.

Location ready for inspection.

I, I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED 	TITLE Agent	DATE 9/10/85
APPROVED BY 	TITLE OIL & GAS INSPECTOR	DATE SEP 8 1986
CONDITIONS OF APPROVAL, IF ANY:		

RECEIVED

SEP 12 1985

U.S.D.  
HOBBS OFFICE