

STATE OF NEW MEXICO
ENERGY AND MINERALS DEPARTMENT

OIL CONSERVATION DIVISION

P. O. BOX 2088
SANTA FE, NEW MEXICO 87501

Form C-103
Revised 10-1-78

NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

5a. Indicate Type of Lease	
State <input checked="" type="checkbox"/>	Fee <input type="checkbox"/>
5. State Oil & Gas Lease No.	
LG-5660	

SUNDRY NOTICES AND REPORTS ON WELLS
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input checked="" type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER- <input type="checkbox"/>		7. Unit Agreement Name
2. Name of Operator Union Oil Company of California		8. Farm or Lease Name War State "30"
3. Address of Operator P. O. Box 671, Midland, Texas 79702		9. Well No. 1
4. Location of Well UNIT LETTER <u>X</u> <u>1850</u> FEET FROM THE <u>West</u> LINE AND <u>2310</u> FEET FROM THE <u>South</u> LINE, SECTION <u>30</u> TOWNSHIP <u>15-S</u> RANGE <u>32-E</u> NMPM.		10. Field and Pool, or Wildcat Undesignated
15. Elevation (Show whether DF, RT, GR, etc.) 4341' GR.		12. County Lea

Check Appropriate Box To Indicate Nature of Notice, Report or Other Data
NOTICE OF INTENTION TO:

SUBSEQUENT REPORT OF:

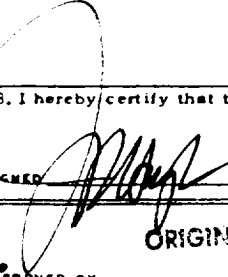
PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input checked="" type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>	CASING TEST AND CEMENT JOB <input type="checkbox"/>	

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

1. Set 5-1/2" CIBP @ 9735' w/35 sxs cmt on top to isolate all perms below.
2. Cut 5-1/2" csg @ ±7500'. POH, displacing BKDS w/10 ppg salt gel. LD 5-1/2" csg.
3. Spot stub-plug 50' below & 50' above cut-off. Tag top of cmt.
4. Spot 100' from 5800-5700' in 7-7/8" open hole.
5. Spot plug 50' below & 50' above 8-5/8" csg shoe. Tag top of cmt.
6. Spot 100' plug from 1250-1150' to isolate salt section.
7. Spot 100' plug from 500-400' @ 13-3/8" csg shoe.
8. Spot 10 sxs cmt @ surface.
9. Weld on P&A marker & clean location. *See Attached Schematic.

THE COMMISSION MUST BE NOTIFIED 24 HOURS PRIOR TO THE BEGINNING OF DRILLING OPERATIONS FOR THE C-103 TO BE APPROVED.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED 	J. R. Hughes	TITLE Dist. Drlg. Superintendent	DATE 7-22-88
ORIGINAL SIGNATURE OF OPERATOR		AUG 04 88	
APPROVED BY	TITLE	DATE	

CONDITIONS OF APPROVAL, IF ANY:

RECEIVED

AUG 3 1988

CH.
HOLDS OFFICE