


YATES PETROLEUM CORPORATION
C. O. Jones ATK State #2
Section 11-T16S-R35E
Lea County, New Mexico

APPLICATION FOR PERMIT TO DRILL, RE-ENTER, DEEPEN, PLUGBACK OR ADD A ZONE CONTINUED:

6. Place well into production.

COMINGLING:

1. Load tubing. Nipple down tree and nipple up BOP.
2. POOH with tubing, packer and RBP. NOTE: RBP set at 11000'±.
3. GIH with on/off overshoot and tubing and engage packer at 11011'.
4. Swab tubing down as needed. Equalize and pull blanking plug.
5. Unset packer. TOOH with packer and tubing.
6. Release well to production to run tubing, pump and rods.
7. Return well to production.

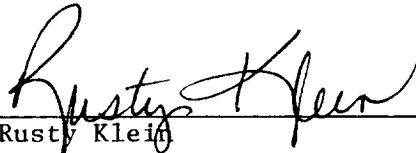

Rusty Klein
Operations Technician
July 27, 2000