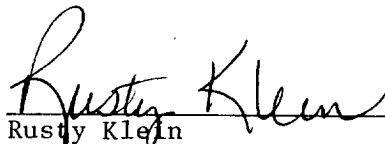


YATES PETROLEUM CORPORATION  
Avian AYA State #1  
Section 20-T15S-R32E  
Lea County, New Mexico

APPLICATION FOR PERMIT TO DRILL, ETC. CONTINUED:

4. Perforate 9943-9995' (Wolfcamp), acidize as necessary for production.
5. Swab/flow test.
6. If perforations 9943-9995' are wet, spot sand on top of RBP. Set retainer at 9910' and squeeze perforations.
7. If perforations 9943-9995' are productive, move RBP to 9900', set and pressure test. POOH with tubing and packer.
8. Perforate 9805-9854', acidize as necessary for production.
9. Swab/flow test.
10. Place well into production.

A handwritten signature in cursive script, reading "Rusty Klein", is written over a horizontal line.

Rusty Klein  
Operations Technician  
Sept. 6, 2001