

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPL
(Other instructions on re-
verse side)Form approved.
Budget Bureau No. 42-R1424.
5. LEASE DESIGNATION AND SERIAL NO.

NM 12413A

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

--

7. UNIT AGREEMENT NAME

--

8. FARM OR LEASE NAME

Sun McKay Federal

9. WELL NO.

2

10. FIELD AND POOL, OR WILDCAT

Lusk Morrow

11. SEC., T., R., M., OR BLE. AND
SURVEY OR AREA

Sec. 10, T19S, R32E

12. COUNTY OR PARISH

Lea

13. STATE

NM

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT" for such proposals.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input checked="" type="checkbox"/> OTHER	14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.)
2. NAME OF OPERATOR	--	3661 GL
3. ADDRESS OF OPERATOR		
9720 B Candelaria, NE Albuquerque, NM 87112		
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface		
1980' FNL & FEL Section 10, T19S, R32E		

16.

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other) Re-complete in Morrow

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

X

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Propose following work immediately after approval.

1. Install BOP, pull rods & tubing. TA Bone Spring zone.
2. Circulate sand off BP at 10274, pull BP.
3. Run tubing with top half of Otis on-off tool, latch on packer at 12720', load tubing with 2% KCl water, test tubing, fish Otis plug, swab well in.
4. Test and place well on sales line through compressor.

NSP UNIT #1083 FOR E & SEC. 10

RECEIVED

FEB 6 1980

U. S. GEOLOGICAL SURVEY
HOBBS, NEW MEXICO

18. I hereby certify that the foregoing is true and correct

SIGNED

TITLE

Vice President

DATE 1-31-80

(This space for Federal or State office use)


APPROVED BY

CONDITIONS OF APPROVAL, IF ANY:

TITLE

DATE

*See Instructions on Reverse Side

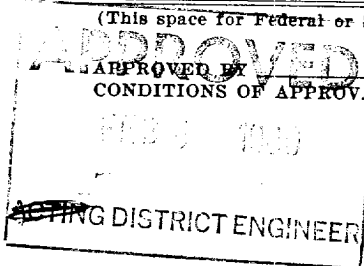

OLB 00000000000000000000

FEB 12 1980

RECEIVED