

NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANITARY	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103
Supersedes OH
C-102 and C-101
Effective 1-1-65

SUNDY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR WELLS PRODUCING FROM DIFFERENT RESERVOIR, UNLESS SPECIFICALLY INDICATED OTHERWISE.)		5a. Indicate type of Lease State ☒ Fee ☐
1. ☒ OIL WELL ☐ GAS WELL ☐ OTHER-		5. State Oil & Gas Lease No. B-4118
2. Name of Operator Atlantic Richfield Company		6. Form or Lease Name State Vacuum Unit
3. Address of Operator P. O. Box 1710, Hobbs, New Mexico 88240		9. Well No. 1
4. Location of Well UNIT LETTER M 660 FEET FROM THE South LINE AND 680 FEET FROM THE West LINE, SECTION 29 TOWNSHIP 17S RANGE 34E		10. Field and Pool, or Wildcat Vacuum Grbg SA
11. Elevation (Show whether DF, RT, CR, etc.) 4081' GR		12. County Lea

16. Check Appropriate Box To Indicate Nature of Notice, Report or Other Data	
NOTICE OF INTENTION TO: PERFORM REMEDIAL WORK ☐ TEMPORARILY ABANDON ☐ PULL OR ALTER CASING ☐ OTHER ☒ Repair 5 1/2" Csg & Convert to WIW	SUBSEQUENT REPORT OF: PLUG AND ABANDON ☐ CHANGE PLANS ☐ REMEDIAL WORK ☐ COMMENCE DRILLING OPNS. ☐ CASING TEST AND CEMENT JOBS ☐ OTHER ☐ ALTERING CASING ☐ PLUG AND ABANDONMENT ☐

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

TD 4810'. Presently completed OH 4353-4810'.

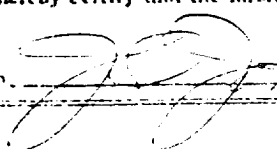
8-5/8" OD csg set @ 925' & cmtd to surface w/400 sx.

5-1/2" OD csg set @ 4353' & cmtd w/200 sx. Top estimated @ 3083'.

Propose to repair 5 1/2" OD csg hole & convert to WIW in the following manner. Change to plans on Form C-103 approved by OCC on 2/2/77.

1. Rig up, install BOP, POH w/completion assy.
2. Set RBP @ 4000' & cap w/3 sx sd. Press test 5 1/2" OD csg below 1200'.
3. Set cmt retr @ 850'.
4. Circ cmt thru holes in 5 1/2" OD csg to surf w/150 sx Light cmt w/2% CaCl.
5. Drillout & retrieve BP.
6. RIH w/3 1/2" OD NU csg w/FS & FC to TD.
7. Cmt 3 1/2" OD csg w/50 sx Thik-set cmt followed by 50 sx Cl H w/10# salt & 1% HLX-C-204. WOC.
8. Run Cement Bond Log.
9. Perforate 4 -1/2" squeeze holes above top of cmt. Run cmt retr, set above perfs.
10. Circ 5 1/2" X 3 1/2" annulus w/light cmt followed by 50 sx Cl C cmt cont'g 8#/sk salt. Drill out & test squeeze holes.
11. Perforate SA w/1 JSPF 4586-93, 4601-03, 4606-10, 4617-22 & 4625'.
12. RIH w/pkr on 2-1/16" IJ internally plastic coated tbg, set above perfs, load annulus w/TFW, install press gauge on annulus.
13. Acidize SA perfs w/2000 gals 15% HCL-NE acid cont'g iron sequestrant, convert to WIW.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED  TITLE Dist. Drig. Supt. DATE 2/10/77

ORIG. Signed by Jerry Sexton Dist 1, Supv.

APPROVED BY _____ TITLE _____ DATE _____

CONDITIONS OF APPROVAL, IF ANY:

FEB 11 1977