

UNITED STATES  
DEPARTMENT OF THE INTERIOR  
BUREAU OF LAND MANAGEMENT

**SUNDRY NOTICES AND REPORTS ON WELLS**  
*Do not use this form for proposals to drill or to re-enter an abandoned well. Use Form 3160-3 (APD) for such proposals.*

FORM APPROVED  
OMB No. 1004-0135  
Expires November 30, 2000

**SUBMIT IN TRIPLICATE - Other instructions on reverse side**


1. Type of Well <input type="checkbox"/> Oil Well <input type="checkbox"/> Gas Well <input checked="" type="checkbox"/> Other		5. Lease Serial No. NM29704
2. Name of Operator Shackelford Oil Company		6. If Indian, Allottee or Tribe Name
3a. Address P.O. Box 10665 Midland, TX	3b. Phone No. (include area code) (915) 682-9784	7. If Unit or CA/Agreement, Name and/or No. Perry Federal
4. Location of Well (Footage, Sec., T., R., M., or Survey Description) Unit letter _____: 2310 feet from the FSL line and 990 feet from the FNL line Section 23 Township 20S Range 33E NMPM County		8. Well Name and No. #1
		9. API Well No. 30-025-01757
		10. Field and Pool, or Exploratory Area
		11. County or Parish, State

**12. CHECK APPROPRIATE BOX(ES) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA**

TYPE OF SUBMISSION	TYPE OF ACTION			
<input type="checkbox"/> Notice of Intent	<input type="checkbox"/> Acidize	<input type="checkbox"/> Deepen	<input type="checkbox"/> Production (Start/Resume)	<input type="checkbox"/> Water Shut-Off
<input checked="" type="checkbox"/> Subsequent Report	<input type="checkbox"/> Alter Casing	<input type="checkbox"/> Fracture Treat	<input type="checkbox"/> Reclamation	<input type="checkbox"/> Well Integrity
<input type="checkbox"/> Final Abandonment Notice	<input type="checkbox"/> Casing Repair	<input type="checkbox"/> New Construction	<input type="checkbox"/> Recomplete	<input type="checkbox"/> Other _____
	<input type="checkbox"/> Change Plans	<input checked="" type="checkbox"/> Plug and Abandon	<input type="checkbox"/> Temporarily Abandon	
	<input type="checkbox"/> Convert to Injection	<input type="checkbox"/> Plug Back	<input type="checkbox"/> Water Disposal	

13. Describe Proposed or Completed Operation (clearly state all pertinent details, including estimated starting date of any proposed work and approximate duration thereof. If the proposal is to deepen directionally or recompleat horizontally, give subsurface locations and measured and true vertical depths of all pertinent markers and zones. Attach the Bond under which the work will be performed or provide the Bond No. on file with BLM/BIA. Required subsequent reports shall be filed within 30 days following completion of the involved operations. If the operation results in a multiple completion or recompletion in a new interval, a Form 3160-4 shall be filed once testing has been completed. Final Abandonment Notices shall be filed only after all requirements, including reclamation, have been completed, and the operator has determined that the site is ready for final inspection.)

See Attached Report

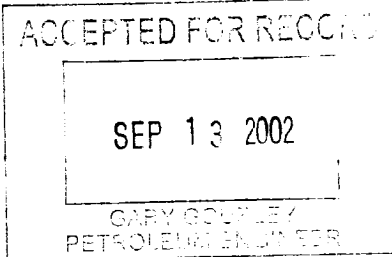

14. I hereby certify that the foregoing is true and correct  
Name (Printed/Typed)

Signature <i>[Signature]</i>	Title <i>[Signature]</i>
	Date <i>9/14/02</i>

**THIS SPACE FOR FEDERAL OR STATE OFFICE USE**

ORIGINAL SIGNED BY Approved by GARY W. WINK	Title	Date <b>SEP 18 2002</b>
Conditions of approval, if any, are attached. Approval of this notice does not warrant or certify that the applicant holds legal or equitable title to those rights in the project lease which would entitle the applicant to conduct operations thereon.	Office	

Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

## Plugging Report Perry Federal #1

8/26/02

3:00 pm

GIH with tubing tag up hard at 55 joints approximately 1815'. Turned could not get below SDFD at 8:00 pm.

8/27/02

POOH. Put on bit and scraper. GIH tagged at 1805' unable to get through. Appears that casing has collapsed. Called Chris Williams at Hobbs office of NMOCD and discussed. Chris suggested that we attempt to swedge casing open and if unsuccessful set cement retainer and pump 25sks below retainer. GIH with swedge attempted to swedge casing unable to swedge. POOH GIH with Weatherford cement retainer set at 1775' and pumped 25 sks of cement. SDFD

8/28/02

GIH with tubing to 1608' and pumped 25 sks plug at 8:30 am. Called Chris at OCD and discussed prevision previous day's operation and discussed that would be ready to tag cement at 10:30 am. GIH with tubing and tagged cement at 1475'. PU and pump cement from 400' to surface. Cut off casing and welded dry hole marker.

