

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

SUBMIT IN TRIPLICATE*
(Other instructions on re-
turns slide)

Form approved.
Budget Bureau No. 1004-0135
Expires August 31, 1985

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐	7. UNIT AGREEMENT NAME
2. NAME OF OPERATOR Conoco Inc.	8. FARM OR LEASE NAME Britt B
3. ADDRESS OF OPERATOR P.O. Box 460 - Hobbs, New Mexico 88240	9. WELL NO. No. 23
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 1980 FWL & 2080 FSL - Unit Letter K	10. FIELD AND POOL, OR WILDCAT NMEU Monument Tubb
14. PERMIT NO. 30-025-20648	11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA 3-20S-37E
15. ELEVATIONS (Show whether OF ST, GR, etc.) 3561	12. COUNTY OR PARISH Dea
	13. STATE NM

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

FRACTURE TREAT

SHOOT OR ACIDIZE

REPAIR WELL

(Other)

PULL OR ALTER CASING

MULTIPLE COMPLETE

ABANDON*

CHANGE PLANS

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

MIRU. Run csq scraper to PBTD. Circulate well w/ 9.5 ppq mud. POOH. Set CIBP at 4150' (csq collars at 4125' & 4158'). Spot ^{35'} ~~25'~~ class "C" neat cement on CIBP. Spot 135 sxs class "C" neat cement from 2700'-1400' w/ 8 bbls of mud. POOH. Shoot squeeze at 1324' & 1325' w/ 4 jsp F for total of 8 holes. POOH. Establish circulation. Pump 500 sxs of class "C" neat cement down 5 1/2" csq. If cement has not circulated after 350 sxs have been pumped, pump remaining 150 sxs down annulus. Cut off csq, install P/A marker.


- Attempt to pump cmt down behind 8 5/8" csq to bring cmt. to surface. (Current TOC @ ±130'.
- leave 50' surface plug if cmt. doesn't circulate.

*Changes were discussed w/ D.F. Finney by telecon.

18. I hereby certify that the foregoing is true and correct

SIGNED D.F. Finney

TITLE Administrative Supervisor

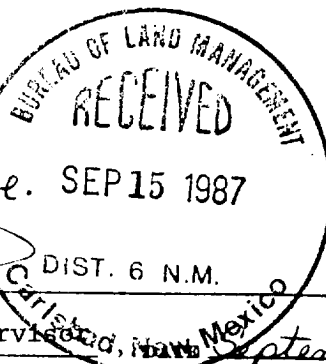

THE SPACE FOR Agency or State office use

APPROVAL OF
COMMISSIONER OF APPROVAL, IF ANY:

TITLE

DATE

9-30-87

*See instructions on Reverse Side

~~RECEIVED~~

RECEIVED
OCT 5 1987
OCD
HOBBS OFFICE