

WELL COMPLETION SKETCHES

LOCATION

Sec 8-22S-36E
660'FSL+660'FEL

WELL

Account 2 #55

FIELD

Evnice SR-Qv.5

DATE

3-25-93


☒ PRESENT COMPLETION

☐ SUGGESTED COMPLETION for P+A

PERMANENT WELL BORE DATA

WELL HISTORY

8 5/8" 24" @ 322' cmtw/300sx

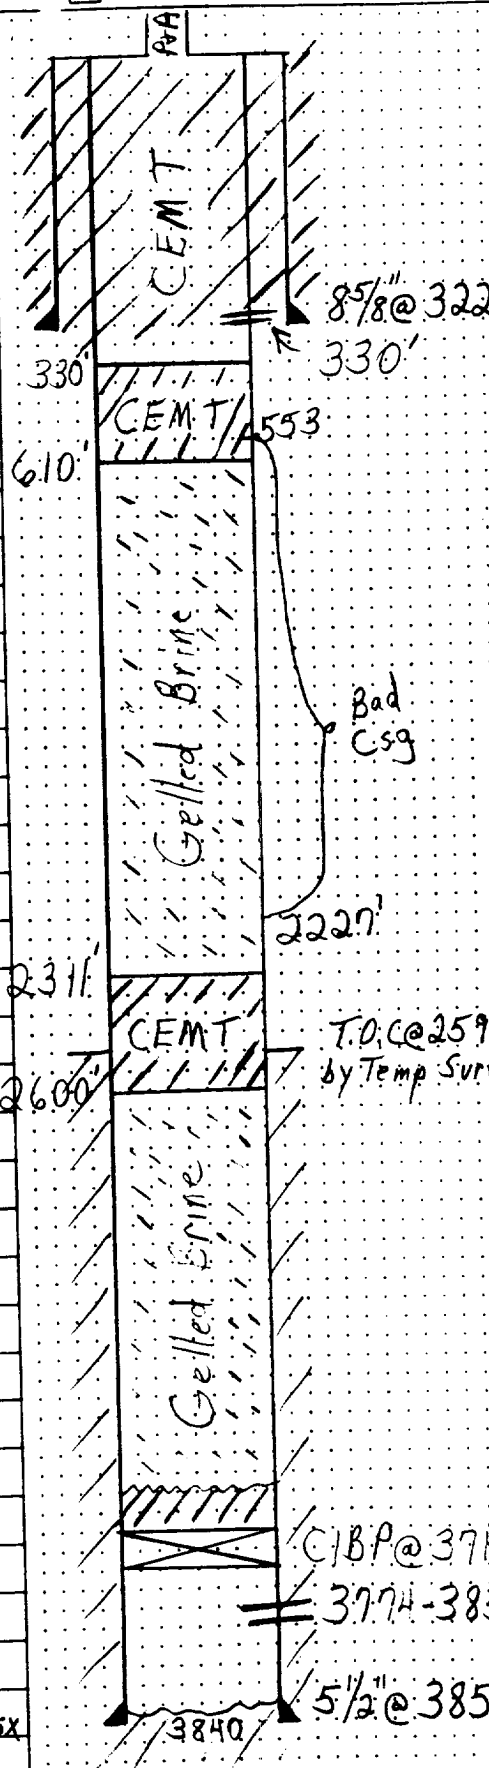

Tops: Tars. - 2980'

Notes - 3144'

Seven River - 3328'

Ojoen - 3681

Groeburg - 3836

3/61-Perf 3774-3835

Vibrofrac 3804-08

50'-20000 gal + 20000# sl

9/70-Convert to W/W

4/86-Convert to Producing

12/90-Set CIBP @ 3710

Isolate Bad Casing

f/553' to 2227'

3/93-P+A as Proposed

+ As Shown (Left)

Proposed P+A Procedure:

1) Spot 35' cement Plug on CIB

2) Circulate Hole w/ 100PPG

gelled Brine

3) Spot a 20sx Balance

Cement Plug f/2400' to 2600'

4) Spot @ 20sx Balance

Cement Plug f/400-600'

5) Perf 5 1/2" @ ±300'

6) Circulate Cement

5 1/2" up 5 1/2" 8 5/8" Annulus

7) Cut Csg 3' below GL

and set P+A marker.