

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPPLICATE
(Other instructions
reverse side)

Form approved.
Budget Bureau No. 42-R1424.

COPY TO C. C. C.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input checked="" type="checkbox"/> <i>Water Injection Well</i>		7. UNIT AGREEMENT NAME <i>NM F U</i>
2. NAME OF OPERATOR <i>Continental Oil Company</i>		8. FARM OR LEASE NAME <i>South Eureka Unit</i>
3. ADDRESS OF OPERATOR <i>P.O. Box 460, Hobbs, New Mexico 88240</i>		9. WELL NO. <i>28</i>
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface <i>660' FSL & 660' FWL of Sec. 22</i>		10. FIELD AND POOL, OR WILDCAT <i>Eureka South Eureka Basin South</i>
14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.) <i>3,514' DE</i>	11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA <i>Sec. 22, T-225 R-32E</i>
		12. COUNTY OR PARISH <i>Lea</i>
		13. STATE <i>N. Mex.</i>

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐

FRACTURE TREAT ☐

SHOOT OR ACIDIZE ☐

REPAIR WELL ☐

(Other) *Convert to Injection*

PULL OR ALTER CASING ☐

MULTIPLE COMPLETE ☐

ABANDON* ☐

CHANGE PLANS ☐

☒

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐

FRACTURE TREATMENT ☐

SHOOTING OR ACIDIZING ☐

(Other) ☐

REPAIRING WELL ☐

ALTERING CASING ☐

ABANDONMENT* ☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

It is proposed to convert this well to injection by:

1. Rig up, tag bottom and tally out.
2. If fill is encountered above 3,796', clean out to 3,823'.
3. Run 2 7/8" cement lined tubing a further, set packer at + 3,655'.
4. Place well on injection.

This waterflood authorized by NMOC Order No. P-4068

18. I hereby certify that the foregoing is true and correct

SIGNED

Robert A. Gault

TITLE *Division Office Manager*


DATE *1-4-74*

(This space for Federal or State office use)

APPROVED BY

CONDITIONS OF APPROVAL, IF ANY:

TITLE

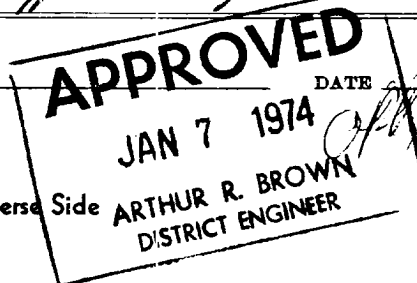

*See Instructions on Reverse Side

USGS-S, Partners-21, File