

NO. OF COPIES RECEIVED		
DISTRIBUTION		
SANTA FE		
FILE		
U.S.G.S.		
LAND OFFICE		
OPERATOR		

NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65

5a. Indicate Type of Lease	
State <input checked="" type="checkbox"/>	Fee <input type="checkbox"/>
5. State Oil & Gas Lease No.	
K-4126-1	

SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input checked="" type="checkbox"/> OTHER <input type="checkbox"/>		7. Unit Agreement Name
2. Name of Operator		8. Farm or Lease Name
TEXACO Inc.		New Mexico "DO" State
3. Address of Operator		9. Well No. (NCT-1)
P. O. Box 728 - Hobbs, New Mexico 88240		1
4. Location of Well		10. Field and Pool, or Wildcat
UNIT LETTER J, 1980 FEET FROM THE South LINE AND 1980 FEET FROM		Undesignated
THE East LINE, SECTION 18 TOWNSHIP 21-S RANGE 35-E NMPM.		
15. Elevation (Show whether DF, RT, GR, etc.)		12. County
3669' GR		Lea

Check Appropriate Box To Indicate Nature of Notice, Report or Other Data NOTICE OF INTENTION TO: SUBSEQUENT REPORT OF:

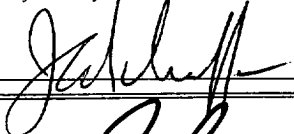

PERFORM REMEDIAL WORK <input type="checkbox"/>	PLUG AND ABANDON <input type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input checked="" type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>	CASING TEST AND CEMENT JOB <input type="checkbox"/>	

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

The following work has been completed to plug and abandon subject well:

1. Set CI bridge plug @ 11,700' in 5-1/2" casing.
2. Dump 5 sx cement on plug.
3. Shot 5-1/2" casing off at 5,440'.
4. Pulled 167 joints (5430') of 5-1/2" casing.
5. Spotted 35 sx cement plug from 5460' to 5380'.
6. Cut off casing head.
7. Spot 20 sx dcement plug at surface.
8. Set 4" dry hole marker extending 4' above ground level.
9. Clean location.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED 	TITLE Assistant District Superintendent	DATE February 8, 1971
APPROVED BY 	TITLE Geologist	DATE JUL 19 1971
CONDITIONS OF APPROVAL, IF ANY:		

RECEIVED

FEB 6 1971

OIL CONSERVATION COMM.
HOUSTON, TEX.