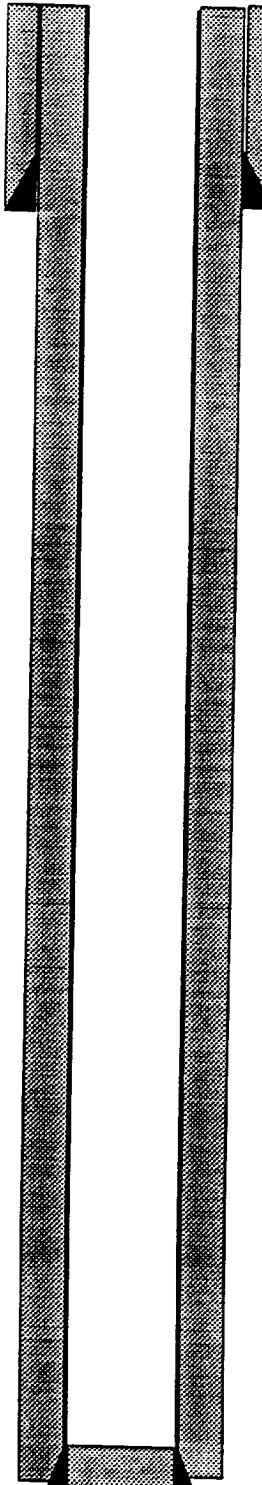


PROPOSED WELLBORE

	<u>Casing Points</u>	<u>Formation Tops</u>	<u>Mud</u>	<u>Problems</u>
	TOC Surface		<u>0-300'</u> FW Spud Mud	
	8-5/8" @ 300'		<u>300-3600</u> Brine Water	<u>Red Beds</u>
		Top Salt @ 1600		
				Deviation in salt section
		Base Salt @ 3000		
		Yates @ 3200		
		<u>QUEEN @ 3665'</u>	<u>3600'-TD</u> BW w/ starch for WL control 10-15 cc	
	5-1/2" @ TD			