
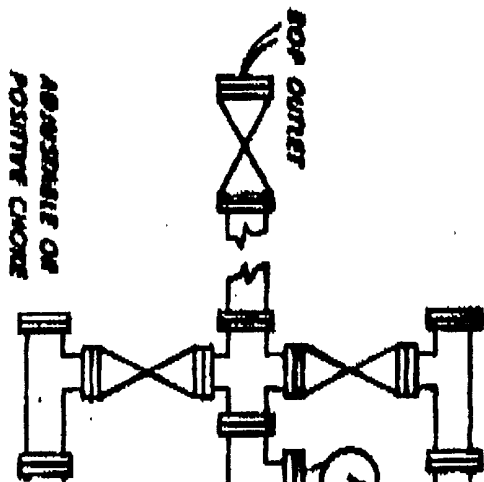


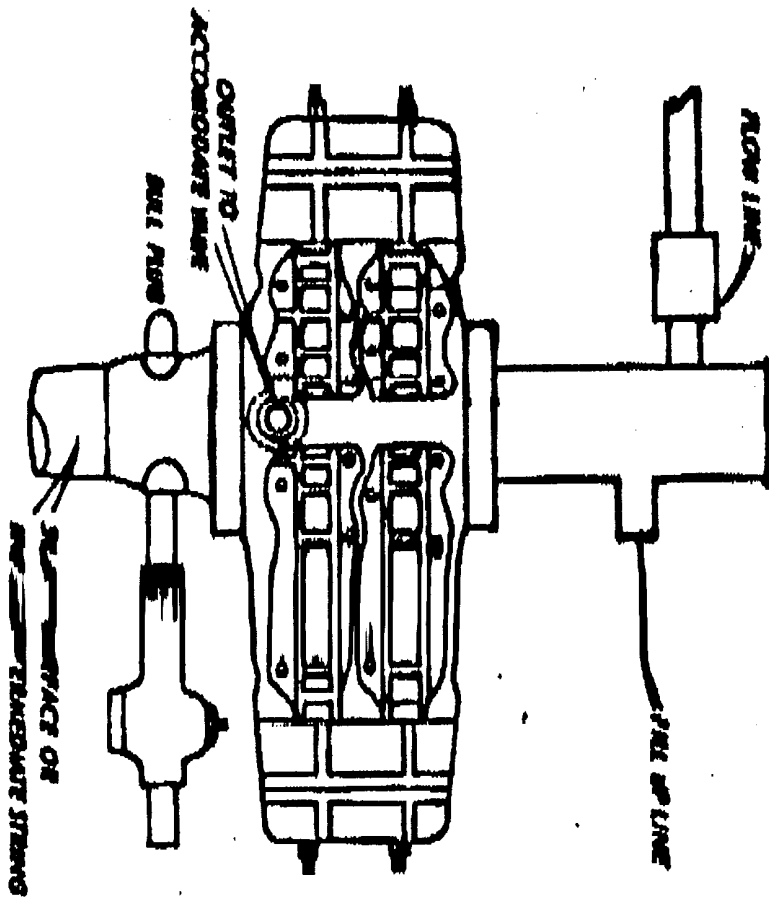

10" Cameron 3,000 ps = 1 wp

20 Feb 1992

173

RECEIVED

JAN 16 1992



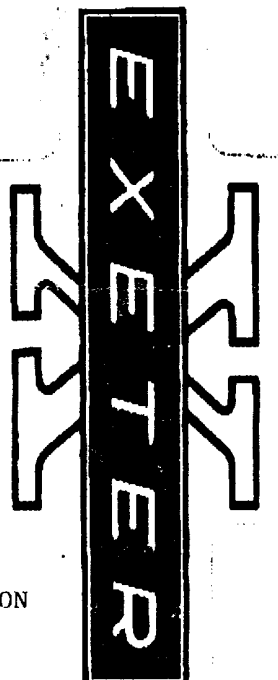


EXHIBIT "E"
HARVARD PETROLEUM CORPORATION
James Federal, Well No. 1
BOP Specifications

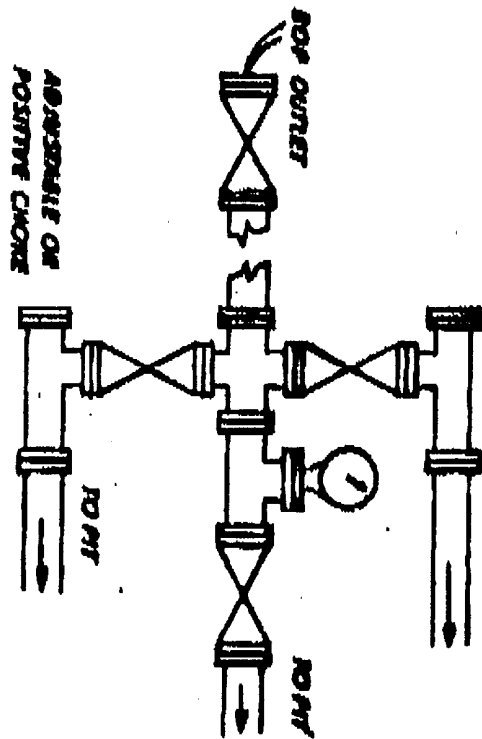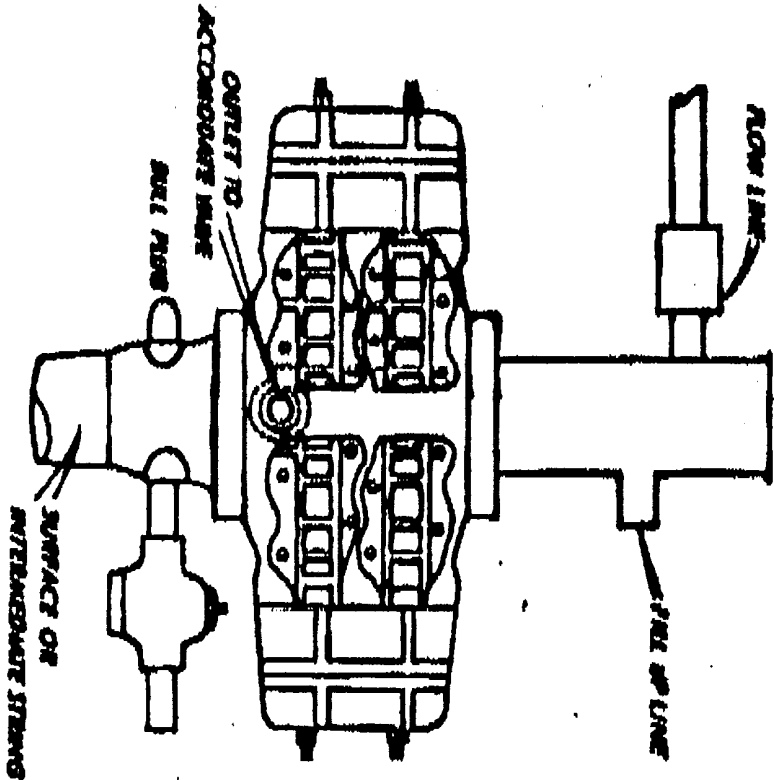

1. BOP VALVES AND ALL WORKING FITTINGS SHOULD BE IN GOOD WORKING CONDITION.
2. ALL BOLTS TO BE INSTALLED AND TIGHT.
3. ALL VALVES TO BE 300-4 W.P. OR BETTER.
4. AFTER MIPPLING UP TEST RAMS AND PRESSURE UP TO 1000 PSI FOR 15 MINUTES AND CHECK FOR POSSIBLE LEAKS.
5. ALL CREW MEMBERS TO BE FAMILIAR WITH BOP AND ACCUMULATORS.
6. KEEP WOLE FULL ON TRIPS.
7. USE ONLY FLANGE TYPE FITTINGS.
8. CHECK BOLTS FOR TIGHTNESS BEFORE 500 FT. OR ENTERING PRODUCTION ZONES.
9. WHEN DRILLING USE.
10. TOP PREVENTER DRILL PIPE RAMMS.
11. BOTTOM PREVENTER BLIND RAMMS.
12. WHEN RUNNING CASING USE.
13. TOP PREVENTER CASING RAMMS.
14. BOTTOM PREVENTER BLIND RAMMS.

10" Cameron 3,000 psi WP

173

173

RECEIVED

JAN 16 1992

173