

DISTRICT I
P.O. Box 1980, Hobbs, NM 88240

DISTRICT II
P.O. Drawer DD, Artesia, NM 88210

DISTRICT III
1000 Rio Brazos Rd., Aztec, NM 87410

OIL CONSERVATION DIVISION
P.O. Box 2088
Santa Fe, New Mexico 87504-2088

WELL API NO. 30-025-10613
5. Indicate Type of Lease STATE ☐ FEE ☒
6. State Oil & Gas Lease No.

SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE 'APPLICATION FOR PERMIT' (FORM C-101) FOR SUCH PROPOSALS.)	
1. Type of Well: OIL WELL ☒ GAS WELL ☐ OTHER ☐	7. Lease Name or Unit Agreement Name Skelly Penrose 'A' Unit
2. Name of Operator Texaco Exploration and Production Inc.	8. Well No. 18
3. Address of Operator P.O. Box 730, Hobbs, NM 88241-0730	9. Pool name or Wildcat Langlie Mattix 7RQG
4. Well Location Unit Letter C : 660 Feet From The North Line and 1980 Feet From The West Line Section 4 Township 23S Range 37E NMPM Lea County	
10. Elevation (Show whether DF, RKB, RT, GR, etc.) 3346' RF	

11. Check Appropriate Box to Indicate Nature of Notice, Report, or Other Data	
NOTICE OF INTENTION TO:	SUBSEQUENT REPORT OF:
PERFORM REMEDIAL WORK ☐	REMEDIAL WORK ☐
TEMPORARILY ABANDON ☐	ALTERING CASING ☐
PULL OR ALTER CASING ☐	COMMENCE DRILLING OPNS. ☐
OTHER: ☐	PLUG AND ABANDONMENT ☐
	CASING TEST AND CEMENT JOB ☐
	OTHER: ☐

12. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

- MIRU pulling unit. Install BOP.
- RU wireline. Run cement bond log from 2392' (top of plug) to surface. RD wireline.
- TIH w/ 2-3/8" work string to 2390'. Spot 35' plug on top of cmt retainer (approx. 6 sxs of Class "C" w/ 2% CaCl₂, 6.3 gal of water/sx, 1.32 cu.ft/sx yield).
- Pull uphole to 2350'. Load hole w/ 9.5 ppg salt gel mud (approx. 98 bbls of mud plus volume workstring).
Pull uphole to 1300' and spot a 25 sx cmt plug across top of salt from 1158'-1300' (Class "C" w/ 2% CaCl₂, 6.3 gal of water/sx, 1.32 cu.ft/sx yield).
- TOH w/ workstring. WOC.
- TIH w/ 2-3/8" work string. Tag plug and determine location of plug. TOH w/ tbq.
- RU wireline. From cement bond log determine depth to perforate squeeze holes. RD wireline.
- RU pump truck to 7" csg. Run dye in order to determine cement volume needed to circulate cement to surface and leave hole full.
- Establish circulation w/ cmt. Circulate Class "C" Neat cmt to surface and leave cmt in 7" csg to surface.
- Cut off wellhead, install dry hole marker. Clean location.
- RD workover unit and release unit.

(OVER)

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE L.W. Johnson TITLE Engr. Asst. DATE 10-01-92
TYPE OR PRINT NAME L.W. Johnson TELEPHONE NO. (505) 397-0426

(This space for State Use)
Orig. Signed by
Paul Kautz
Geologist

APPROVED BY _____ TITLE _____ DATE _____


CONDITIONS OF APPROVAL, IF ANY:

OCT 05 '92

CURRENT

RECEIVED
OCT 02 1992
OCD HOBBS OFFICE


DF: 3304'

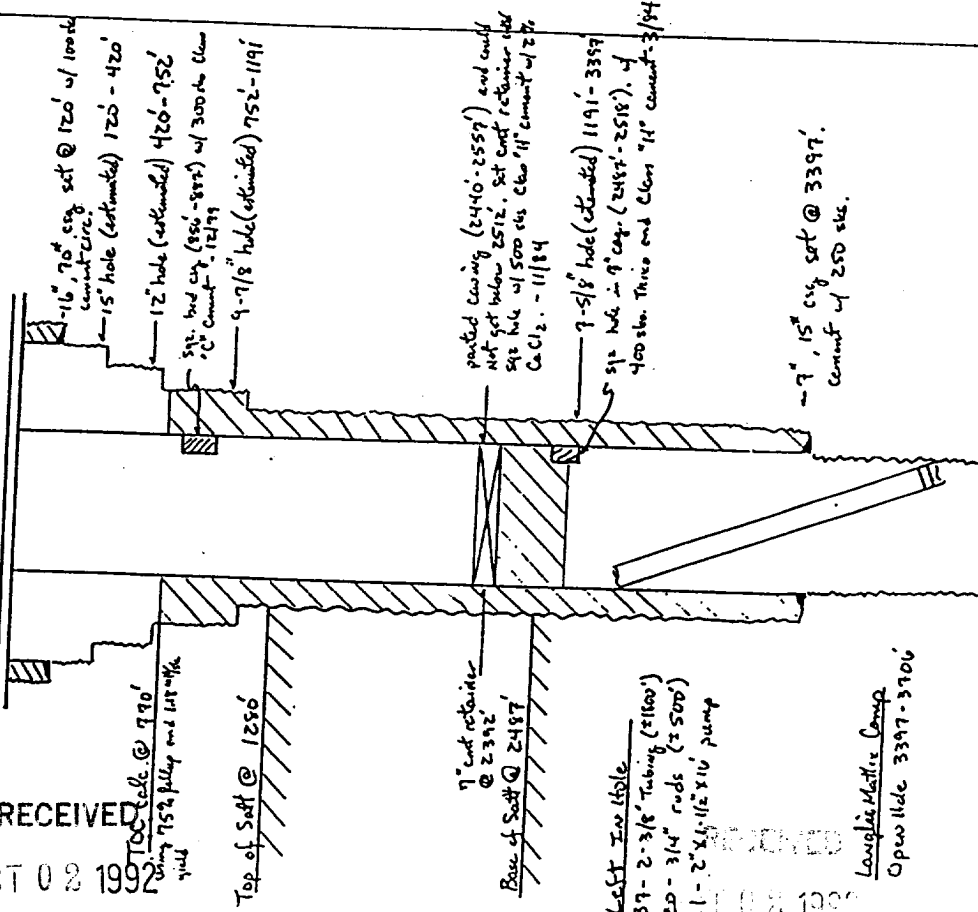

Stedley, Perseus A Unit A-118
LAT Letter C, Su 4 T-235, S-39C
-ea County, New Mexico

PROPOSED

DF: 3304'

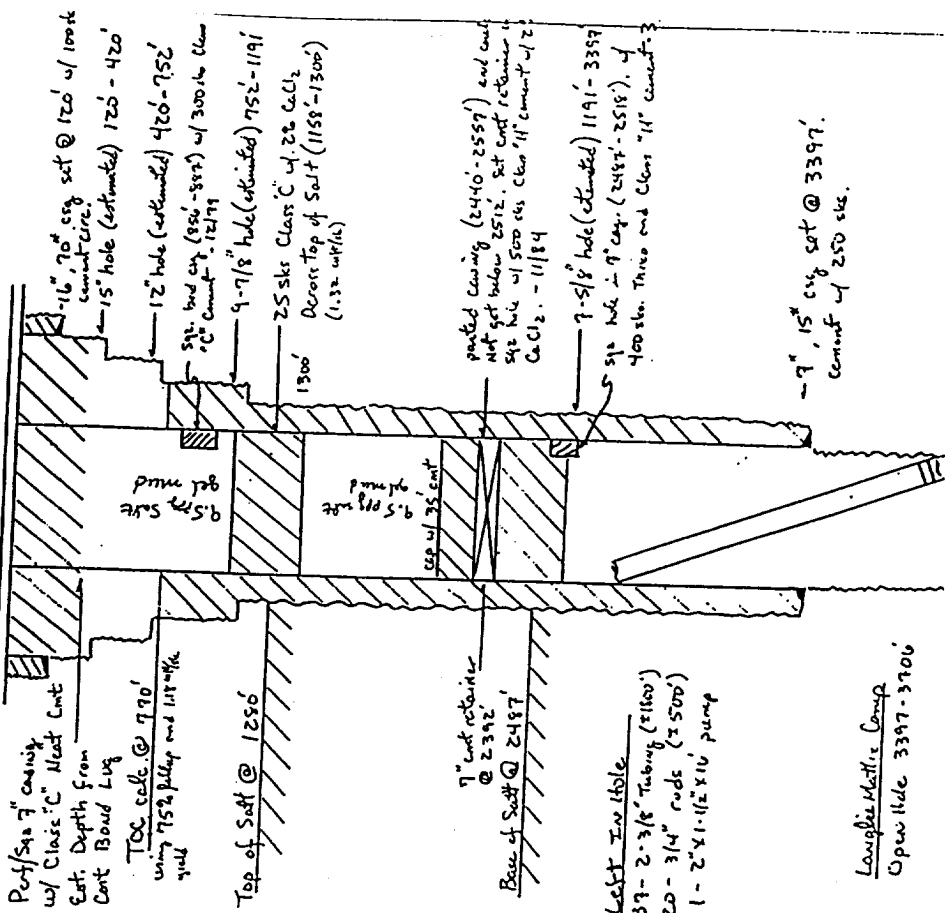

Langley M.H. Comp
Opwilde 3397-3706