

UNIT STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPPLICATE
(Other instructions on
reverse side)

Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

11-932452 (B)

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

--

7. UNIT AGREEMENT NAME

Skelly Penrose A Unit

8. FARM OR LEASE NAME

Skelly Penrose A Unit

9. WELL NO.

56

10. FIELD AND POOL, OR WILDCAT

Langlie-Matrix

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

Section 9-233-37E

12. COUNTY OR PARISH

Lea

13. STATE

New Mexico

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐

2. NAME OF OPERATOR

Skelly Oil Company

3. ADDRESS OF OPERATOR

P. O. Box 1351, Midland, Texas 79701

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.
See also space 17 below.)
At surface

660' FSL and 1980' FEL, Section 9, 233-37E

14. PERMIT NO.

--

15. ELEVATIONS (Show whether DF, RT, GR, etc.)

3292.4' GR

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

☐
☐
☐
☐
☐

PULL OR ALTER CASING

☐
☐
☐
☐
☐

FRACTURE TREAT

MULTIPLE COMPLETE

SHOOT OR ACIDIZE

ABANDON*

REPAIR WELL

CHANGE PLANS

(Other) Repair Casing Leak

☐
☐
☐
☐
☒

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

☐
☐
☐
☐
☐

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

(Other)

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.) *

This well is currently pumping below packer. Pumping difficulty is now experienced due to evidence of flood response. We propose the following work:

1. Move in and rig up workover rig. Pull rods, tubing and packer.
2. Run casing cutter and cut 4-1/2" OD casing below spool (443') at approximately 525'. Pull casing cutter.
3. Run casing sizing tool and dress casing. Pull tool.
4. Run 4-1/2" OD casing with casing bowl on bottom. Let casing in well, pull tension and set slips.
5. Test for leaks.
6. Run tubing and rods and equip to pump.

18. I hereby certify that the foregoing is true and correct

SIGNED

J. R. Ayers

(This space for Federal or State office use)

TITLE Dist. Mkt. Coordinator

DATE

June 24, 1970


APPROVED BY

CONDITIONS OF APPROVAL, IF ANY:

TITLE

DATE

*See Instructions on Reverse Side

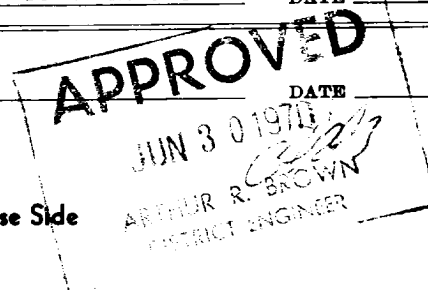

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations; and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.

RECEIVED

JUL 2 1970

U.S. DEPT. OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

WELL ABANDONMENT REPORT

WELL NO. 14670

WELL LOCATION: 14670