

NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	
FILE	
U.S.G.S.	
LAND OFFICE	
OPERATOR	

# NEW MEXICO OIL CONSERVATION COMMISSION

Form C-103  
Supersedes Old  
C-102 and C-103  
Effective 1-1-65

5a. Indicate Type of Lease  
State ☒ **Lease** Fee ☐  
5. State Oil & Gas Lease No.

## SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT -" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER- <b>Injection Well</b>	7. Unit Agreement Name <b>South Leonard Unit</b>
2. Name of Operator <b>TEXAS PACIFIC OIL COMPANY</b>	8. Farm or Lease Name <b>Tract 4</b>
3. Address of Operator <b>P. O. Box 1069 - Hobbs, New Mexico</b>	9. Well No. <b>16</b>
4. Location of Well UNIT LETTER <b>N</b> , <b>990</b> FEET FROM THE <b>South</b> LINE AND <b>1980</b> FEET FROM THE <b>West</b> LINE, SECTION <b>24</b> TOWNSHIP <b>26-S</b> RANGE <b>37-E</b> NMPM.	10. Field and Pool, or Wildcat <b>So. Leonard Queen</b>
15. Elevation (Show whether DF, RT, GR, etc.)	12. County <b>Lga</b>

## Check Appropriate Box To Indicate Nature of Notice, Report or Other Data NOTICE OF INTENTION TO: SUBSEQUENT REPORT OF:

PERFORM REMEDIAL WORK <input checked="" type="checkbox"/>	PLUG AND ABANDON <input type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	CHANGE PLANS <input type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <b>Acidize</b> <input checked="" type="checkbox"/>	CASING TEST AND CEMENT JOBS <input type="checkbox"/>	OTHER <input type="checkbox"/>

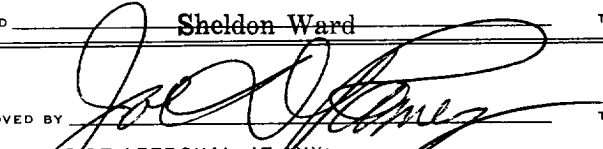
17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

Upon approval, we propose to convert above well to injection well for waterflood.

1. Move in, rig up. Pull rods & tbg. Clean out to 3480'.
2. Log 2500-3480'. Run tbg. and packer.
3. Spot 300 gal. NE acid in open-hole. Set pkr. @ 3200'.
4. Acidize open-hole w/1500 gal. NE acid. Swab.
5. Pull tbg. and pkr. Run tbg. & pkr. to 3200'.
6. Connect up well head according to standard wellhead injection diagram.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

Original Signed by

SIGNED <b>Sheldon Ward</b>	TITLE <b>Area Superintendent</b>	DATE <b>9-5-68</b>
APPROVED BY 	TITLE	DATE <b>SEP 9 1968</b>
CONDITIONS OF APPROVAL, IF ANY:		