

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir. Use Form 9-331-C for such proposals.)

1. oil ☐ gas ☒ other

2. NAME OF OPERATOR
CONTINENTAL OIL COMPANY

3. ADDRESS OF OPERATOR
P. O. Box 460, Hobbs, N.M. 88240

4. LOCATION OF WELL (REPORT LOCATION CLEARLY. See space 17 below.)

AT SURFACE: 660' FNL 1.660' FEL

AT TOP PROD. INTERVAL:

AT TOTAL DEPTH:

16. CHECK APPROPRIATE BOX TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

REQUEST FOR APPROVAL TO:

TEST WATER SHUT-OFF ☐

FRACTURE TREAT ☐

SHOOT OR ACIDIZE ☐

REPAIR WELL ☐

PULL OR ALTER CASING ☐

MULTIPLE COMPLETE ☐

CHANGE ZONES ☐

ABANDON* ☒

(other) ☐

SUBSEQUENT REPORT OF:

RECEIVED

APR 25 1979

U. S. GEOLOGICAL SURVEY

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

RECOMMENDED PROCEDURE

- 1) Rig-up well servicing unit, kill well with 10 PPG brine, if necessary.
- 2) Release packer, circulate hole with 10 PPG brine gel mud, pull tubing and packer.
- 3) Go in hole with a 7 5/8", 33.7# cement retainer on tubing and set @ 9050'. Test tubing and retainer.
- 4) Rig-up cementing service and pump 200 sacks Class "H" cement mixed 15.6 lb/gal & 1.18 ft³/sack & .2% HR-4 through retainer. Pull out of retainer and spot 10 sacks Class "H" on top of retainer.

Subsurface Safety Valve: Manu. and Type _____ Set @ _____ Ft.

18. I hereby certify that the foregoing is true and correct

SIGNED Wm. A. Lutterjell TITLE Admin. Supv DATE 4-20-79

(This space for Federal or State office use)

APPROVED BY _____ TITLE _____

CONDITIONS OF APPROVAL, IF ANY:


USGS 5

BASS.

B.M. LOWE.

Phillips.

*See Instructions on Reverse Side

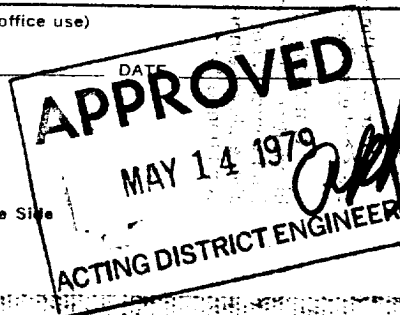

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.

- 5) Spot 45 sacks Class "H" cement from 5268' to 5068'.
- 6) Pull tubing out of hole.
- 7) Prepare to cut-off and pull 7 5/8" casing. Top of cement by temperature survey is 3780'. Pick up on 7 5/8" casing and determine free point.
- 8) Go in hole and shoot casing off 50' above free point. Pull and lay down 7 5/8" casing.
- 9) Go in hole with tubing open-ended and spot 50 sacks Class "C" cement, 14.8 PPG, with 2% CaCl₂ from 75' below 7 5/8" casing cut off point to 75' above cut off point.
- 10) Spot a 90 sack Class "C" cement plug from 1300' to 1100' (top of anhydrite 1200').
- 11) Spot a 25 sack Class "C" cement plug from 50' to surface and erect a dry hole marker.