

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TR
(Other instructi
verse side)

CATE*
on re

Form approved.
Budget Bureau No. 42-R142

5. LEASE DESIGNATION AND SERIAL NO.

LC-032874-a

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

G. L. Erwin 'A' Federal

9. WELL NO.

1

10. FIELD AND POOL, OR WILDCAT

Justis Blinebry

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

Sec. 35, T-24-S, R-37-E

12. COUNTY OR PARISH
Lea

13. STATE
New Mexico

SUNDRY NOTICES AND REPORTS ON WELLS
(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐

2. NAME OF OPERATOR
TEXACO Inc.

3. ADDRESS OF OPERATOR

P.O. Box 728, Hobbs, New Mexico 88240

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
At surface Well located 330' from the South Line and
2310' from the West Line of Section 35, T-24-S, R-37-E, Lea
County, New Mexico.

14. PERMIT NO.
Regular

15. ELEVATIONS (Show whether DF, RT, GR, etc.)
3176 (DF)

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐

FRACTURE TREAT ☐

SHOOT OR ACIDIZE ☐

REPAIR WELL ☐

(Other) ☐

PULL OR ALTER CASING ☐

MULTIPLE COMPLETE ☐

ABANDON* ☐

CHANGE PLANS ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐

FRACTURE TREATMENT ☒

SHOOTING OR ACIDIZING ☒

(Other) ☐

REPAIRING WELL ☐

ALTERING CASING ☐

ABANDONMENT* ☐

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

The following work has been completed on subject well:

1. Pull RBP @5410'.
2. Acidize w/750 gal 15% HCL in 3 equal stages w/40# unibead between stages.
3. Frac w/20,000 gal gelled lse crude in 3 stages containing 1# 20/40 sand per gal, 25#/1000 gal Mark II Adomite and 60#/1000 gal gelling agent. Use unibeads as blocking agent.
4. Swab, retrieve bridge plug @5620', test and return to production.

18. I hereby certify that the foregoing is true and correct

SIGNED

Assistant District


TITLE Superintendent

DATE April 21, 1970

(This space for Federal or State office use)

APPROVED BY
CONDITIONS OF APPROVAL, IF ANY:

TITLE

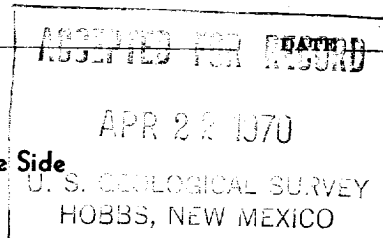

*See Instructions on Reverse Side

RECEIVED

APR 22 1980

01 10 10 10 10 10