

DEPARTMENT OF THE INTERIOR (Other Instructions on Reverse Side)
BUREAU OF LAND MANAGEMENT

Expires August 31, 1985

SUNDRY NOTICES AND REPORTS ON WELLS RECEIVED

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir. Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐	5. LEASE DESIGNATION AND SERIAL NO. <u>LC-0325816</u>
2. NAME OF OPERATOR <u>Conoco Inc.</u>	6. IF INDIAN, ALLOTTEE OR TRIBE NAME
3. ADDRESS OF OPERATOR <u>P.O. Box 460 - Hobbs, New Mexico 88240</u>	7. UNIT AGREEMENT NAME <u>'89</u>
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) <u>990' FNL & 2310' FWL - Unit Letter C</u>	8. FARM OR LEASE NAME <u>Sholes B-19</u>
14. PERMIT NO. <u>30-025-11624</u>	9. WELL NO. <u>2</u>
15. ELEVATIONS (Show whether DR, RT, CR, etc.)	10. FIELD AND POOL, OR WILDCAT <u>Jalmat Yates Tr</u>
16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data	11. SEC., T., R., W., OR BLK. AND SURVEY OR AREA <u>19-25S-37E</u>
	12. COUNTY OR PARISH <u>Lea</u>
	13. STATE <u>NM</u>

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐
FRACTURE TREAT ☐
SHOOT OR ACIDIZE ☐
REPAIR WELL ☐
(Other) ☐

PULL OR ALTER CASING ☐
MULTIPLE COMPLETE ☐
ABANDON* ☒
CHANGE PLANS ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐
FRACTURE TREATMENT ☐
SHOOTING OR ACIDIZING ☐
(Other) ☐

REPAIRING WELL ☐
ALTERING CASING ☐
ABANDONMENT* ☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting and proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

1. Rig up & Kill well if necessary
2. RIH w/ 2 3/8" Hg to 2880' and circulate hole w/ mud
3. Spot 10 sx plug 2750'-2650' to isolate top of Yates at 2800' & the 5 1/2" csq shoe at 2700'. Tag TOC.
4. Spot 5 sx plug 1450'-1400' to isolate top of salt at 1425'. Spot 2 Solbs 15% HCL-NE-FE from 1150'-1050'. POOH.
5. RIH w/ CCL & perf gun. Correlate to depth w/ 7 1/8" csq shoe at 1090' perf 5 1/2" csq at 1150'.
6. Establish circulation up annulus. Pump 200 sx cement down csq displace to 1040' w/ 24 bbls mud. Wait on cement.
7. Tag plug at 1040' & fill if necessary. This isolates casing shoe at 1090'.
8. Spot 5 sx plug 50'-0' to isolate surface. Cut off casing.
9. Install P&R marker. For further information contact Brian Horanoff at 397-15867

18. I hereby certify that the foregoing is true and correct

SIGNED DE FINNEY

TITLE Administrative Supervisor

DATE January 12, 1989

(This space for Federal or State office use)

APPROVED BY DE FINNEY
CONDITIONS OF APPROVAL, IF ANY, INDICATE

TITLE

DATE 1-27-89

*See Instructions on Reverse Side

Title 18 U.S.C. Section 1001, makes it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.
B.M. Caislad (6) ARCO (2) Amoco (2) Chevron (1) F&E

RECEIVED

JAN 30 1989

OCD
HQSBS OFFICE

LOCATION: 990' ENL & 2310' FWL
 SEC. 19, T-25S, R-37E
 LEA Co., NM

- 5sx cement plug from 0-50' to isolate surface.

7 5/8", 24#, H-40

@ 1020' (circ.) w/ 57 sx

- 10sx cement plug from 1040'-1150' to isolate shoe.

Perfs @ 1150' and cement circ. to surface

T.O.C. @ 1165' (T.S.)

T. SALT @ 1425'

- 5 sx cement plug from 1400'-1450' to isolate top of salt.

B. SALT @ 2200'

5 1/2", 17#, H-40

@ 2100' w/ 350 sx

T. YATES @ 2800'


- 10 sx cement plug to isolate Yates and shoe.
 from 2650'-2750'.

* This procedure approved by Shannon
 Shaw - Engineer - BLM, Roswell on 1/9/89
 via telecon with Brian Horanoff

FILL @ 2889'

TD 3000'

SHOLES B-19 No. 2 - Proposed P&A
 BAH - 1/9/89

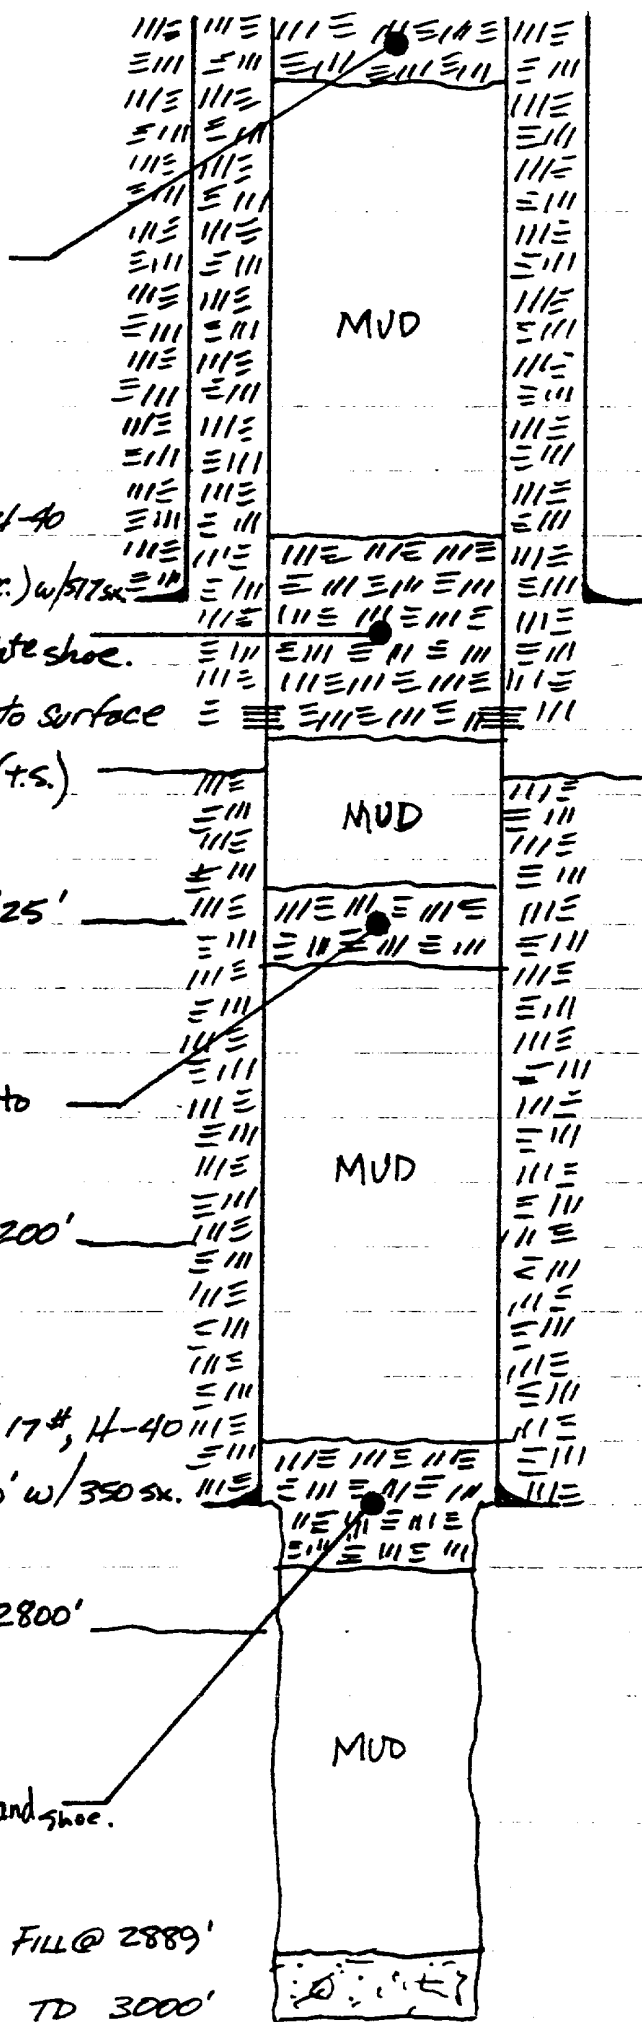

RECEIVED

JAN 30 1989

OCD
HOBBS OFFICE