


UNITED STATES  
DEPARTMENT OF THE INTERIOR  
BUREAU OF LAND MANAGEMENT  
NEW MEXICO  
HOBBS, NEW MEXICO 88240

Form approved.  
Budget Bureau No. 1004-0135  
Expires August 31, 1985

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.  
Use "APPLICATION FOR PERMIT" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐  
2. NAME OF OPERATOR  
Getty Oil Company  
3. ADDRESS OF OPERATOR  
P.O. Box 730, Hobbs, New Mexico 88240  
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.  
See also space 17 below.)  
At surface  
660' FNL & 1880' FEL Section 24

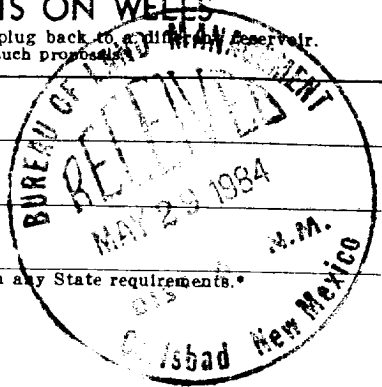

5. LEASE DESIGNATION AND SERIAL NO.  
LC 032650 (b)  
6. IF INDIAN, ALLOTTEE OR TRIBE NAME  
7. UNIT AGREEMENT NAME  
8. FARM OR LEASE NAME  
A.B. Coates "C"  
9. WELL NO.  
8  
10. FIELD AND POOL, OR WILDCAT  
Justis Blinebry  
11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA  
Section 24, 25S, 37E  
12. COUNTY OR PARISH  
Lea  
13. STATE  
NM

14. PERMIT NO.  
15. ELEVATIONS (Show whether DF, RT, GR, etc.)  
3083' D.F.

16.

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

SUBSEQUENT REPORT OF:

TEST WATER SHUT-OFF ☐  
FRACTURE TREAT ☐  
SHOOT OR ACIDIZE ☐  
REPAIR WELL ☐  
(Other) ☐  
PULL OR ALTER CASING ☐  
MULTIPLE COMPLETE ☐  
ABANDON\* ☐  
CHANGE PLANS ☐

WATER SHUT-OFF ☐  
FRACTURE TREATMENT ☐  
SHOOTING OR ACIDIZING ☐  
(Other) ☐  
REPAIRING WELL ☐  
ALTERING CASING ☐  
ABANDONMENT\* ☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.) \*

We propose to plug and abandon as follows:

1. Set CIBP at  $\pm 5000'$  w/35' cement on top.
2. Spot cement plug @ 3386'; 100' or 20 sxs.
3. Perforate 2 holes @  $\pm 1100'$  (top of salt) pump 330 sxs. until cement is circulated, leaving 7" casing full of cement.
4. Install dry hole marker.
5. Clean and restore location.

18. I hereby certify that the foregoing is true and correct

SIGNED Dale R. Crockett TITLE Area Superintendent

DATE 5/21/84

(This space for Federal or State office use)

APPROVED BY R. P. Ritchie TITLE P.E.

DATE 6/15/84

CONDITIONS OF APPROVAL, IF ANY:

0+6-BLM-Carlsbad, 1-Mr. J.A.-Midland

1-File, 1-Engr JM, 1-Foreman CK

\*See Instructions on Reverse Side

RECEIVED  
JUN 19 1984  
P.C.  
HOMES OFFICE