

JUL 22 3 23 AM '69

Form 9-311
(May 1963)UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEYSUBMIT IN TRIPlicate
(Other instructions on
reverse side)Form approved.
Budget Bureau No. 42-R1424.

5. LEASE DESIGNATION AND SERIAL NO.

NM 12-1000 0349952

6. IF INDIAN, ALGONQUIN OR TRIBAL NAME

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐		7. UNIT AGREEMENT NAME	
2. NAME OF OPERATOR		W. Dollarhide Drinkard Unit	
3. ADDRESS OF OPERATOR		8. FARM OR LEASE NAME	
P. O. Box 730, Hobbs, New Mexico 88240		W. Dollarhide Drinkard Unit	
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface		9. WELL NO.	
990' FNL & 2310' FNL Sec. 19-248-382		1	
14. PERMIT NO.		10. FIELD AND POOL, OR WILDCAT	
-		Dollarhide Tubb-Drinkard	
15. ELEVATIONS (Show whether DF, RT, GR, etc.)		11. SEC., T., R., MC, OR BLK. AND SURVEY OR AREA	
Unknown		19-248-382	
		12. COUNTY OR PARISH	
		Lea	
		13. STATE	
		New Mexico	

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

☐
☐
☐
☐

PULL OR ALTER CASING

☐
☐
☐
☐

FRACTURE TREAT

MULTIPLE COMPLETE

SHOOT OR ACIDIZE

ABANDON*

REPAIR WELL

CHANGE PLANS

(Other) Convert to water injection

☒

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

☐
☐
☐

REPAIRING WELL

☐
☐
☐

FRACTURE TREATMENT

ALTERING CASING

SHOOTING OR ACIDIZING

ABANDONMENT*

(Other)

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

- 1) Move in and rig up pulling unit.
- 2) Pull rods and tubing.
- 3) Run tubing and set packer.
- 4) Rig down and connect to injection system.
After reservoir begins to pressure up, then:
- 5) Rig up pulling unit and pull tubing and packer.
- 6) Run tubing with bit and clean out to T.D.
- 7) Pull tubing and bit.
- 8) Run tubing and set packer.
- 9) Fill annulus with inhibited fluid.

ILLEGIBLE

18. I hereby certify that the foregoing is true and correct

SIGNED

TITLE District Production Mgr.

DATE

7-15-69


(This space for Federal or State office use)

APPROVED BY

TITLE

CONDITIONS OF APPROVAL, IF ANY:

*See Instructions on Reverse Side

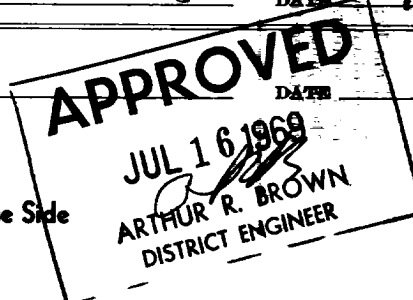

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between, and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.

U.S. GOVERNMENT PRINTING OFFICE: 1983-O-885229
GPO 937-499 887-881