

Chart 3

J.A. Stuart #8

On 9A 3-15-67 Off 3-16-67

Blinebry Build-up 161 psi DWT
Tubb-Drinkard Build-up 298 psi DWT

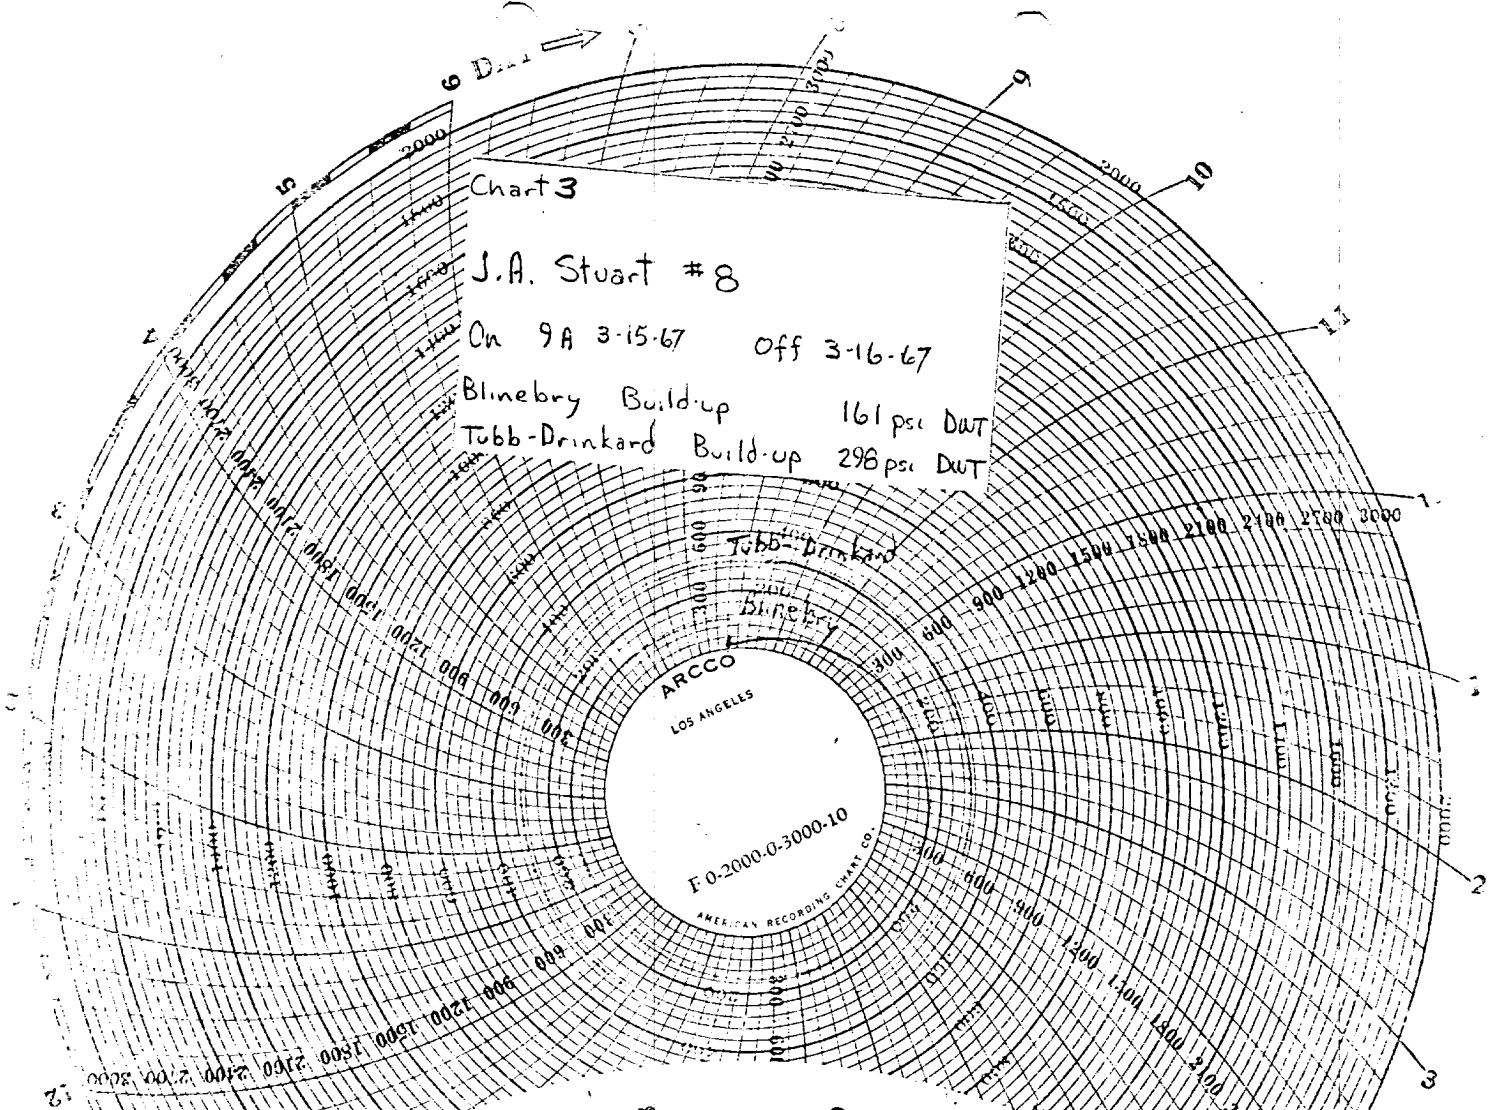


Chart 4

J.A. Stuart #8

On 9A 3-16-67 Off 10A 3-17-67

Blinebry Shut-In 87 psi DWT
Tubb-Drinkard Pumping 39 psi DWT

