


LL WORK RECOMMENDATIONS
Proposals for Well Reconditioning and Subsurface Maintenance
Workovers, Expense DD's, PB's, and Conversions

Lease: LAUREL MATIX QUEEN UNIT Well No. 22
Field: LAUREL MATIX (QUEEN)
County: LEA State: NEW MEXICO

RECOMMENDED PROCEDURE:

1. PULL INJECTION EQUIPMENT AND CLEAN OUT
TO PBTD (3615').
2. SET CEMENT RETAINER AT APPROXIMATELY 3400'
AND SQUEEZE QUEEN PERFORATIONS (3401'-3573'-161'
OA-20 Holes) WITH CLASS H CEMENT. TEST, SQUEEZE
JOB AND RESQUEEZE IF NECESSARY.
3. RUN 2 3/4" CL. TUBING AND INJECTION PACKER. SET PACKER
AT 3320'. LOAD THE TUBING CASING ANNULUS
WITH FRESH WATER TREATED WITH 10 GPM of GELTAN
2207 PER 1000 GALS OF WATER.
4. PUT THE WELL ON INJECTION.

DIAGNOSTIC WELL LOG
 LANGLEY-MATIX GOLDEN UNIT, Well No. 22 W1W
 LANGLEY-MATIX (GOLDEN) FIELD
 LEA COUNTY, NEW MEXICO

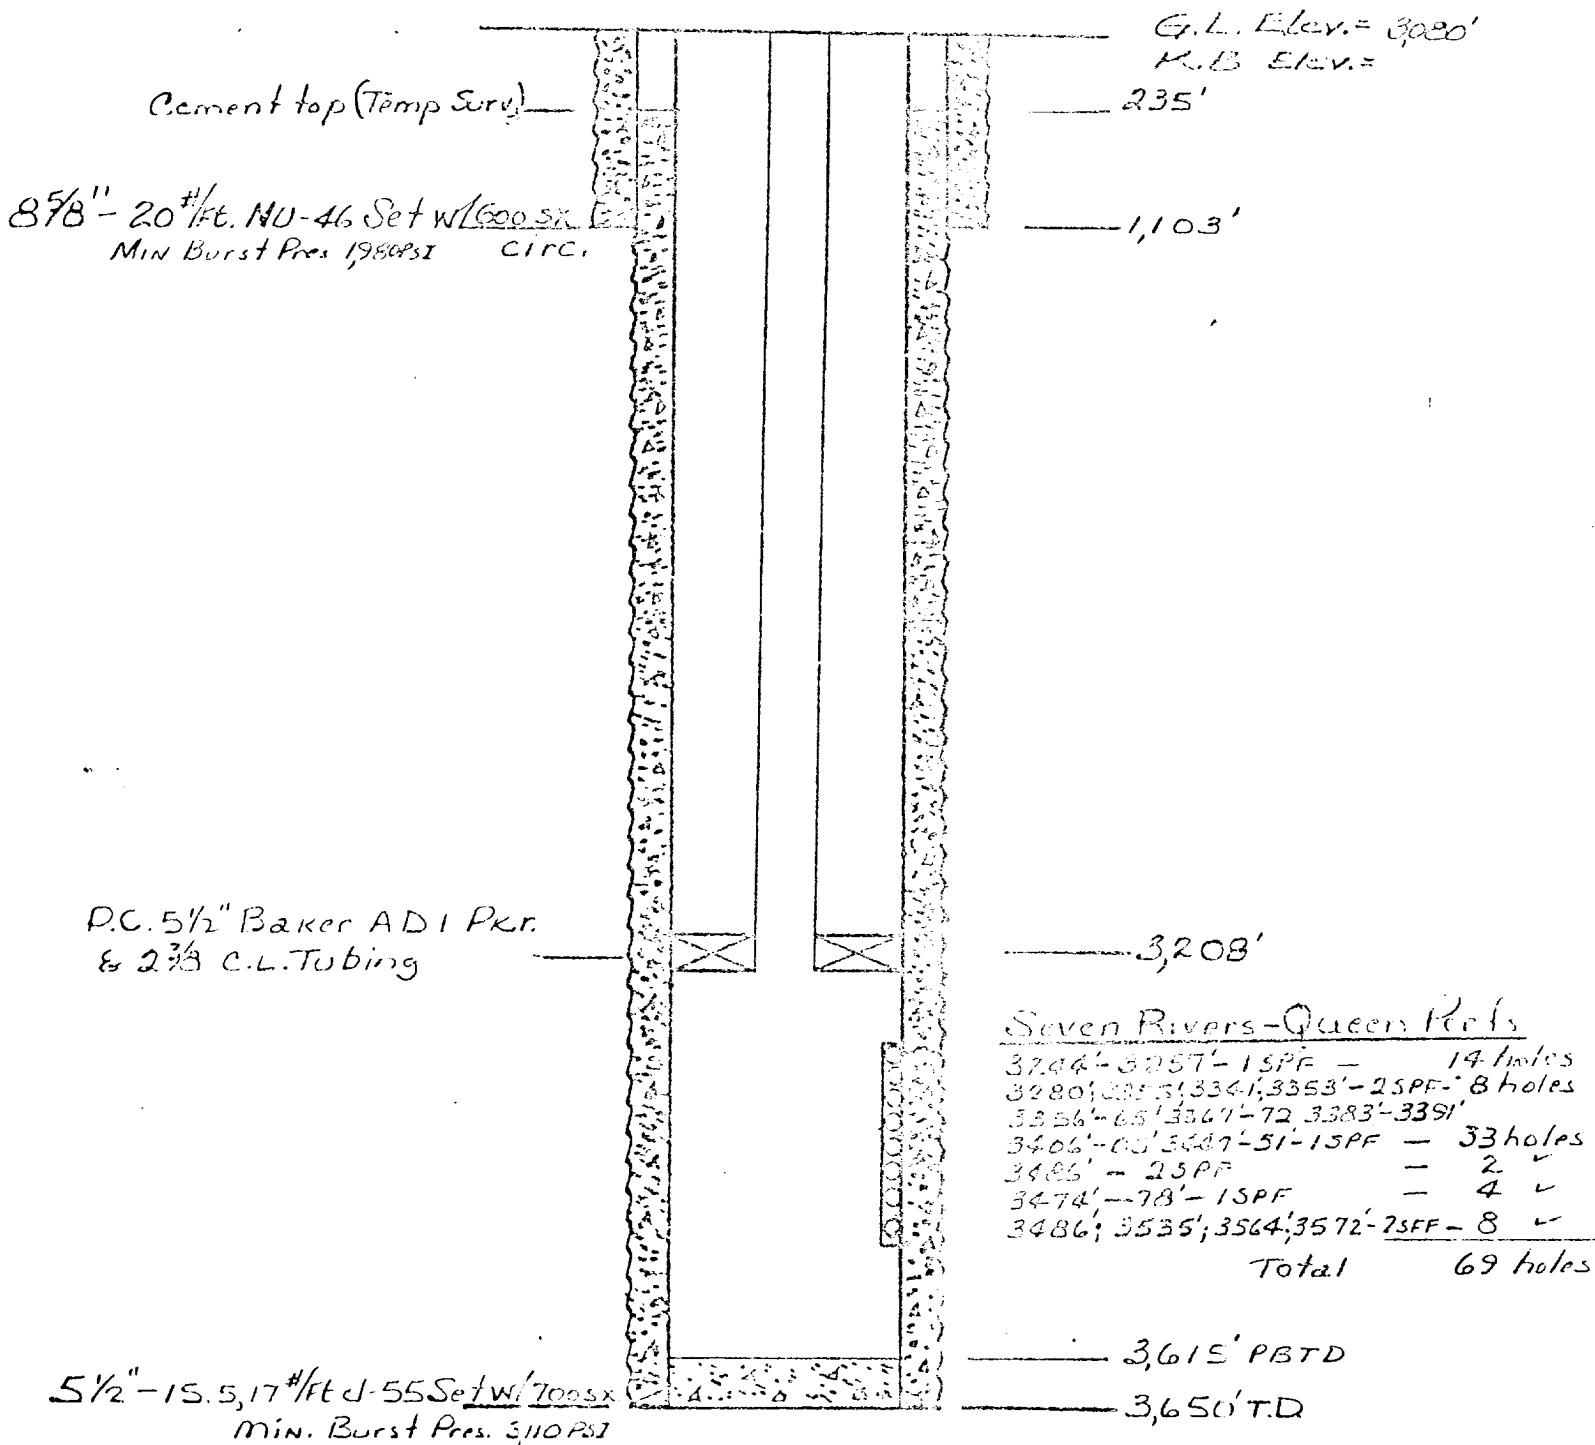

8-5-71
 IEW

(-300 ≈ 3380)