

Form 3160-5
(November 1983)
(Formerly 9-331)

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

SUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)

Form approved.
Budget Bureau No. 1004-0135
Expires August 31, 1985

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☒ GAS WELL ☐ OTHER ☐

2. NAME OF OPERATOR
PENROC OIL CORPORATION

3. ADDRESS OF OPERATOR
P. O. BOX 5970, HOBBS NM 88241-5970

4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.*
See also space 17 below.)
At surface
Unti letter F, 1650' FNL, 1650' FWL

14. PERMIT NO.
30-025-25621

15. ELEVATIONS (Show whether DF, RT, GR, etc.)
3164-9' GR

5. LEASE DESIGNATION AND SERIAL NO.

NM 14213

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME

Langlie

9. WELL NO.

1

10. FIELD AND POOL, OR WILDCAT

Langlie Mattix/7 River ^{QNGB} ~~on 61~~

11. SEC., T., R., M., OR BLK. AND
SURVEY OR AREA

Sec. 9, T-25-S, R-37-E

12. COUNTY OR PARISH 13. STATE

Lea

NM

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF

☐
☐
☐
☐
☐

PULL OR ALTER CASING

☐
☐
☒
☐
☐

FRACTURE TREAT

MULTIPLE COMPLETE

SHOOT OR ACIDIZE

ABANDON*

REPAIR WELL

CHANGE PLANS

(Other)

SUBSEQUENT REPORT OF:

WATER SHUT-OFF

☐
☐
☐
☐
☐

FRACTURE TREATMENT

SHOOTING OR ACIDIZING

(Other)

REPAIRING WELL

ALTERING CASING

ABANDONMENT*

☐
☐
☐
☐
☐

(NOTE: Report results of multiple completion on Well
Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Please see attached well bore sketch. Plans are to P & A this well as follows:

1. RU Well Service Unit. Pull rods & pump.
2. Pull tbgs. TIH w/ 5½" CIBP. Set @ 3380' +.
Spot 35' cement on top of the plug.
3. Rig up pump truck & circulate hole w/ 9.2# gelled
brine. Spot 25 sx. cement plug @ 2150' +.
4. Pull up @ spot 25 sx. cement plug @ 830. TAG PLUG.
5. Pull up @ spot 10 sx. surface plug. Cut off well head
deadman. Install dry hole marker. Move tubulars, pumpjack &
tank battery. Clean up location.

RECEIVED
DEC 26 10 33 AM '91
CARPENTERS
AREA

18. I hereby certify that the foregoing is true and correct

SIGNED

[Signature]

TITLE President

DATE 12/24/91

(This space for Federal or State office use)

APPROVED BY

TITLE

DATE 1/2/92

CONDITIONS OF APPROVAL, IF ANY:

Notify BLM ---

RECEIVED

JAN 07 1992

MOBILE OFFICE


LANGLIE FEDERAL NO.

SE/4, NW/4, Sec. 9, T25S, R37E

LEA COUNTY, NEW MEXICO

PRESENT

PROPOSED

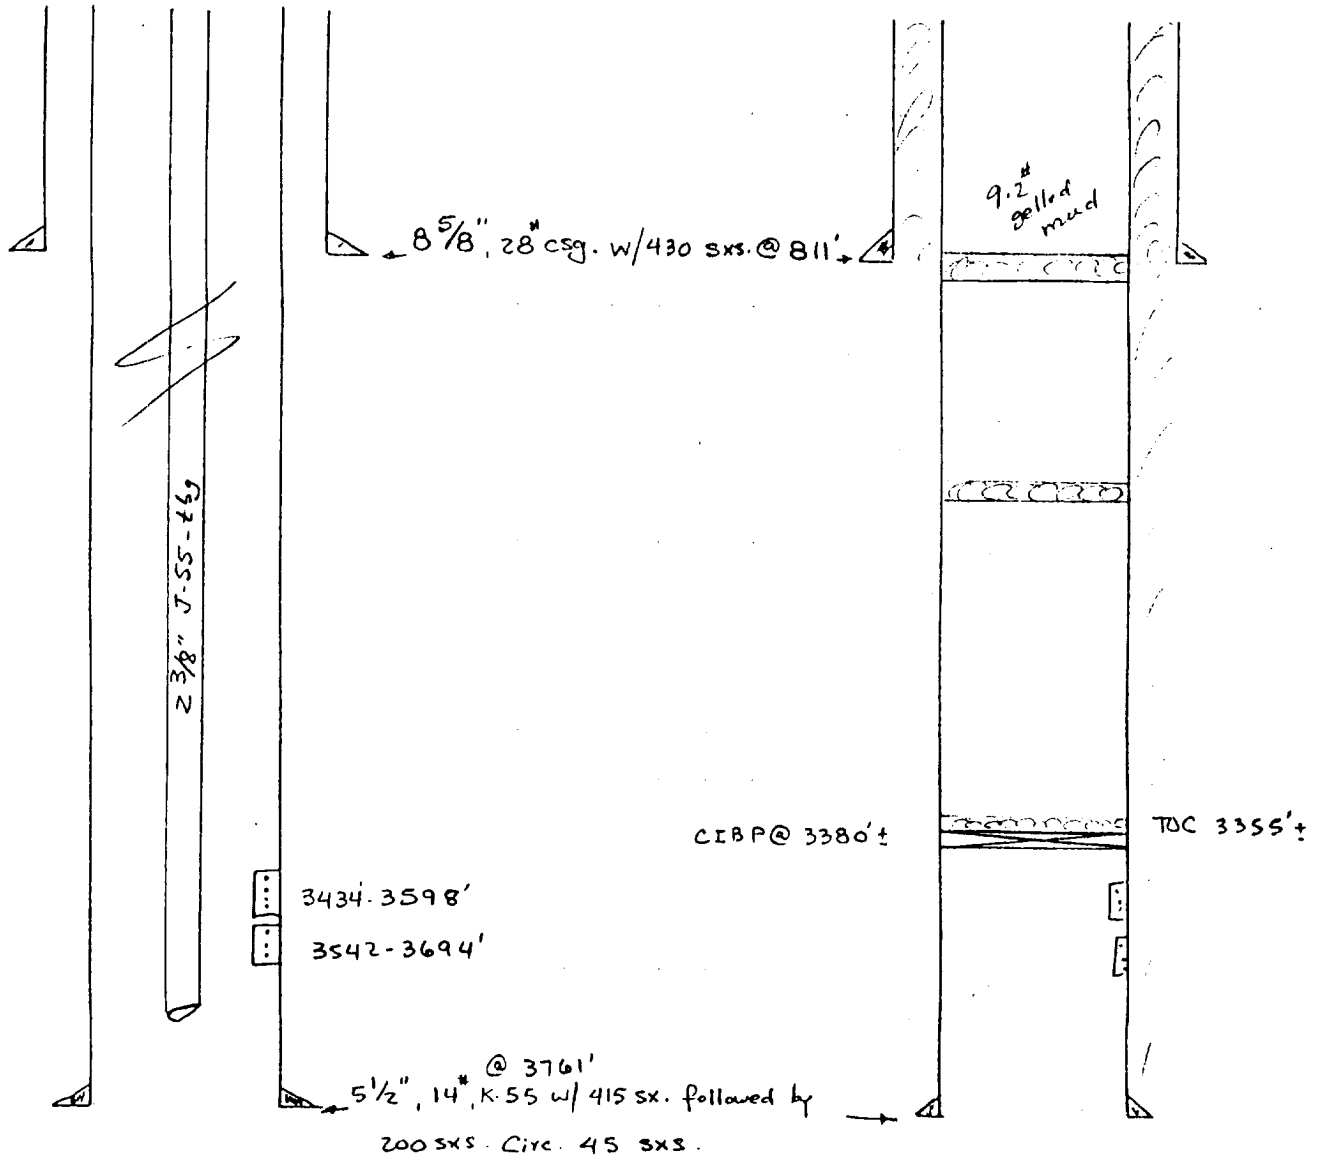

RECEIVED

JAN 07 1992

POSTAL OFFICE