

UNITED STATES  
DEPARTMENT OF THE INTERIOR  
BUREAU OF LAND MANAGEMENT

BLM - CARLSBAD  
RECEIVED

FORM APPROVED  
Budget Bureau No. 1004-0135  
Expires: March 31, 1993

**SUNDRY NOTICES AND REPORTS ON WELLS**

Do not use this form for proposals to drill or to deepen or reentry for a different reservoir  
Use "APPLICATION FOR PERMIT—" for such proposals

5. Lease Designation and Serial No.

NMLC032618A

6. If Indian, Allottee or Tribe Name

7. If Unit or CA, Agreement Designation

8. Well Name and No.

I.B. Ogg A #1

9. API Well No.

300250970000S1

10. Field and Pool, or Exploratory Area

Jalmat T-1-SR

11. County or Parish, State

Lea County, New Mexico

**SUBMIT IN TRIPLICATE**

1. Type of Well

☒ Oil Well ☐ Gas Well ☐ Other

2. Name of Operator

Convect Energy Corporation

3. Address and Telephone No.

2401 Fountain View Dr., Suite 700, Houston, TX 77057

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)

1980' FNL & 1980' FEL, Sec 35, T24S, R36E

12. CHECK APPROPRIATE BOX(s) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

- ☒ Notice of Intent  
☐ Subsequent Report  
☐ Final Abandonment Notice

TYPE OF ACTION

- ☒ Abandonment  
☐ Recompletion  
☐ Plugging Back  
☐ Casing Repair  
☐ Altering Casing  
☐ Other  
☐ Change of Plans  
☐ New Construction  
☐ Non-Routine Fracturing  
☐ Water Shut-Off  
☐ Conversion to Injection  
☐ Dispose Water

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)\*

**PLUGGING PROCEDURE**

1. Notify BLM of Plugging, **PRIOR TO ANY WORK, AT (505)393-3612.**
2. MI&RU Rig. POH w/ production eqpt, LD everything except tubing.
3. GIH & set CIBP @ 3,370'. Spot 50' cement on top of CIBP.

4. Spot cement plugs as below. Circ 9.0 ppg mud in intervals between plugs.

**PERFORATE AS NECESSARY TO PLACE THE FOLLOWING PLUGS:**

Cement plug from ~~2450' to 2350'~~ **2931'-2831'** INSIDE AND OUTSIDE THE 7" CSG.  
from ~~1400' to 1300'~~ **964'-864'** INSID THE 7", 9", AND 12 1/2" CSGS.  
from 100' to surface **TAG PLUG.**

Circulate or pump cement from 100' to surface in all casing annuli.

5. Cut off casings 4' below ground level, weld on 1/2" steel plate with marker. Backfill & restore location.

14. I hereby certify that the foregoing is true and correct

Signed

Title Sr. Petroleum Engineer

Date 8/20/91

(This space for Federal or State office use)


Approved by

Title

Date 9/23/91

Conditions of approval, if any:

Well: I.B. Ogg A #1  
TD.: 3523'  
Elevation: 3278'

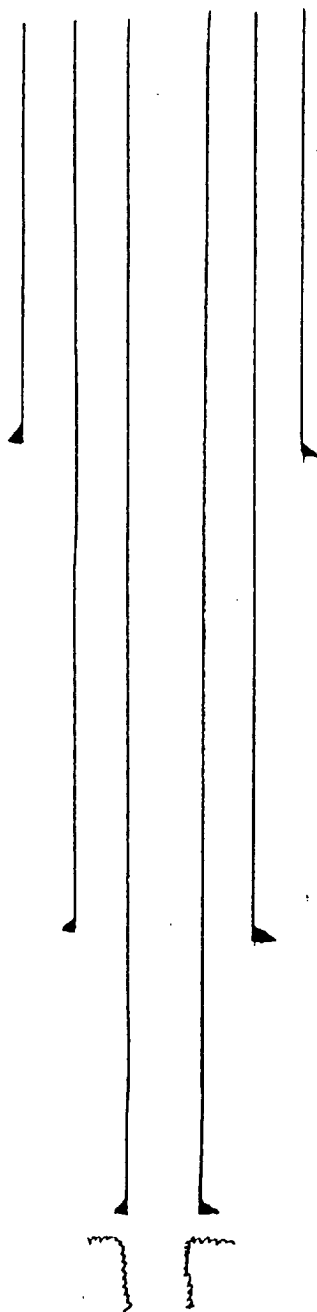

12 1/2", 50# set at 914'  
set with 250 sx

9 OD ", 34# set at 2881'  
set w/500 sx

7 OD ", 34# set at 3399'  
set w/ 150 sx

Open Hole Completion  
TD. 3523'