

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

FORM APPROVED
Budget Bureau No. 1004-0135
Expires: March 31, 1993

RECEIVED
FEB 6 3 34 PM '92

SUNDRY NOTICES AND REPORTS ON WELLS

Use this form for proposals to drill or to deepen or reentry to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals

SUBMIT IN TRIPLICATE

1. Type of Well

☒ Oil Well ☐ Gas Well ☐ Other

2. Name of Operator

CONVEST ENERGY CORPORATION

3. Address and Telephone No.

2401 FOUNTAIN VIEW, Suite 700, HOUSTON, TX 77057

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)

Unit D
660' FWL & 660' FWL, Sec. 35, T24S-R-36-E

5. Lease Designation and Serial No.

NMLCO 3261EA

6. If Indian, Allottee or Tribe Name

7. If Unit or CA, Agreement Designation

8. Well Name and No.

I. B. Cgg A #4

9. API Well No.

20025097030051

10. Field and Pool, or Exploratory Area

JALMAT T-Y-SR

11. County or Parish, State

LEA COUNTY
NEW MEXICO

12. CHECK APPROPRIATE BOX(S) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

- ☒ Notice of Intent
☐ Subsequent Report
☐ Final Abandonment Notice

TYPE OF ACTION

- ☒ Abandonment
☐ Recompletion
☐ Plugging Back
☐ Casing Repair
☐ Altering Casing
☐ Other
☐ Change of Plans
☐ New Construction
☐ Non-Routine Fracturing
☐ Water Shut-Off
☐ Conversion to Injection
☐ Dispose Water

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

- 1) Notify BLM, PRIOR to any work, @ (505) 393-3612
- 2) ME & RU Rig. POOH w/production eqpt, LD ALL except tbg.
- 3) Set CIBP @ 3300'. SPOT 35' cement ON TOP CIBP w/Enter.
- 4) Displace hole w/ 9.0 PPS mud.
- 5) Cut + pull 7" CSS @ 1667'.
- 6) Set cement plug from 1667 to 1567'. TAG PLUG.
- 7) Cut 9 7/8" CSS @ 225' and pull same.
- 8) SPOT cement plug from 225' to surface.
- 9) Cut off CSS's. 4' below ground. WELD ON plate + marker w/I.D. sign.
- 10) BACKfill + RESTORE location

14. I hereby certify that the foregoing is true and correct

Signed

E. J. Zumbach

Title

Agent

Date

2-4-92

(This space for Federal or State office use)

Approved by


Conditions of approval, if any:

Title

Date

2/23/92

Well: I.B. Ogg A #4
Formation: Seven Rivers
TD : 3486 '
Elevation: 3304

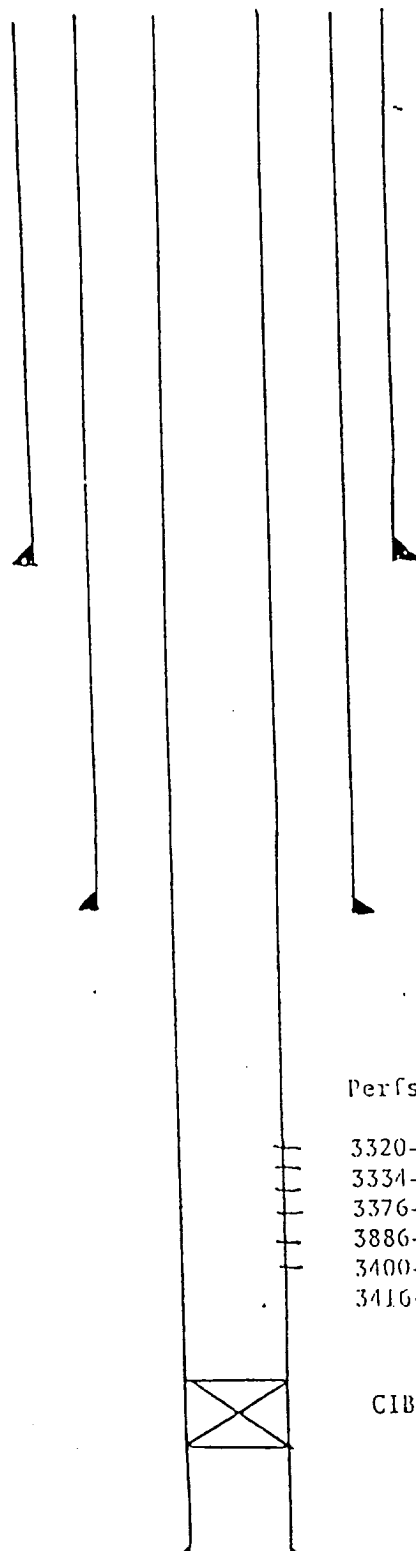

12 $\frac{1}{2}$ " , 50 # set at 175'
w 100 sx

9 5/8 " , 40# set at 1617'
w/1000 sx

Perfs at

3320-24
3334-40
3376-80
3886-90
3400-04
3416-20

CIBP at 3426

7" , 24# set at set at 3453
w/ 200 sx